


41. Door Switch

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the switch assembly - door.
 - (1) Remove the screws, and pull out the switch assembly - door toward you.
 - (2) Disconnect the connector and remove the switch assembly - door.

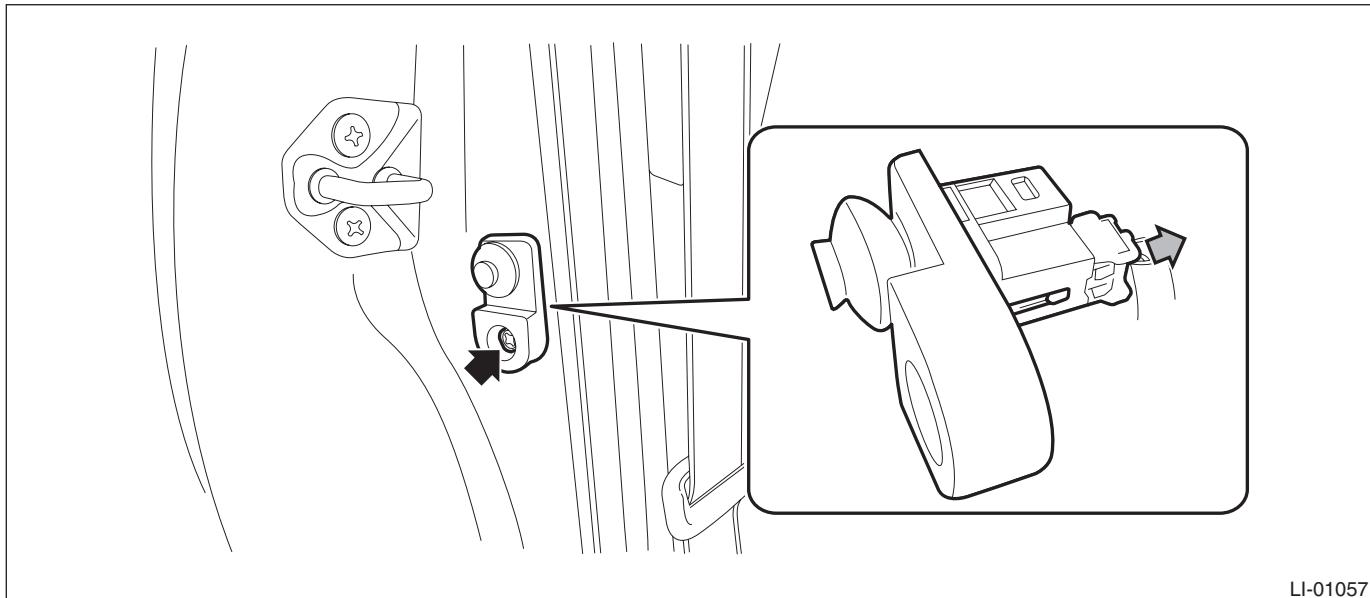

B: INSTALLATION

Install each part in the reverse order of removal.


C: INSPECTION

Unit inspection

Preparation tool:

Circuit tester

- 1) Check the resistance between switch terminals.

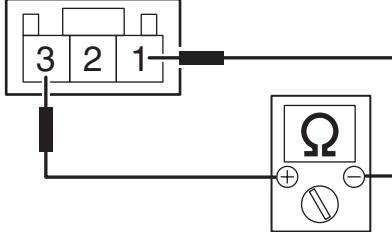Terminal No.	Inspection conditions	Standard	Connection diagram
	When door is opened	Less than 1 Ω	
1 — 3	When door is closed	1 M Ω or more	 <p>LI-01327</p>

- 2) Replace the switch assembly - door if the inspection result is not within the standard value.

WIPER AND WASHER SYSTEMS

WW

	Page
1. General Description	2
2. Relay and Fuse	7
3. Wiper and Washer System	9
4. Combination Switch (Wiper)	10
5. Wiper Blade	17
6. Washer Tank and Motor	21
7. Front Wiper Arm	28
8. Front Wiper Motor and Link	30
9. Front Washer Nozzle	34
10. Rear Wiper Arm	39
11. Rear Wiper Motor	41
12. Rear Washer	45