


## 12. Rear Gate Opener Button

### A: REMOVAL

- 1) Remove the trim panel - rear gate. <Ref. to EI-142, REMOVAL, Rear Gate Trim.>
- 2) Remove the garnish assembly - rear gate. <Ref. to EI-147, REMOVAL, Rear Gate Garnish.>
- 3) Release the locks at both ends of the button - opener rear gate by pushing them with a flat tip screwdriver, and remove the button - opener rear gate.

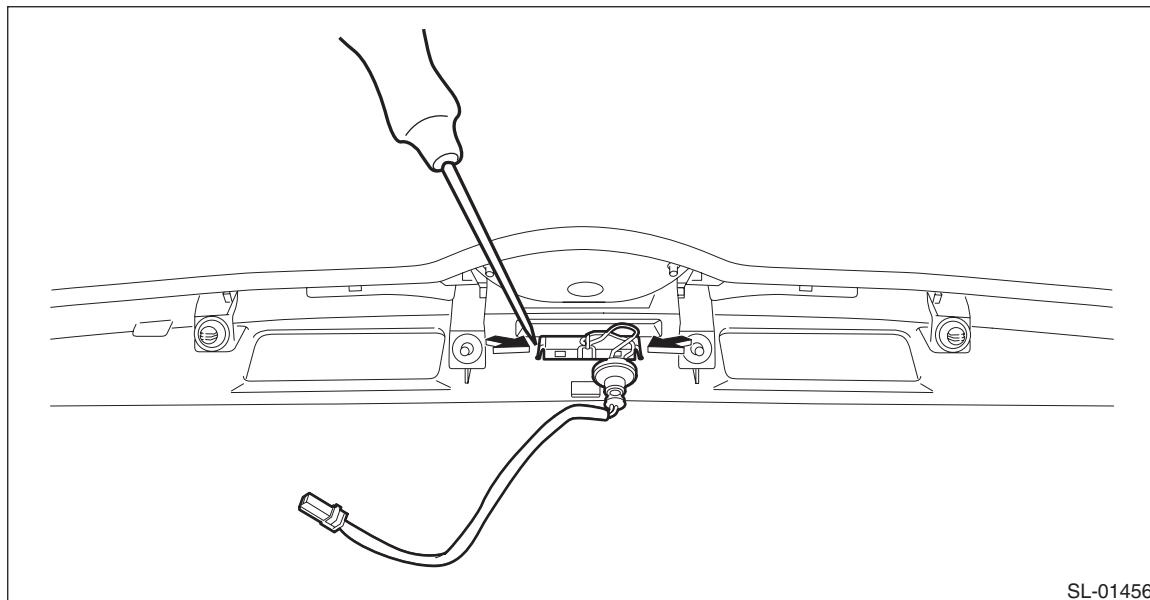

SL-01456

### B: INSTALLATION

#### CAUTION:

**Make sure that the harness grommet is securely installed.**

**If not properly installed, this may cause leaks.**

Install each part in the reverse order of removal.

#### NOTE:

Refer to "INSTALLATION" of "Rear Gate Garnish". <Ref. to EI-149, INSTALLATION, Rear Gate Garnish.>

### C: INSPECTION

#### UNIT INSPECTION

#### PREPARATION TOOL:

**Circuit tester**

- 1) Check the resistance between switch terminals.

Terminal No.	Inspection conditions	Standard	Connection diagram
		OPEN	
1 — 2	CLOSE	1 MΩ or more	

SL-01476

- 2) If the inspection result is not within the standard, replace the button - opener rear gate.