


2. Relay and Fuse

A: LOCATION

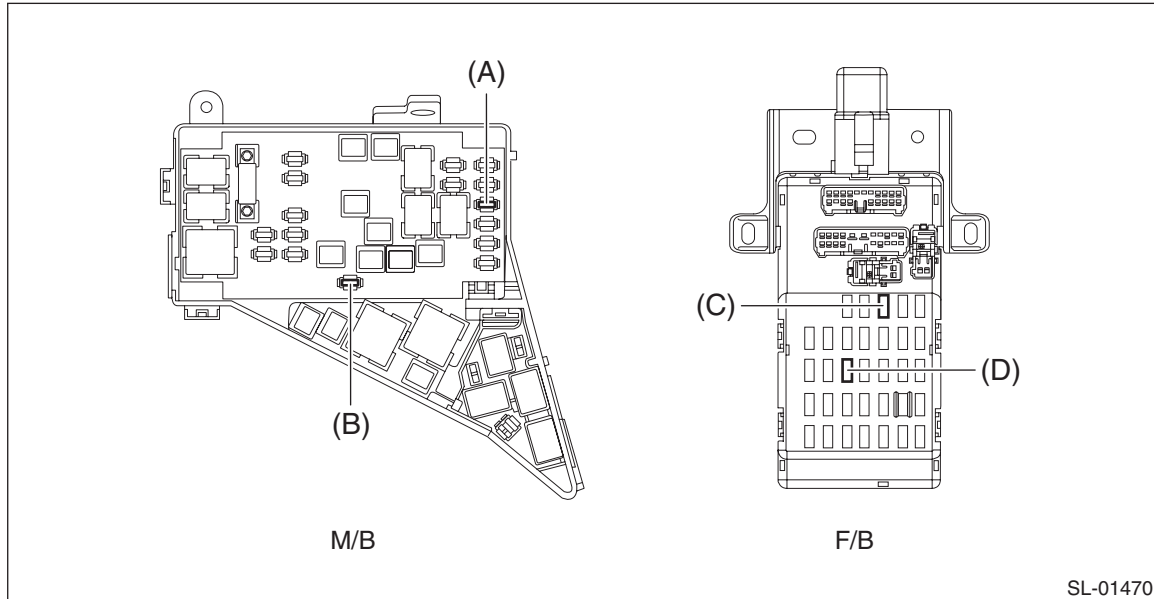

Main fuse box	Fuse 15A (K/L)	(A)
	Fuse 20A (K/L, SEC)	(B)
Relay & fuse box	Fuse 15A (K/L)	(C)
	Fuse 10A (K/L)	(D)

NOTE:

For other related fuses, refer to the wiring diagram. <Ref. to WI-15, Power Supply Circuit.>

B: INSPECTION

1. CHECK FUSE

- 1) Remove the fuse and inspect visually.
- 2) If the fuse is blown out, replace the fuse.

NOTE:

If the fuse is blown again, check the system wiring harness.