


7. Front Outer Handle

A: REMOVAL


- 1) Raise the glass assembly - front door to the top position.
- 2) Remove the trim panel - front door. <Ref. to EI-58, FRONT DOOR, REMOVAL, Door Trim.>
- 3) Remove the sealing cover - front door.

CAUTION:

- **Carefully remove the butyl tape. Excessive force will easily break the sealing cover - front door.**
- **If the sealing cover - front door gets broken, replace it with a new part.**
 - (1) Remove the screw to remove the bracket - door trim front.
 - (2) Disconnect connectors.
 - (3) Carefully remove the butyl tape to remove the sealing cover - front door.

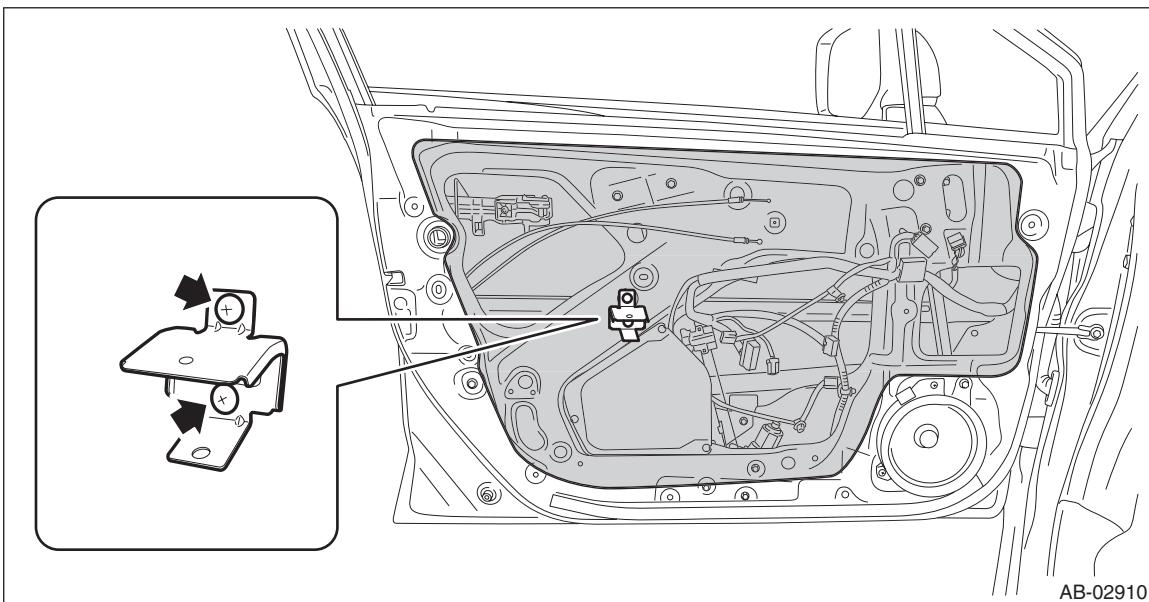

- 4) Remove the holder of the frame assembly - front door outer.

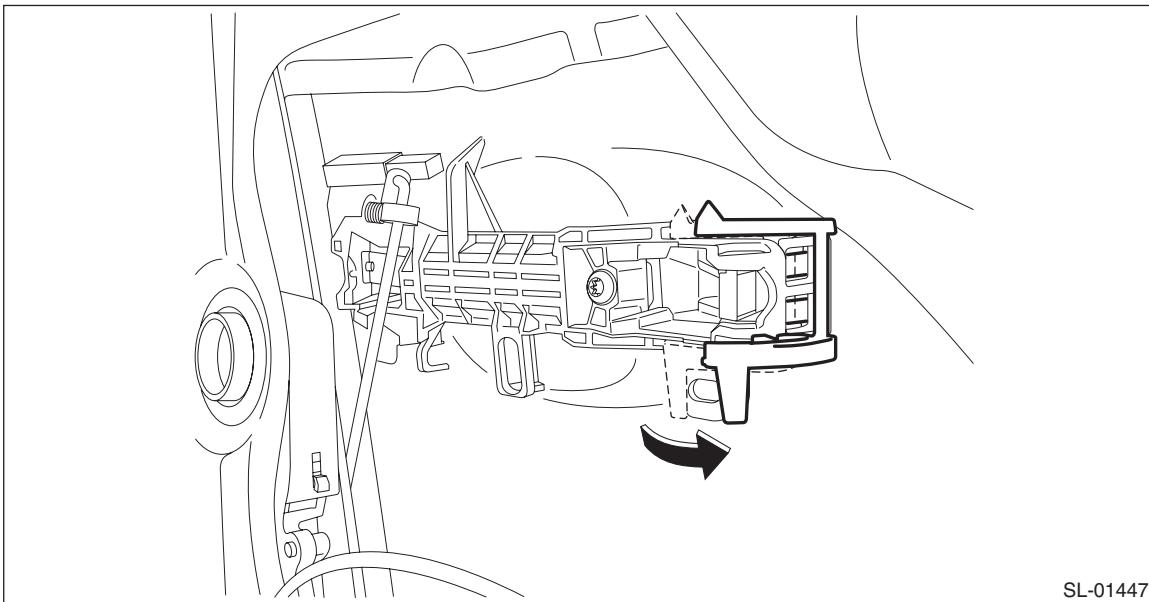

Front Outer Handle


SECURITY AND LOCKS

5) Remove the cover - handle front outer.

PREPARATION TOOL:

TORX® T30


- (1) Remove the plug at the rear end of the panel assembly - front door.
- (2) Loosen the TORX® bolt and remove the cover - handle front outer.

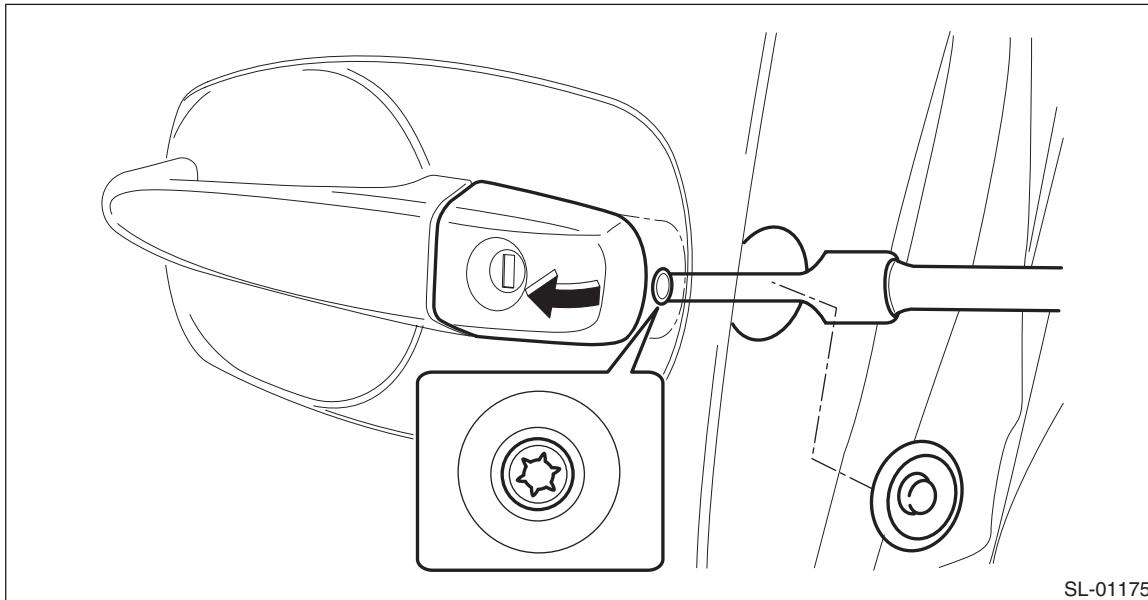

6) Remove the handle - door outer by moving it rearward.

CAUTION:

Do not apply excessive force to remove the handle - door outer from the panel assembly - front door. The panel assembly - front door may be deformed.

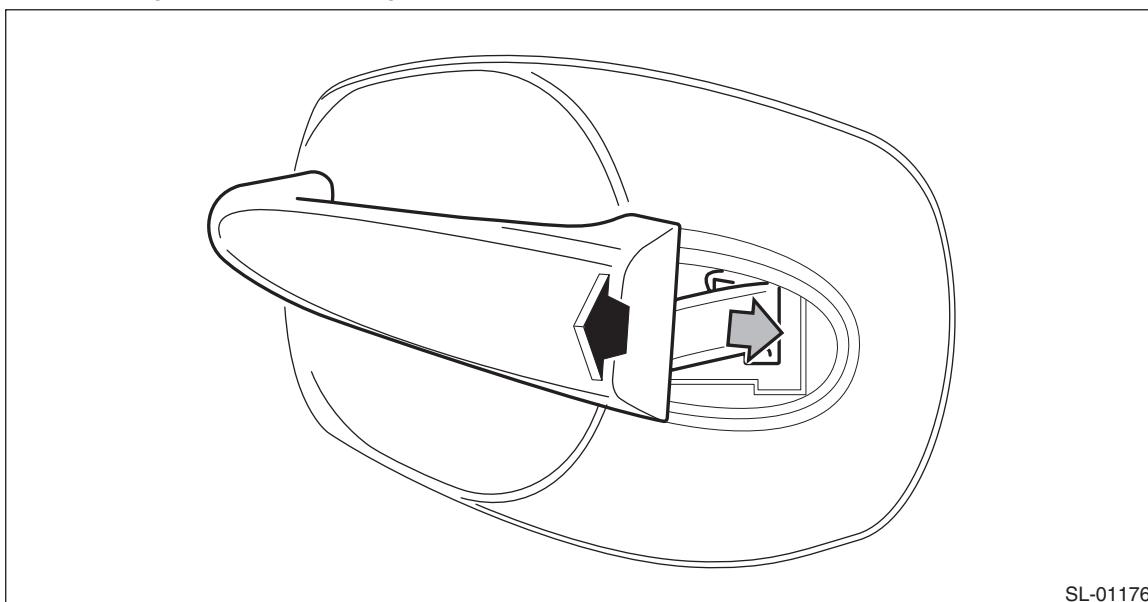


7) Remove the frame assembly - front door outer.

PREPARATION TOOL:


TORX® T30

(1) Remove the spacer - door handle outer.

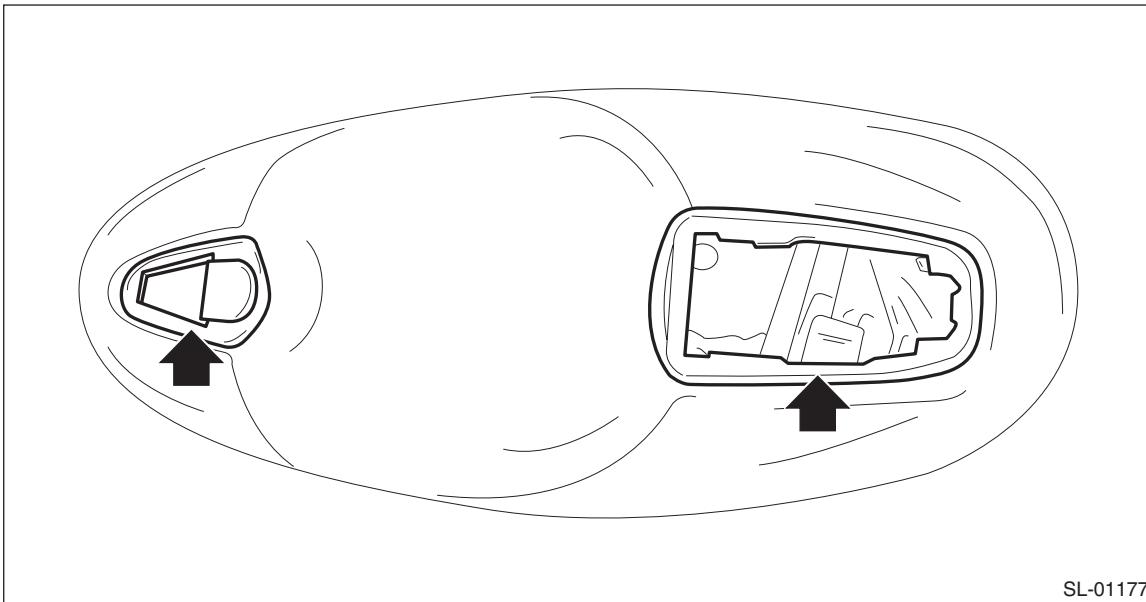

(2) Remove the rod from the rod clamp of the frame assembly - front door outer.

(3) Loosen the TORX® bolt and remove the frame assembly - front door outer from inside the panel assembly - front door.

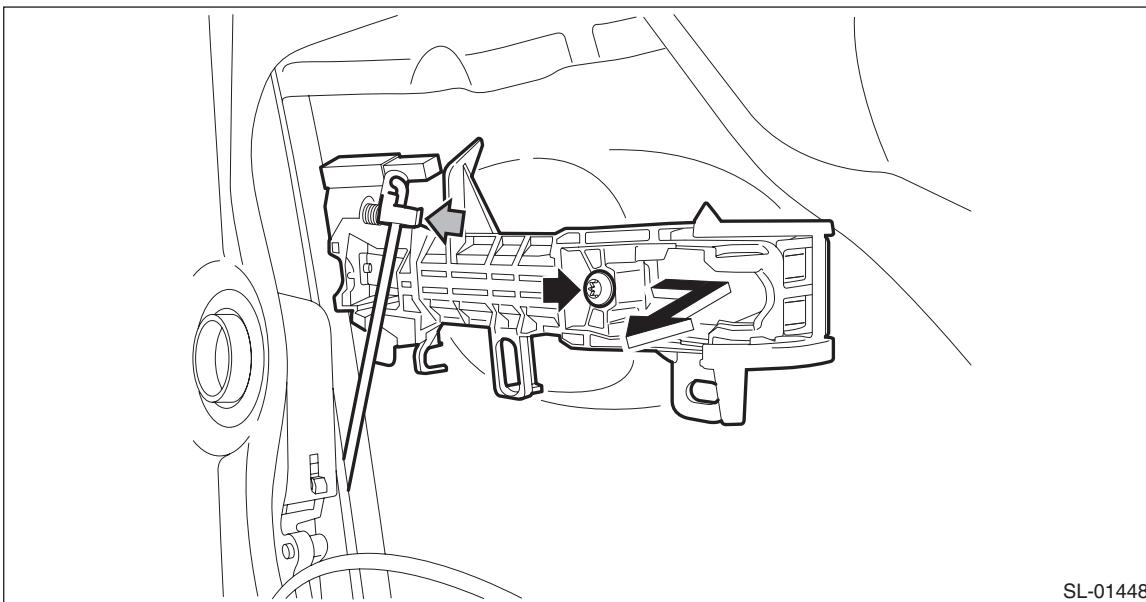

B: INSTALLATION

1) Before installation, check the following items.

- Rod is free from deformation.
- Grease is applied sufficiently to rod joints.

If grease is insufficient, add it as necessary before assembling the rod.

2) Install each part in the reverse order of removal.

Tightening torque:

Refer to “COMPONENT” of “General Description”. <Ref. to SL-2, DOOR LOCK ASSEMBLY, COMPONENT, General Description.>

C: INSPECTION

Check if the outer handle operates normally.

- If the lever is faulty, replace the handle - door outer.
- If the rod is deformed, replace the latch & actuator assembly - front.