

Sunshade

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

8. Sunshade

A: REMOVAL


- 1) Remove the lid assembly - sunroof.
 - (1) Completely close the lid assembly - sunroof, and open the sunshade assembly.
 - (2) Remove the TORX[®] bolt, and then remove the lid assembly - sunroof.

CAUTION:

Be careful not to damage the lid assembly - sunroof.

PREPARATION TOOL:

TORX[®] T25

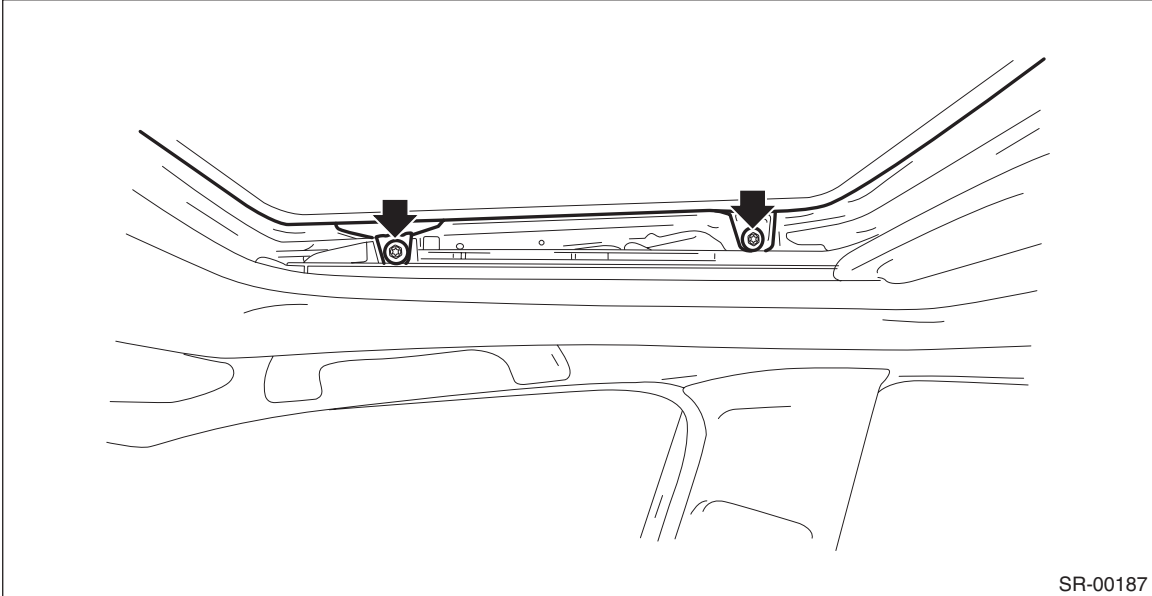

SR-00187

- 2) Remove the trim panel - roof assembly. <Ref. to EI-116, REMOVAL, Roof Trim.>

Sunshade

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

3) Remove the sunshade assembly.


(1) Attach protective tape (a) on the handle of sunshade assembly.

(2) Remove the left and right stoppers (b).

(3) Remove the sunshade assembly while pulling the center of the brace downward.

CAUTION:

Be careful not to damage the sunshade assembly.

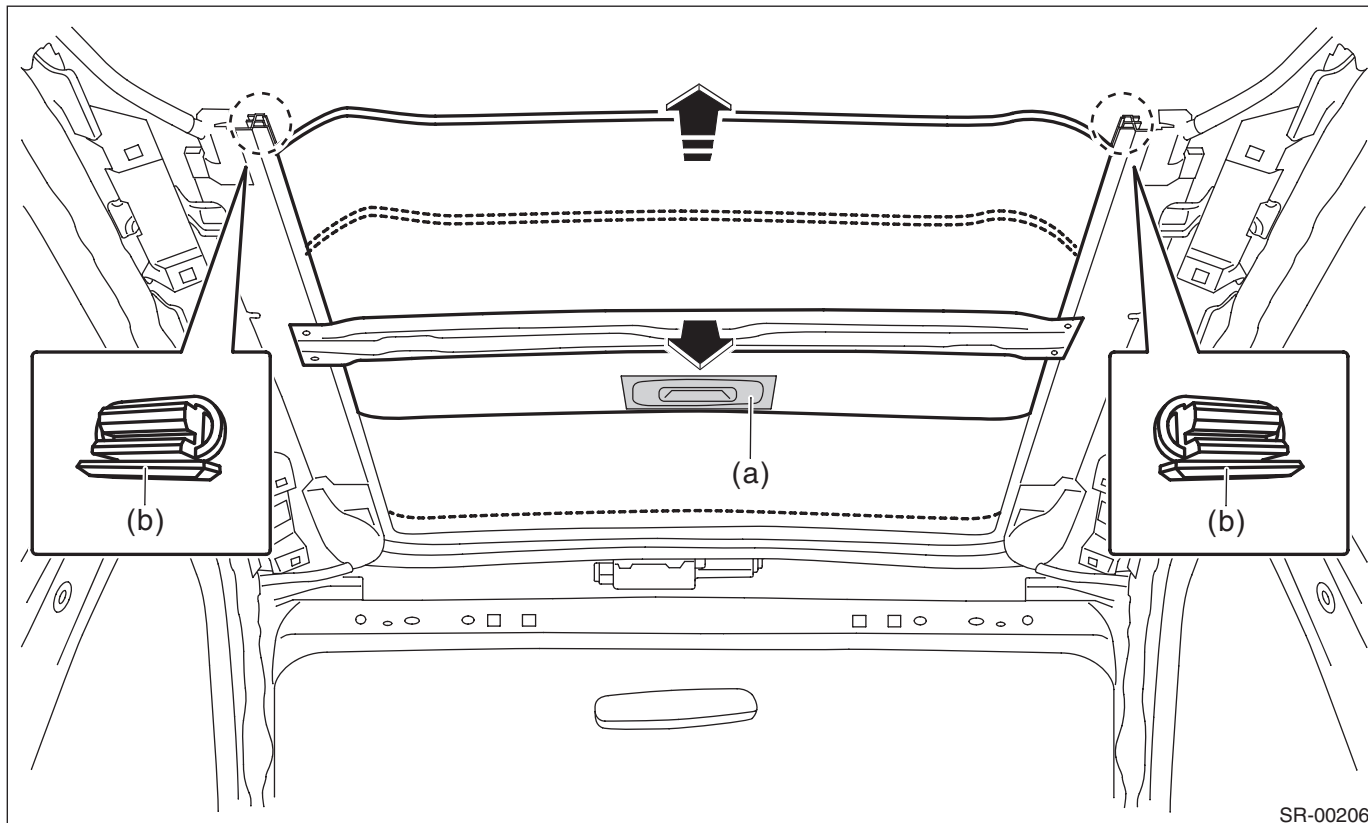

B: INSTALLATION

Install each part in the reverse order of removal.

Tightening torque:

Refer to “COMPONENT” of “General Description”. <Ref. to SR-2, COMPONENT, General Description.>

Sunshade

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)


C: INSPECTION

1. MOVING LOAD OF SUNSHADE ASSEMBLY

- 1) Attach a spring scale together with a cloth to the edge of sunshade assembly.
- 2) Pull the spring scale to check the moving load of the sunshade assembly.

Moving load of sunshade assembly:

14 ± 6 N (1.43 kgf, 3.1 lbf ± 0.61 kgf, 1.3 lbf)

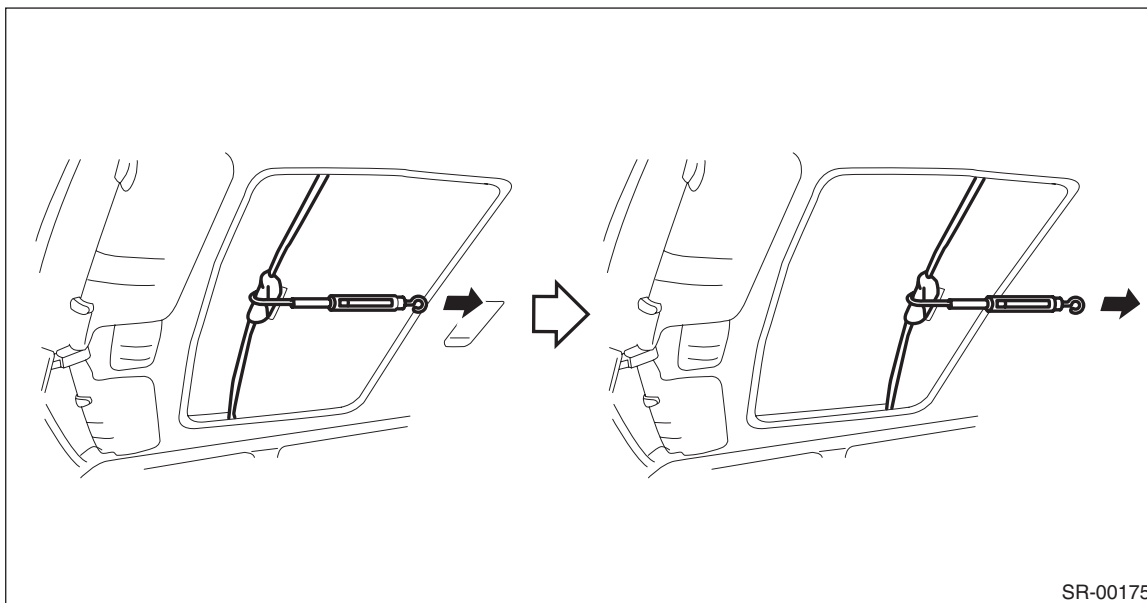

SR-00175

NOTE:

Moving load is larger at the beginning of pulling a spring scale, so take a spring scale reading while the sunshade assembly is sliding smoothly.

- 3) If the inspection result exceeds the standard, check the sunshade assembly or the rail assembly - sunroof for improper installation, and replace if necessary.

EXTERIOR/INTERIOR TRIM

The logo consists of the letters 'E' and 'I' in a bold, italicized, sans-serif font. The 'E' is positioned to the left of the 'I', and they are both slanted to the right. The 'I' has a thick vertical stroke and a horizontal crossbar.

	Page
1. General Description	2
2. Front Under Cover	25
3. Mud Guard	26
4. Fuel Tank Protector	27
5. Front Grille	28
6. Front Bumper	31
7. Rear Bumper	42
8. Cowl Panel	50
9. Side Sill Spoiler	53
10. Roof Molding	54
11. Roof Rail	57
12. Door Trim	58
13. Instrument Panel Lower Cover	62
14. Glove Box	63
15. Center Console	65
16. Console Box	67
17. Instrument Panel Assembly	70
18. Lower Inner Trim	90
19. Upper Inner Trim	95
20. Rear Quarter Trim	100
21. Rear Shelf Trim	107
22. Trunk Room Trim	112
23. Sun Visor	114
24. Assist Grip	115
25. Roof Trim	116
26. Rear Gate Trim	142
27. Floor Mat	144
28. Trunk Lid Garnish	146
29. Rear Gate Garnish	147
30. Heat Shield Cover	150
31. Ornament	151