

Read Diagnostic Trouble Code (DTC)

POWER ASSISTED SYSTEM (POWER STEERING) (DIAGNOSTICS)

7. Read Diagnostic Trouble Code (DTC)

A: OPERATION

- 1) On «Main Menu» display, select {Each System Check}.
- 2) On «System Selection Menu» display, select {Power Steering}.
- 3) On «Power Steering Diagnosis» display, select {Diagnostic Code(s) Display}.
- 4) Record the DTC and data.

NOTE:

- For detailed operation procedures, refer to “PC application help for Subaru Select Monitor”.
- For details concerning the DTC, refer to “List of Diagnostic Trouble Code (DTC)”. <Ref. to PS(diag)-23, List of Diagnostic Trouble Code (DTC).>