

General Description

POWER ASSISTED SYSTEM (POWER STEERING)

1. General Description

A: SPECIFICATION

Whole system	Minimum turning radius		m (ft)	5.3 (17.39)
	Steering angle		Inner wheel	38.3°±1.5°
			Outer wheel	33.7°±1.5°
	Steering wheel diameter		mm (in)	375 (14.76)
Gearbox	Lock-to-lock revolution number			3.2
	Type	Rack & pinion type		
Motor (Temperature 20°C (68°F))	Backlash	0 (Automatic adjusting)		
	Rated voltage	V		12
	Rated torque	N·m (kgf-m, ft-lb)		4.5 (0.46, 3.31)
	Rated revolution speed	rpm		1,140
	Rated current	A		85
Rated output		W		561


Steering wheel	Free play	mm (in)	17 (0.67) or less
Steering shaft	Clearance between the steering wheel and column cover	mm (in)	4 — 6 (0.16 — 0.24)
Steering gearbox (Power steering system)	Sliding resistance	N (kgf, lbf)	350 (36, 79) or less Difference between right and left sliding resistance: 20% or less
	Rack shaft play in the radial direction	Right-turn steering	Horizontal play: 0.6 (0.024) or less Vertical play: 0.4 (0.016) or less
		Left-turn steering	0.4 (0.016) or less
	Input shaft play	In radial direction	0.18 (0.0071) or less
		In axial direction	0.27 (0.0106) or less
	Rotation resistance	N (kgf, lbf)	Maximum allowable value: 18.3 (1.9, 4.1) or less Difference between right and left sliding resistance: 20% or less
Steering wheel effort (Power steering system)	At standstill with engine idling on paved road	N (kgf, lbf)	29.4 (3.0, 6.6) or less
	At standstill with engine stalled on paved road	N (kgf, lbf)	294.2 (30, 66.2) or less

General Description

POWER ASSISTED SYSTEM (POWER STEERING)

B: COMPONENT

1. STEERING WHEEL AND COLUMN

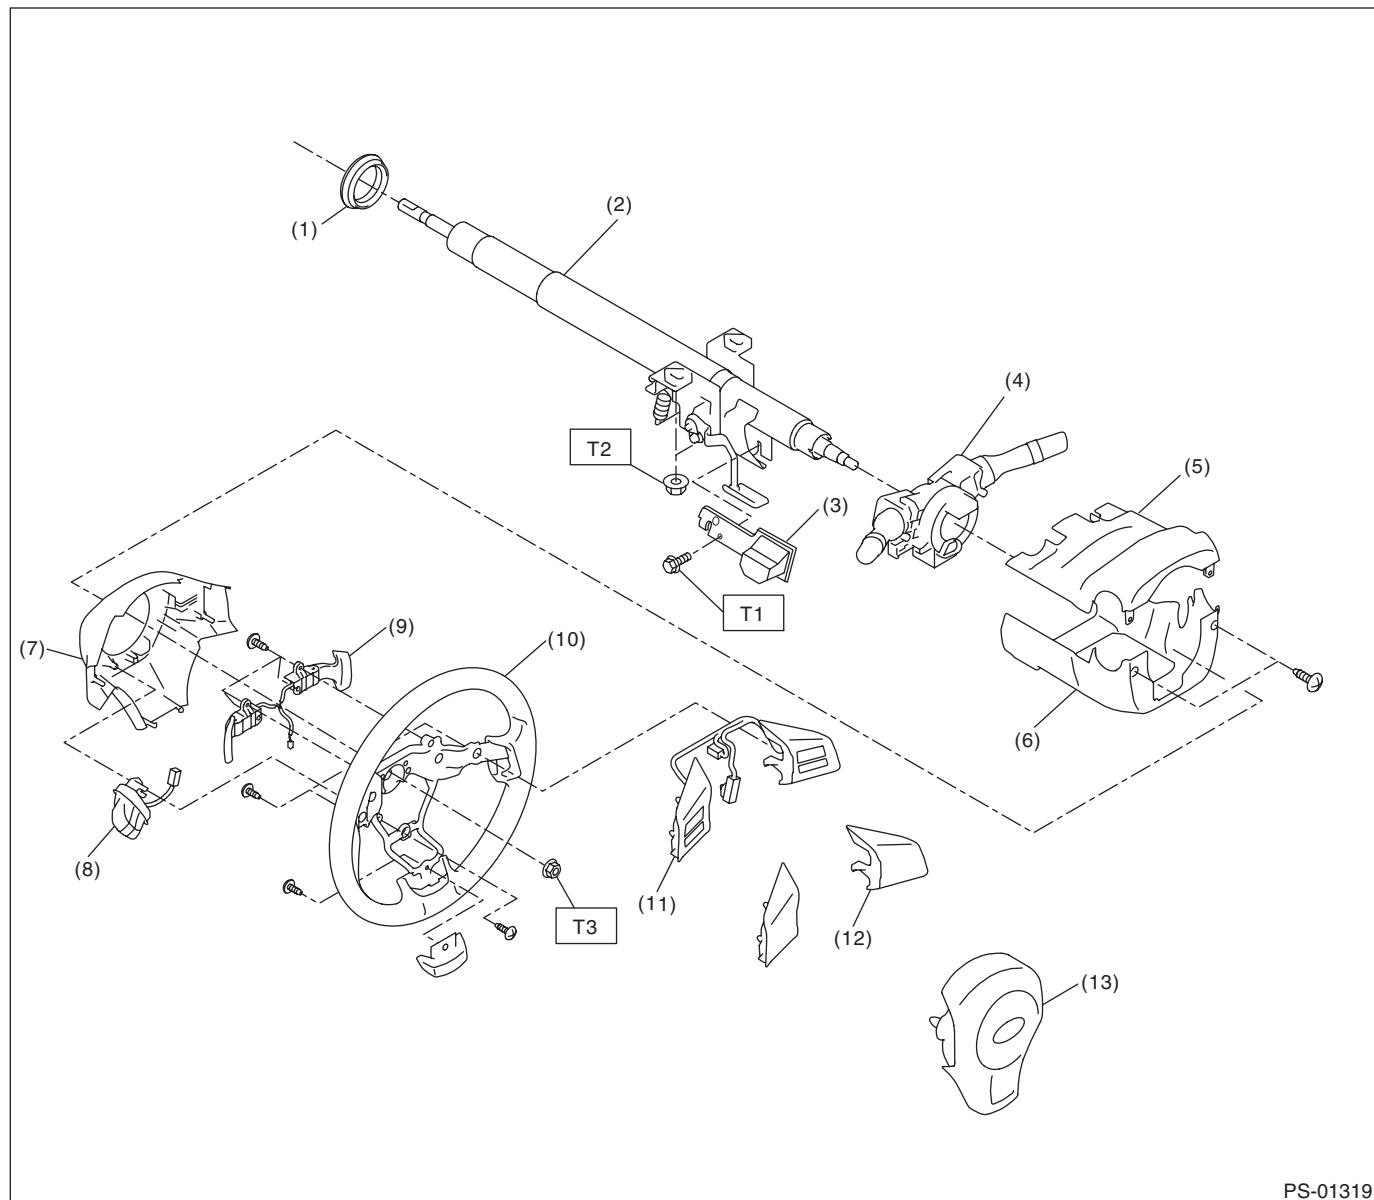

PS-01319

(1) Bushing	(8) Satellite switch
(2) Column ASSY - steering	(9) Paddle shift
(3) Dynamic damper	(10) Steering wheel
(4) Switch ASSY - combination	(11) Switch
(5) Cover ASSY - column UPR	(12) Cover - switch
(6) Cover ASSY - column LWR	(13) Airbag module
(7) Cover - steering wheel LWR	

Tightening torque: N·m (kgf·m, ft-lb)

T1: 7.5 (0.76, 5.5)


T2: 20 (2.04, 14.8)

T3: 39 (3.98, 28.8)

General Description

POWER ASSISTED SYSTEM (POWER STEERING)

2. STEERING GEARBOX

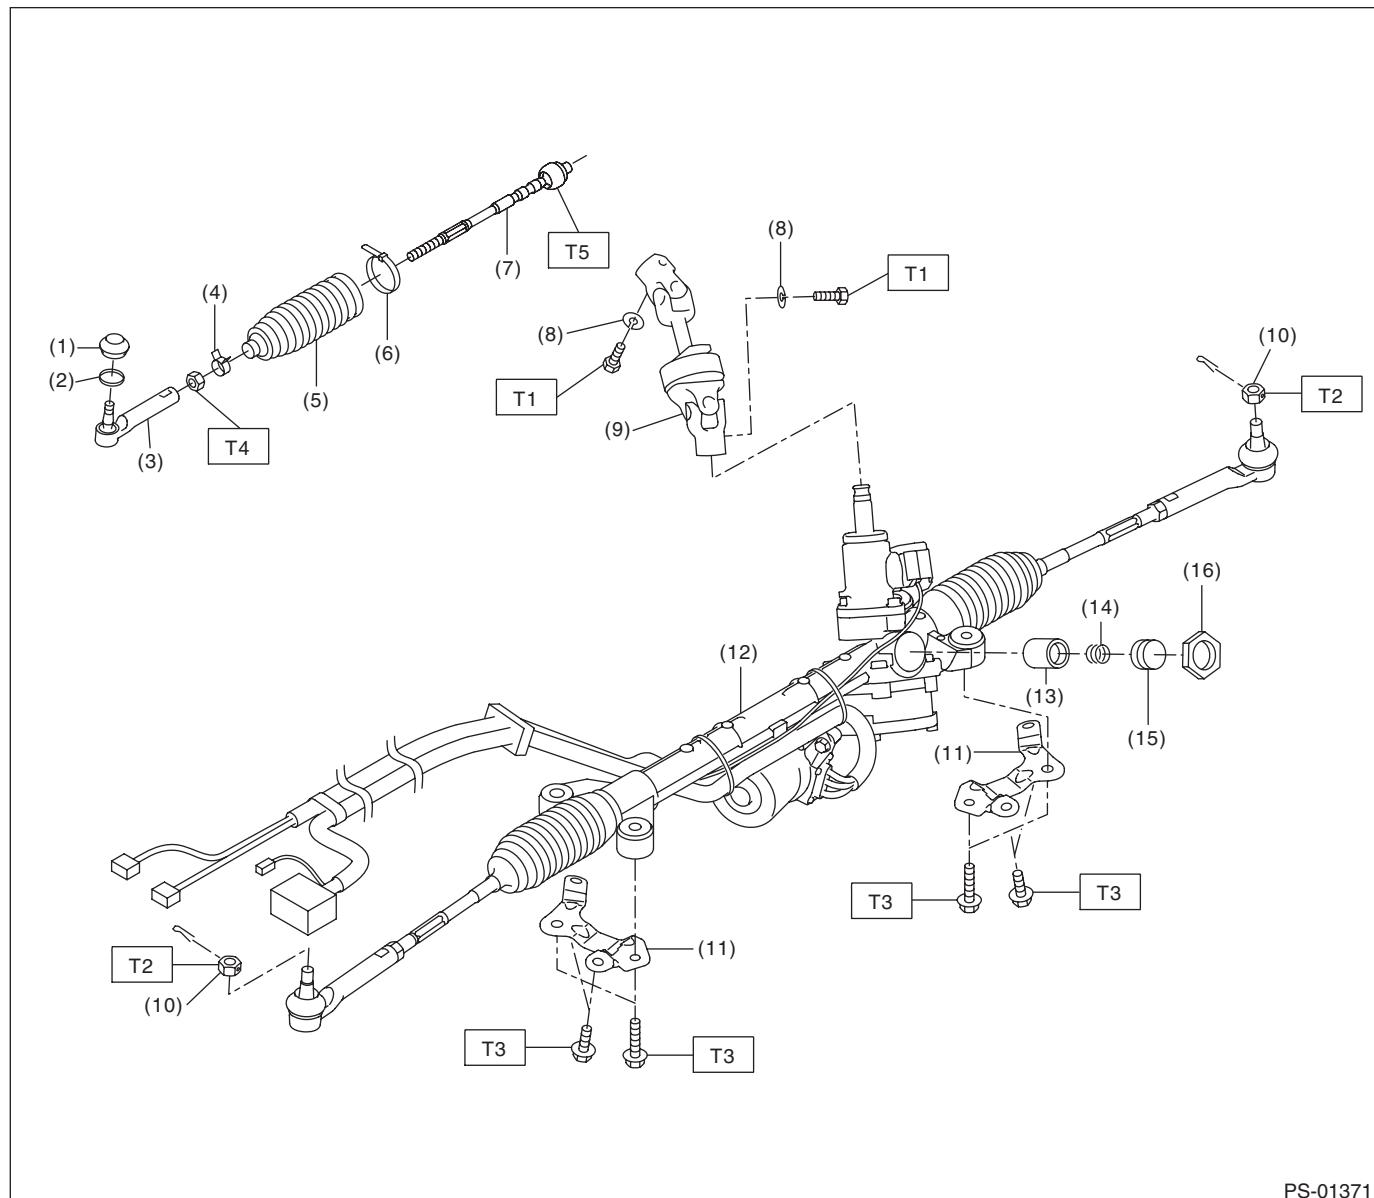

PS-01371

(1) Dust seal	(9) Universal joint ASSY - steering
(2) Clip - boot tie-rod end B	(10) Castle nut
(3) Tie-rod end	(11) Stiffener
(4) Clip - boot tie-rod end A	(12) Steering gearbox ASSY
(5) Boot - steering gearbox	(13) Pad - pressure
(6) Band - boot	(14) Spring - gearbox
(7) Tie-rod	(15) Adjusting screw
(8) Spring washer	(16) Lock nut

Tightening torque:N·m (kgf·m, ft·lb)

T1: 24 (2.45, 17.7)

T2: 27 (2.75, 19.9)

T3: 60 (6.12, 44.3)


T4: 85 (8.67, 62.7)

T5: 90 (9.18, 66.4)

General Description

POWER ASSISTED SYSTEM (POWER STEERING)

3. ELECTRIC POWER STEERING CONTROL MODULE

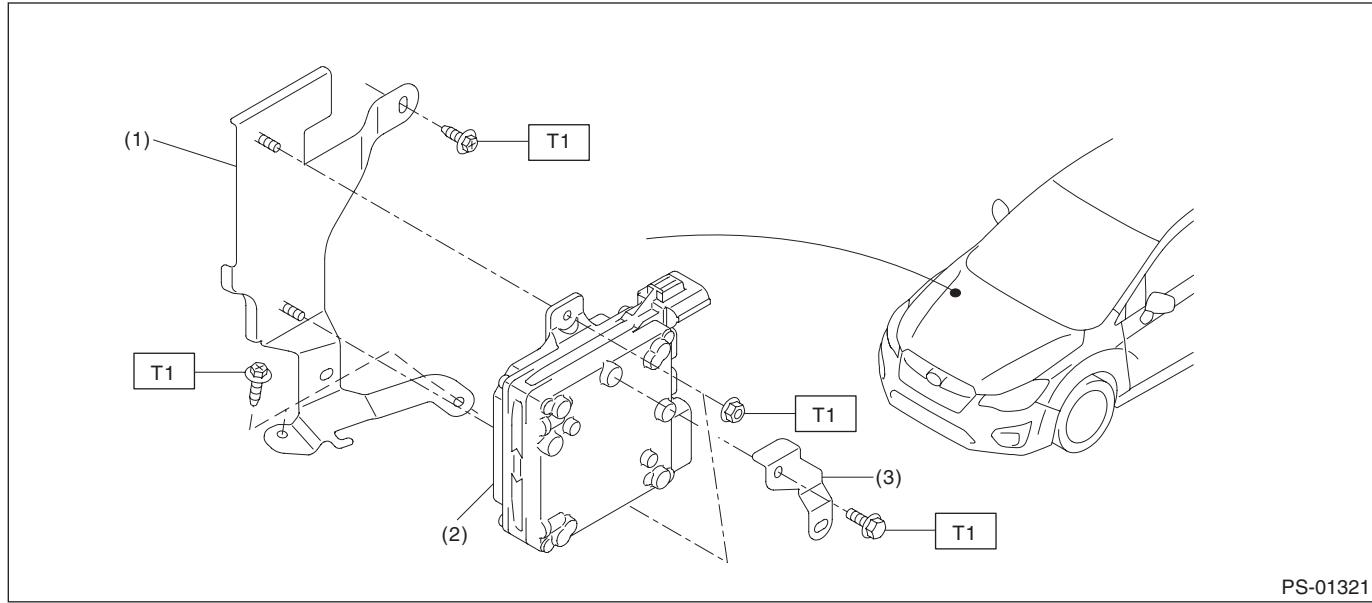

(1) Bracket - control module
(2) Power steering control module

(3) Harness bracket

Tightening torque:N·m (kgf·m, ft·lb)
T: 7.5 (0.76, 5.5)

General Description


POWER ASSISTED SYSTEM (POWER STEERING)

C: CAUTION

- Wear appropriate work clothing, including a helmet, protective goggles and protective shoes when performing any work.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.
- Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts.
- Use grease and oil of Subaru genuine or the equivalent products. Do not mix them of different grades or manufacturers.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or rigid racks at the specified points.
- Before securing a part on a vise, place cushioning material such as wooden blocks, aluminum plate or cloth between the part and the vise.

D: PREPARATION TOOL

1. SPECIAL TOOL

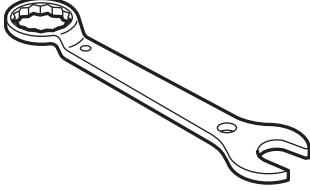ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST34099PA100	34099PA100	SPANNER	Used when measuring the rotating resistance of gearbox assembly.

2. GENERAL TOOL

TOOL NAME	REMARKS
Steering wheel puller	Used for removing the steering wheel.