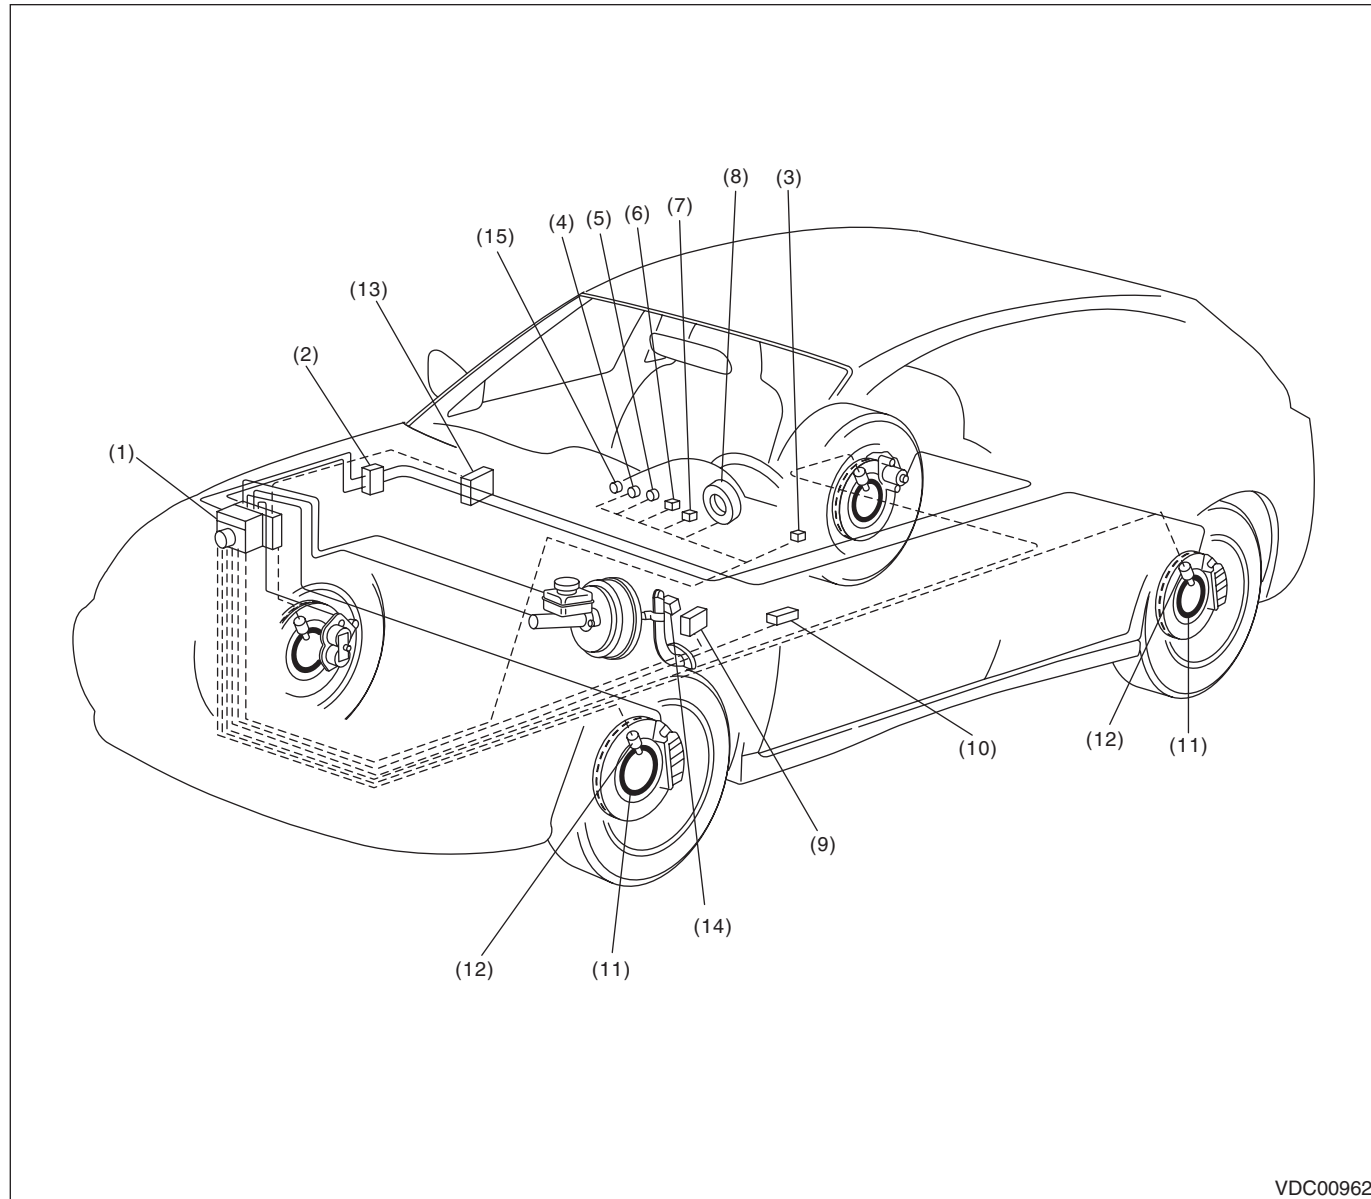


Electrical Component Location

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

4. Electrical Component Location

A: LOCATION

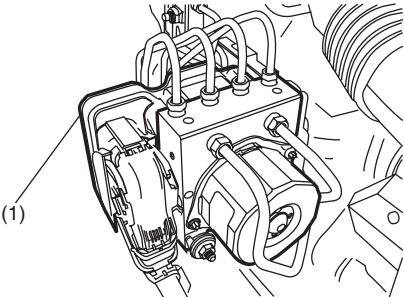
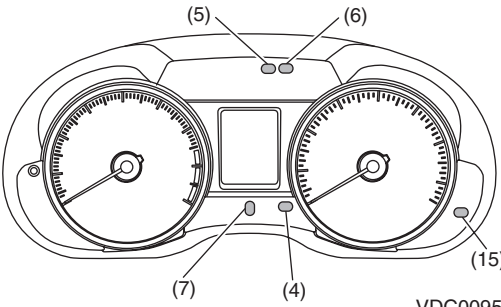
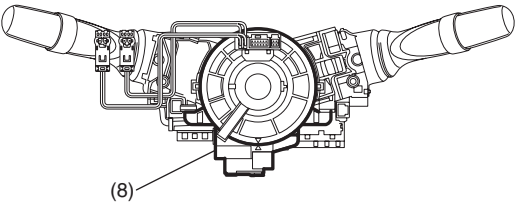
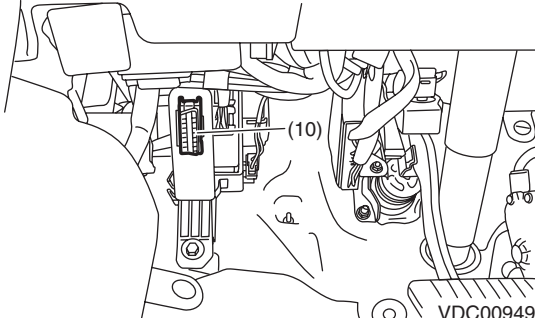
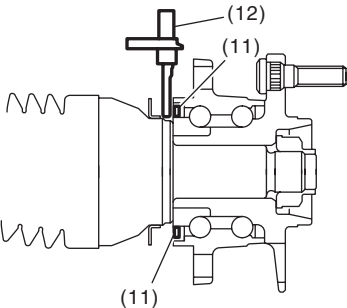


VDC00962

- | | | |
|---|---|---|
| (1) VDC control module and hydraulic control unit (VDCCM&H/U) | (6) VDC warning light & VDC indicator light | (11) Magnetic encoder |
| (2) Connector | (7) VDC OFF indicator light | (12) ABS wheel speed sensor |
| (3) VDC OFF switch | (8) Steering angle sensor | (13) Engine control module (ECM) |
| (4) ABS warning light | (9) Transmission control module (TCM) | (14) Stop light switch |
| (5) Brake warning light (EBD warning light) | (10) Data link connector | (15) Hill start assist warning light (MT model) |

Electrical Component Location

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

 (1) VDC00948	 (5) (6) (7) (4) (15) VDC00950
 (8) VDC00952	 (10) VDC00949
 (12) (11) (11) VDC00741	 SUBARU.