



## 9. Radiator Sub Fan and Fan Motor

### A: REMOVAL

- 1) Disconnect the ground cable from battery.

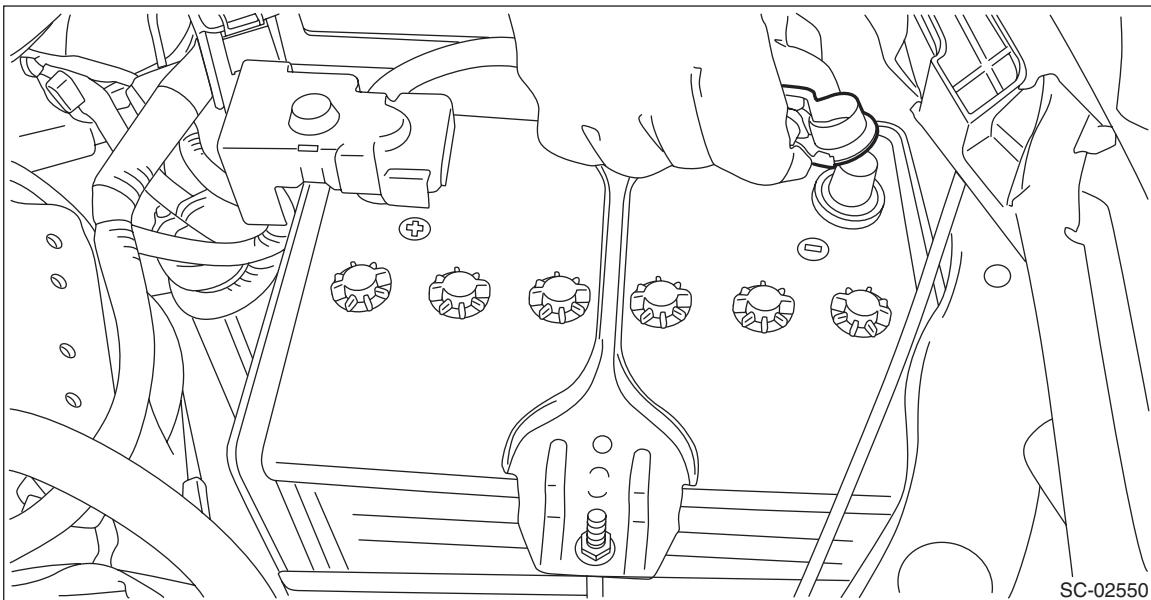


- 2) Remove the air intake duct. <Ref. to IN(H4DO)-13, REMOVAL, Air Intake Duct.>
- 3) Disconnect the connector from the sub fan motor assembly.

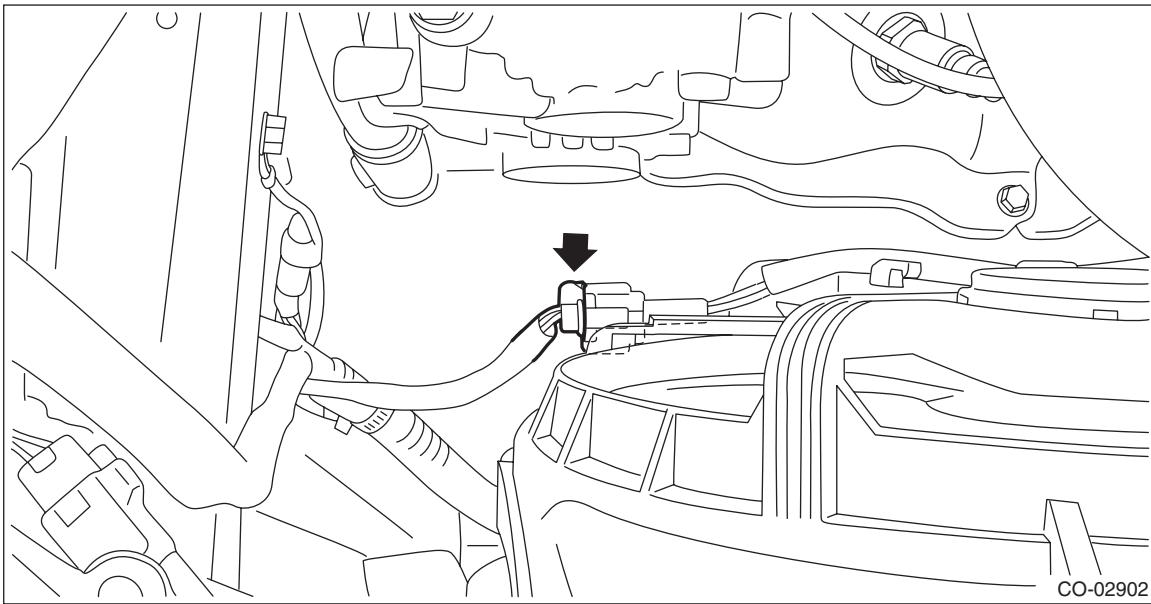

## Radiator Sub Fan and Fan Motor

### COOLING

- 4) Remove the bolts which hold the radiator sub fan shroud onto the radiator.

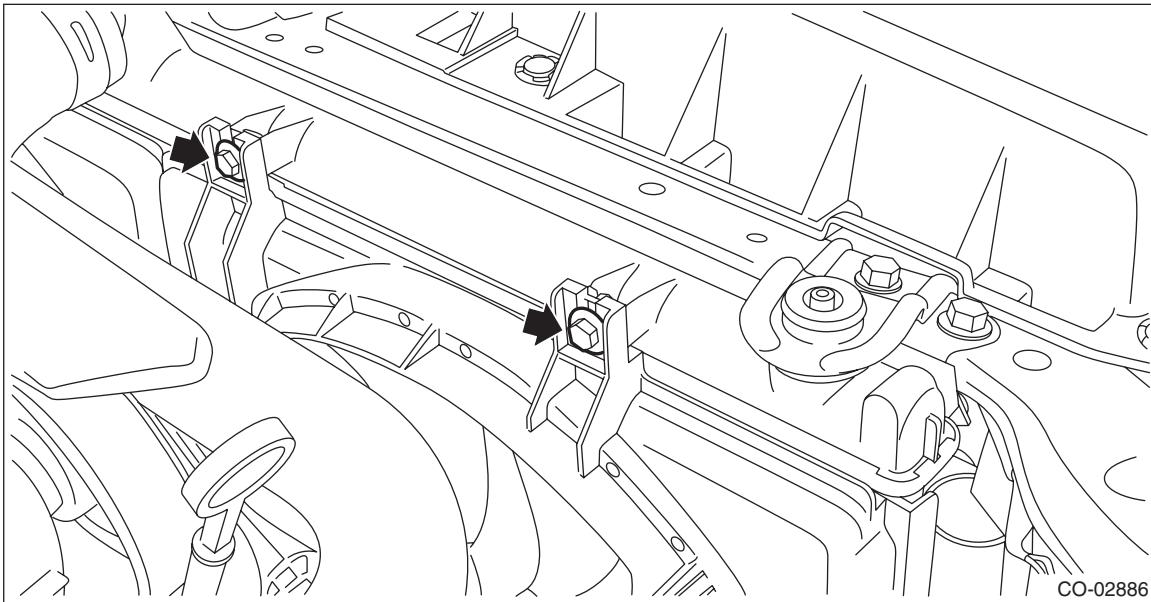

- 5) Remove the radiator sub fan and fan motor from vehicle.

## B: INSTALLATION

### CAUTION:

**Confirm that the radiator hose is securely connected.**


Install in the reverse order of removal.

***Tightening torque:***


***7.5 N·m (0.8 kgf-m, 5.5 ft-lb)***

## C: DISASSEMBLY

- 1) Remove the clip which holds the sub fan motor connector onto the radiator sub fan shroud.
- 2) Disconnect the radiator sub fan from the sub fan motor.

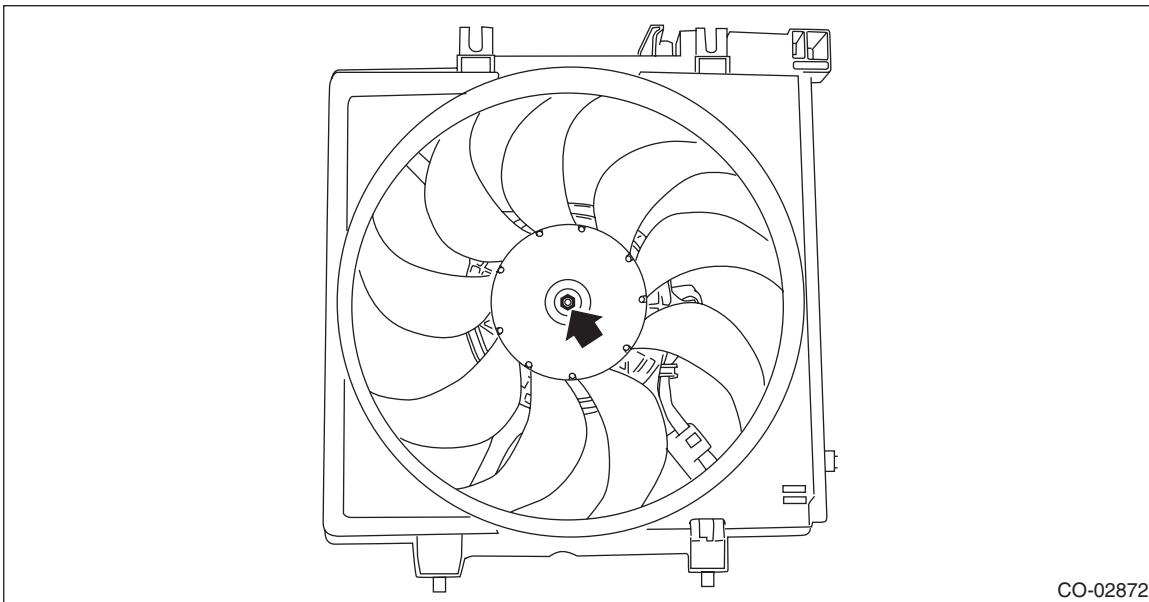

- 3) Disconnect the sub fan motor from the radiator sub fan shroud.

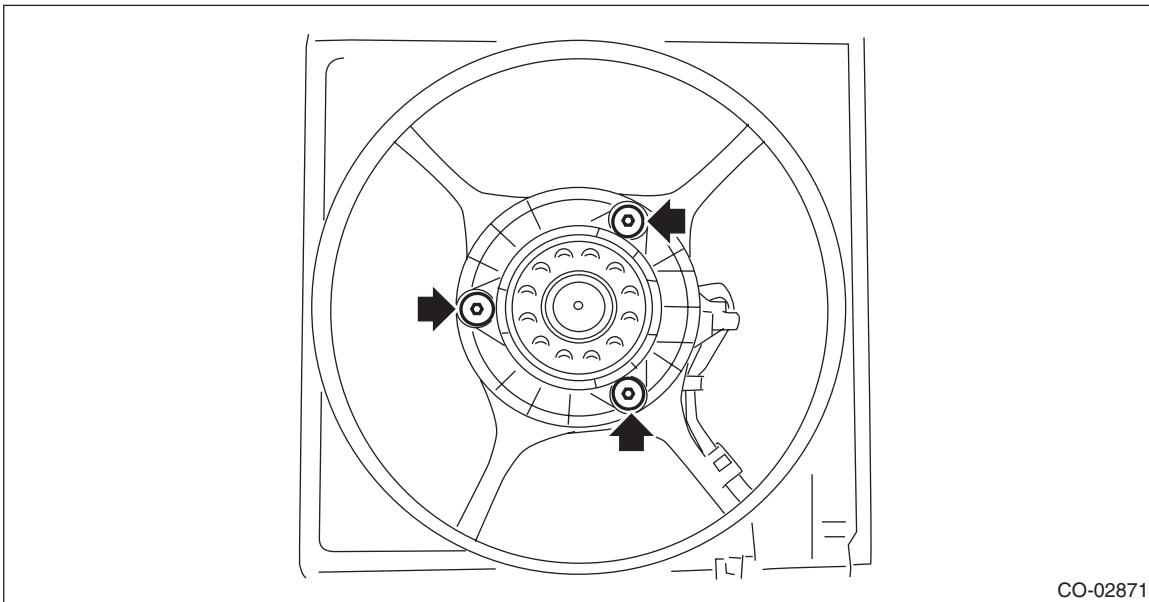

# Radiator Sub Fan and Fan Motor


## COOLING

### D: ASSEMBLY

Assemble in the reverse order of disassembly.

**Tightening torque:**


4.41 N·m (0.45 kgf-m, 3.25 ft-lb)

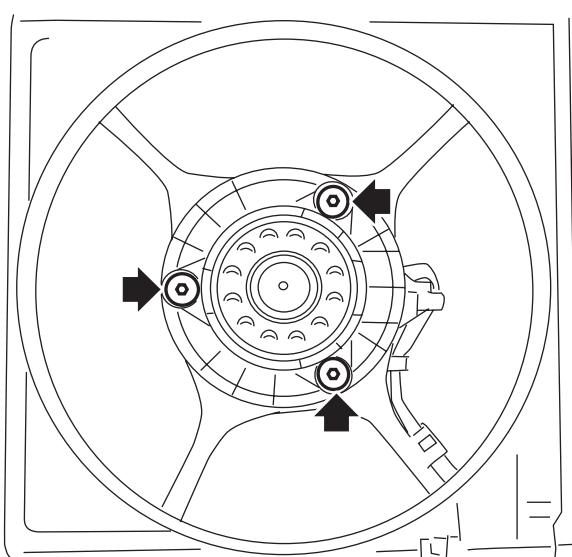

CO-02871

**Tightening torque:**

3.4 N·m (0.3 kgf-m, 2.5 ft-lb)

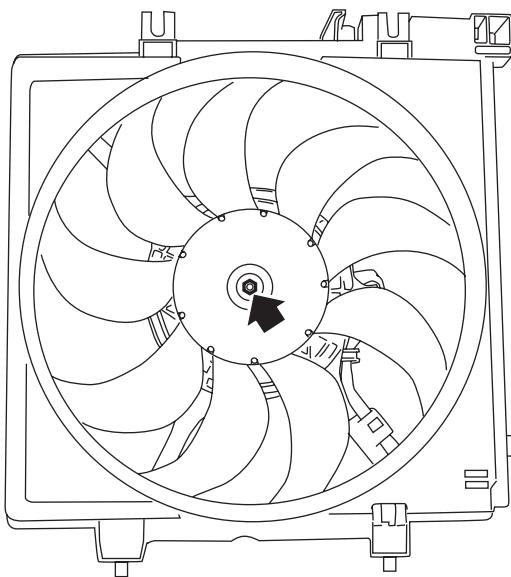

CO-02872

### E: INSPECTION

Check that the radiator sub fan, radiator sub fan shroud and sub fan motor assembly do not have deformation, cracks or damage.