

PCV Valve

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)


14. PCV Valve

A: REMOVAL


CAUTION:

Do not remove unless the PCV valve is broken.

- 1) Disconnect the vacuum hose from the intake manifold and the PCV valve.

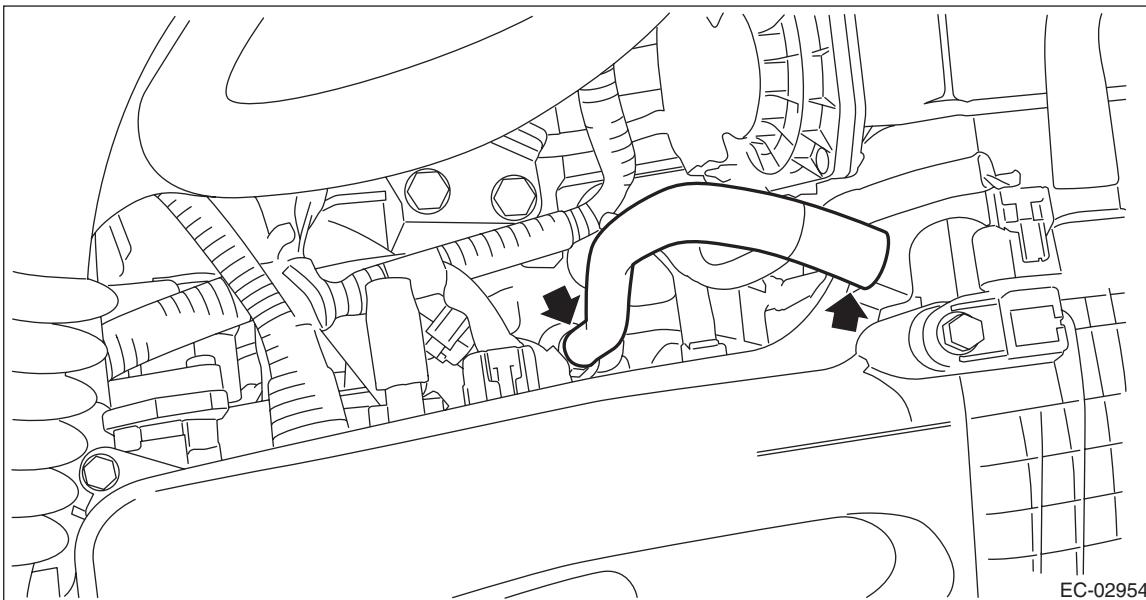

- 2) Remove the PCV valve from the cylinder block RH.

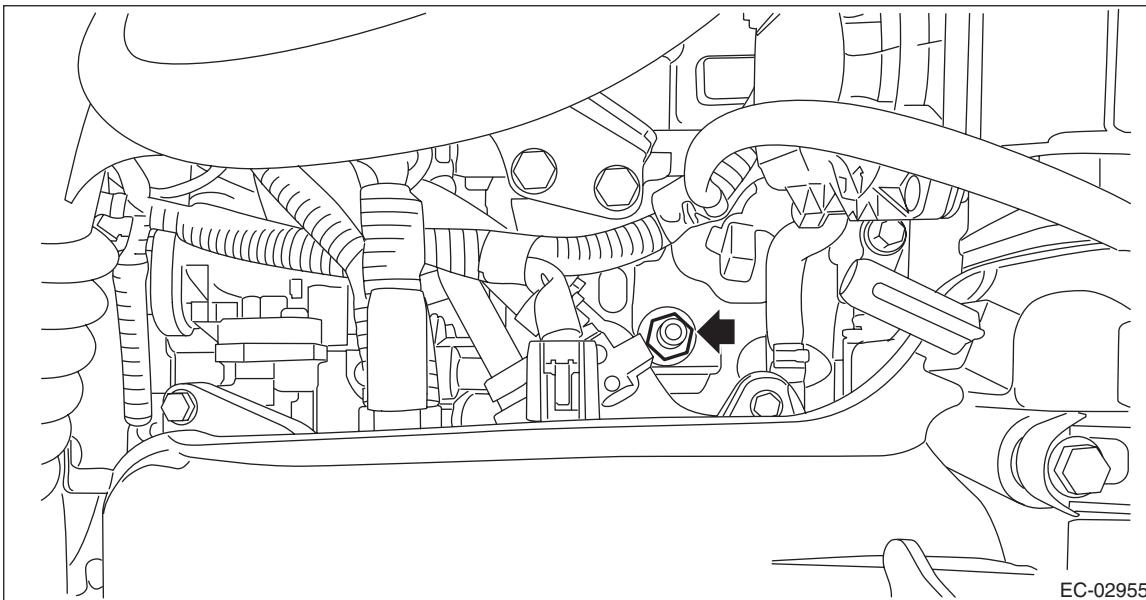

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Apply liquid gasket to the bolt threads of PCV valve.

Liquid gasket:

THREE BOND 1324 (Part No. 004403042) or equivalent

Tightening torque:

23 N·m (2.3 kgf·m, 17.0 ft-lb)


PCV Valve

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

C: INSPECTION


1. PCV VALVE

- 1) Check that the PCV valve has no deformation, cracks or other damages.
- 2) Check that air is discharged from (B) when air is blown into (A).

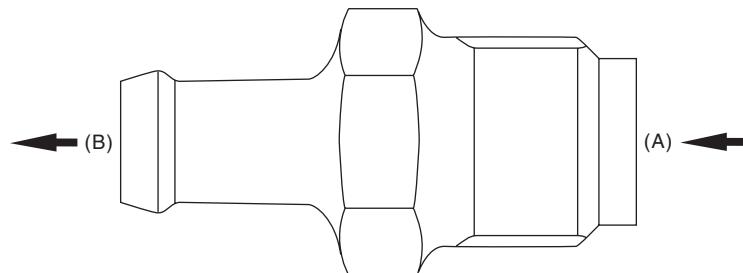

EC-02816

- 3) Check that air does not come out from (B) when air is blown into (A).

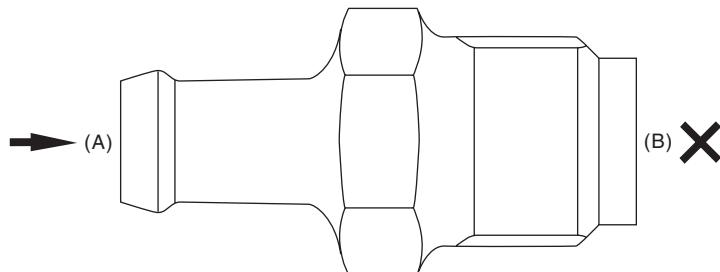

EC-02817

2. OTHER INSPECTIONS

Check the vacuum hose for cracks, damage or looseness.

PCV Valve

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

INTAKE (INDUCTION)

IN(H4DO)

	Page
1. General Description	2
2. Air Cleaner Element	4
3. Air Cleaner Case	7
4. Air Intake Boot	12
5. Air Intake Duct	13