

## 14.EGR Control Valve

### A: REMOVAL

For removal procedures of EGR control valve, refer to the “EC (H4DO)” section. <Ref. to EC(H4DO)-21, REMOVAL, EGR Control Valve.>

### B: INSTALLATION

For installation procedures of EGR control valve, refer to the “EC (H4DO)” section. <Ref. to EC(H4DO)-23, INSTALLATION, EGR Control Valve.>

### C: INSPECTION

For inspection procedures of EGR control valve, refer to the “EC (H4DO)” section. <Ref. to EC(H4DO)-24, INSPECTION, EGR Control Valve.>