


## 17. Tumble Generator Valve Actuator


### A: REMOVAL

1) Disconnect the ground cable from battery.

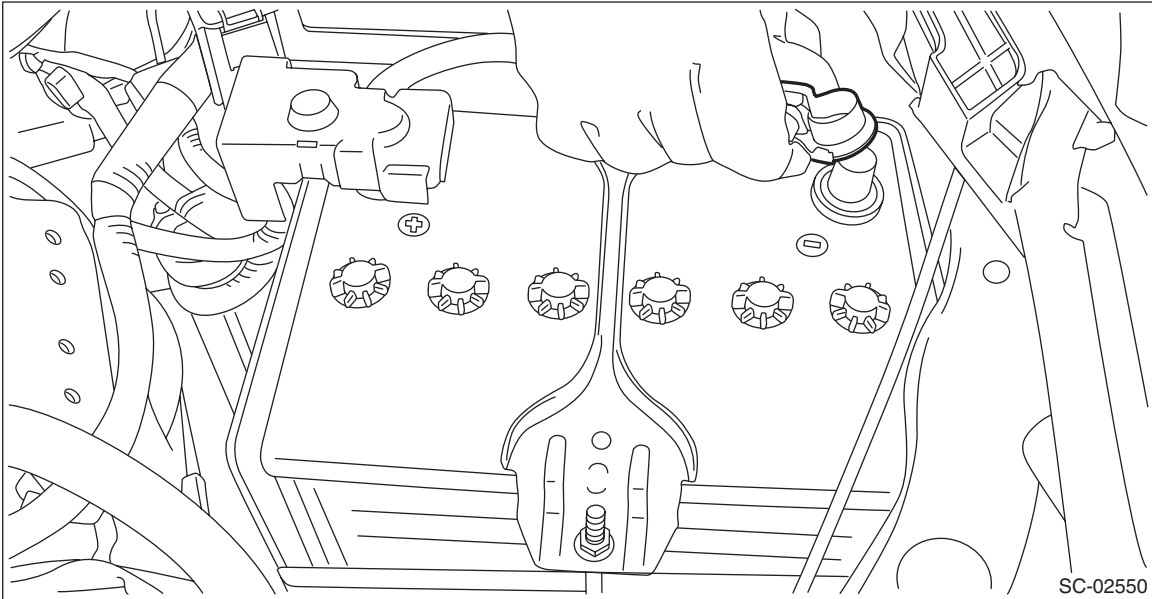

2) Disconnect the connector (A) from tumble generator valve assembly, and remove the tumble generator valve actuator.

- LH side

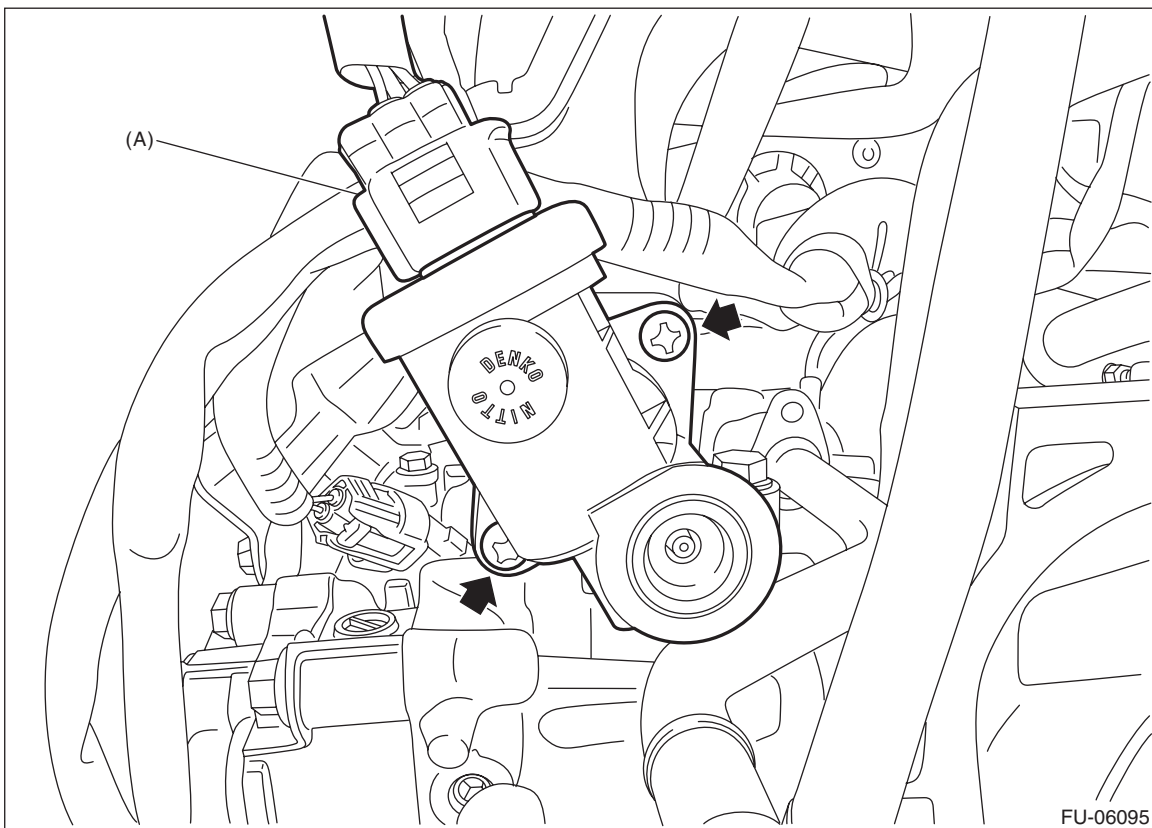


# Tumble Generator Valve Actuator

## FUEL INJECTION (FUEL SYSTEMS)

---

- RH side

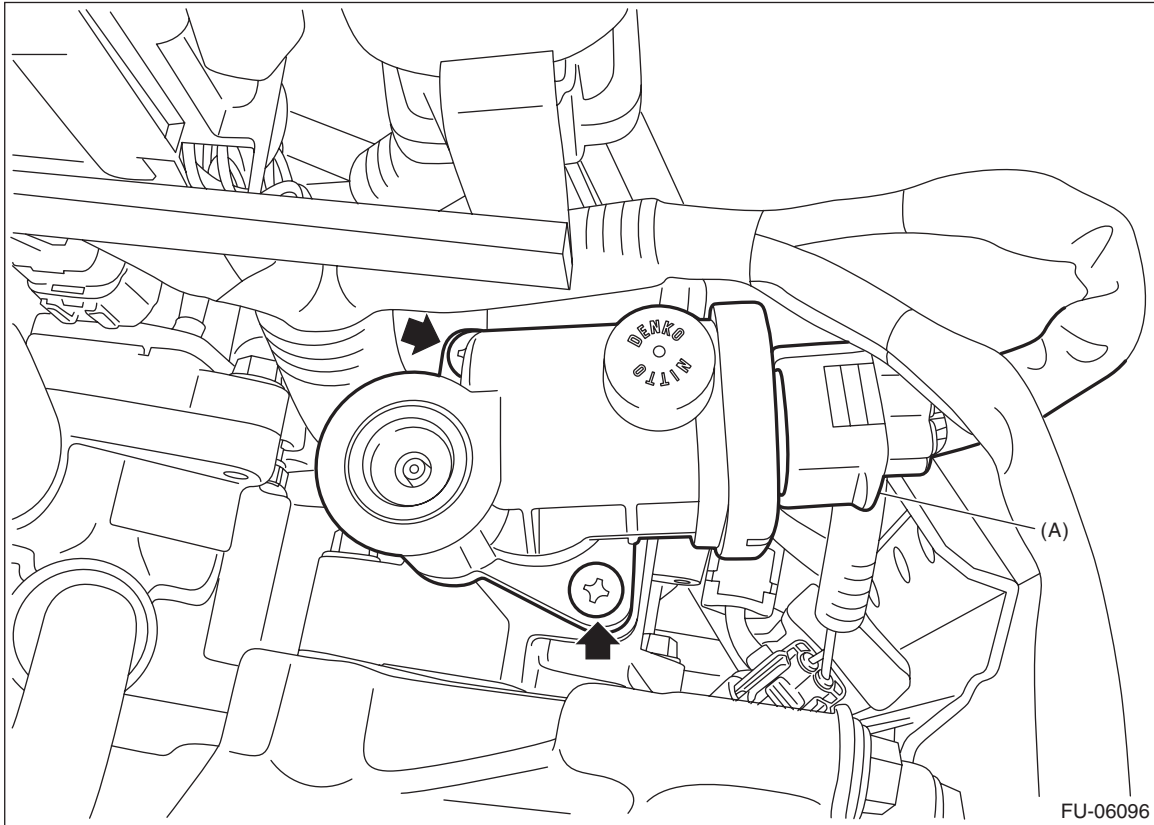

### B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Use a new gasket.

**Tightening torque:**

**6 N·m (0.6 kgf-m, 4.4 ft-lb)**

### C: INSPECTION

- 1) Check that the tumble generator valve actuator has no deformation, cracks or other damages.
- 2) Check tumble generator valve actuator for contamination or clogging.