

## 3. Ignition Coil

### A: REMOVAL

Direct ignition type is adopted. Refer to “Spark Plug” for removal procedure. <Ref. to IG(H4DO)-4, REMOVAL, Spark Plug.>

### B: INSTALLATION

Direct ignition type is adopted. Refer to “Spark Plug” for the installation procedure. <Ref. to IG(H4DO)-5, INSTALLATION, Spark Plug.>

### C: INSPECTION

For inspection procedure, refer to “Diagnostics for Engine Starting Failure”. <Ref. to EN(H4DO)(diag)-71, IGNITION CONTROL SYSTEM, Diagnostics for Engine Starting Failure.>

# Ignition Coil

IGNITION

---

# STARTING/CHARGING SYSTEMS

# *SC(H4DO)*

---

|                                               | Page |
|-----------------------------------------------|------|
| 1. General Description .....                  | 2    |
| 2. Starter .....                              | 9    |
| 3. Generator .....                            | 33   |
| 4. Battery .....                              | 56   |
| 5. Battery Current & Temperature Sensor ..... | 59   |