


5. Air Intake Duct

A: REMOVAL

- 1) Remove the clip which secures the air intake duct, and remove the air intake duct.

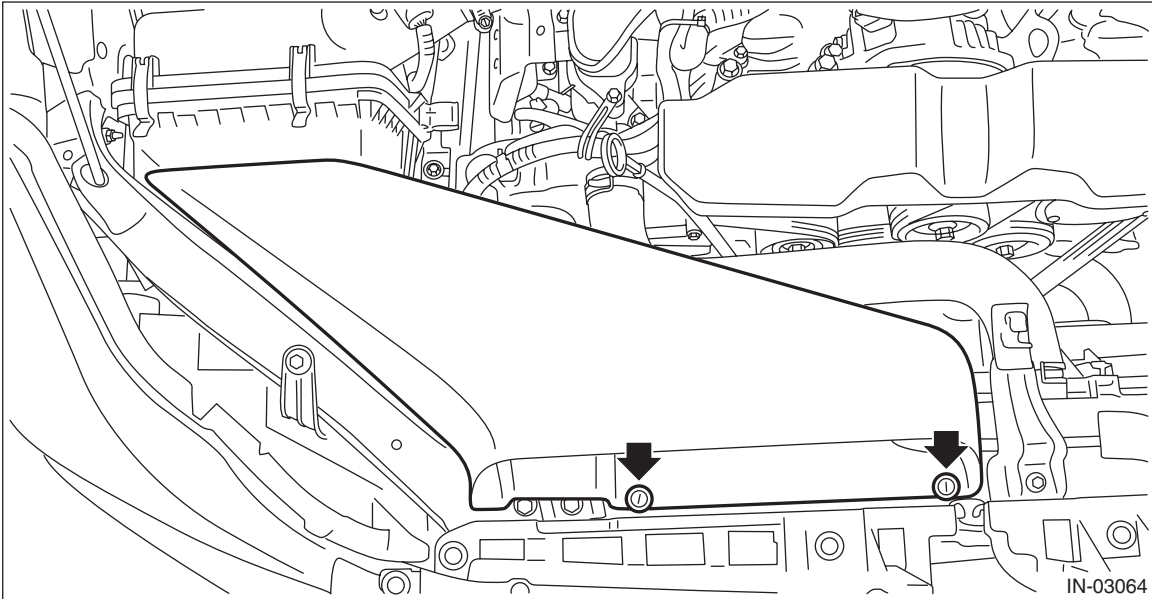

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

- 1) Check that the air intake duct has no deformation, cracks or other damages.
- 2) Inspect that no foreign objects are mixed in the air intake duct.

Air Intake Duct

INTAKE (INDUCTION)

MECHANICAL

ME(H4DO)

	Page
1. General Description	2
2. Compression	24
3. Idle Speed	26
4. Ignition Timing	27
5. Intake Manifold Vacuum	28
6. Engine Oil Pressure	30
7. Fuel Pressure	32
8. Cam Clearance	34
9. Engine Assembly	44
10. Engine Mounting	75
11. Preparation for Overhaul	76
12. V-belt	77
13. Crank Pulley	85
14. Chain Cover	97
15. Timing Chain Assembly	113
16. Cam Sprocket	135
17. Crank Sprocket	143
18. Rocker Cover	145
19. Camshaft	158
20. Cam Carrier	159
21. Cylinder Head	206
22. Cylinder Block	247
23. Intake and Exhaust Valve	350
24. Piston	351
25. Connecting Rod	352
26. Crankshaft	353
27. Engine Trouble in General	354
28. Engine Noise	360