

23. Intake and Exhaust Valve

A: SPECIFICATION

Refer to "Cylinder Head" for removal and installation procedures of the intake and exhaust valves. <Ref. to ME(H4DO)-206, REMOVAL, Cylinder Head.> <Ref. to ME(H4DO)-208, INSTALLATION, Cylinder Head.>