

Schedule

PERIODIC MAINTENANCE SERVICES

2. Schedule

A: MAINTENANCE SCHEDULE 1

1. U.S. MODELS

		Maintenance interval [Number of months or km (miles), whichever occurs first]																			
	Months	3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120	132	Remarks	
	× 1,000 km	4.8	12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	192	220		
	× 1,000 miles	3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120	132		
1	Engine oil	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R		
2	Engine oil filter	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R		
3	Spark plug								R										R		
4	Drive belt(s)				I				I				I						I		
5	Fuel line				(I)				(I)				(I)						I		Note (1)
6	Fuel filter										R										Note (1)
7	Air cleaner element				R				R			R						R		Note (2)	
8	Cooling system				I				I			I							I		
9	Engine coolant	Replace after the first 11 years or 220,000 km (137,500 miles), and every six years or 120,000 km (75,000 miles) thereafter																			
10	Clutch system			I		I		I		I		I		I		I		I		I	
11	Transmission gear oil				I				I			I			I				I		
12	CVTF				I				I			I			I			I		I	
13	Front & rear differential gear oil				I				I			I			I			I		I	
14	Brake line		I		I		I		I		I		I		I		I		I		
15	Brake fluid			R			R		R			R			R			R			
16	Disc brake pad and disc		I		I		I		I		I		I		I		I		I		
17	Parking brake		I		I		I		I		I		I		I		I		I		
18	Suspension		I		I		I		I		I		I		I		I		I		
19	Wheel bearing								(I)										(I)		
20	Axle boots and joints		I		I		I		I		I		I		I		I		I		
21	Tire rotation	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	Note (3)	
22	Steering system (Power steering)		I		I		I		I		I		I		I		I		I		
23	A/C filter	Replace every 12 months or 12,000 km (7,500 miles)																			Note (4)

Symbol

R: Replace

I: Inspection

P: Perform

(I): Inspections recommended for vehicle safety

NOTE:

1. This inspection is not necessary to observe exhaust gas regulations or is the responsibility of the manufacturer under the current basic EPA regulations that must be observed by law.
2. Replace the air cleaner element more frequently than the periodic replacement if the vehicle is being used in an excessively dusty environment.
3. Replace the tires if the tread-wear indicator has caused a bar-shaped cut across the tread. The indicator will appear when the remaining amount of tread is less than 1.6 mm (0.063 in).
4. Replace the A/C filter more frequently than the periodic replacement if the vehicle is being used in an excessively dusty environment.

Schedule

PERIODIC MAINTENANCE SERVICES

B: MAINTENANCE SCHEDULE 2

Item	Maintenance interval	Repeat short distance driving	Repeat driving on bumpy muddy road	Driving in extremely cold weather	Area where salt or other corrosive substance used, or coastal area	High humidity or mountain area	Repeat towing trailer
Engine oil	Every 3.75 months	R		R			R
	6,000 km						
	3,750 miles						
Engine oil filter	Every 3.75 months	R		R			R
	6,000 km						
	3,750 miles						
Fuel line	Every 7.5 months				I		
	Every 12,000 km						
	Every 7,500 miles						
Transmission gear oil	Every 15 months						R
	Every 24,000 km						
	Every 15,000 miles						
CVTF	Every 40,000 km						R
	Every 24,855 miles						
Front & rear differential gear oil	Every 15 months						R
	Every 24,000 km						
	Every 15,000 miles						
Brake line	Every 7.5 months	I	I		I		I
	Every 12,000 km						
	Every 7,500 miles						
Brake fluid	Every 15 months					R	
	Every 24,000 km						
	Every 15,000 miles						
Disc brake pad and disc	Every 15 months	I	I		I		I
	Every 24,000 km						
	Every 15,000 miles						
Parking brake	Every 15 months	I	I		I		I
	Every 24,000 km						
	Every 15,000 miles						
Suspension	Every 7.5 months		I	I	I		I
	Every 12,000 km						
	Every 7,500 miles						
A axle boots and joints	Every 7.5 months	I	I	I	I		I
	Every 12,000 km						
	Every 7,500 miles						
Steering system (Power steering)	Every 7.5 months	I	I	I	I		I
	Every 12,000 km						
	Every 7,500 miles						

R: Replace

I: Inspection