


26.Torque Converter Assembly

A: REMOVAL

- 1) Remove the transmission assembly from the vehicle. <Ref. to CVT-58, REMOVAL, Automatic Transmission Assembly.>
- 2) Pull out the torque converter assembly horizontally.

CAUTION:

Do not scratch the inside of engaging parts.

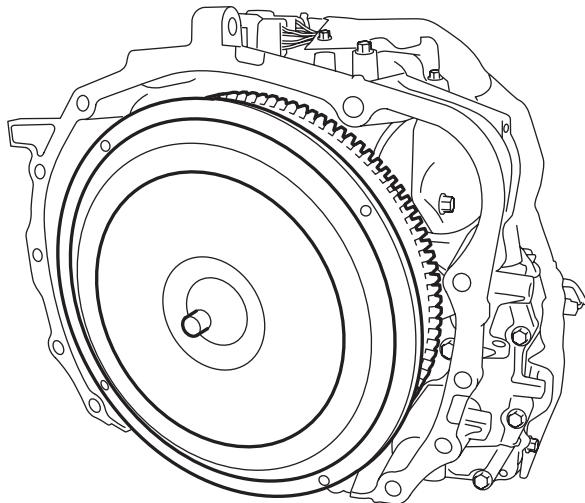

AT-06732

- 3) Remove the O-ring from the input shaft.

B: INSTALLATION

- 1) Install the O-ring to the input shaft.

NOTE:

- Use new O-rings.
- Apply CVTF to the O-ring.

- 2) While holding the torque converter assembly by hand, carefully install it into the torque converter case.

NOTE:

- Apply CVTF to the oil seal lip.
- Do not damage the oil seal and O-ring.

- 3) Engage the splines while gently rotating the torque converter assembly by hand, and securely insert the assembly.


Torque Converter Assembly

CONTINUOUSLY VARIABLE TRANSMISSION

- 4) Measure depth "A", from converter case end surface to drive plate contacting surface.

Standard (reference):

6.8 mm (0.268 in)

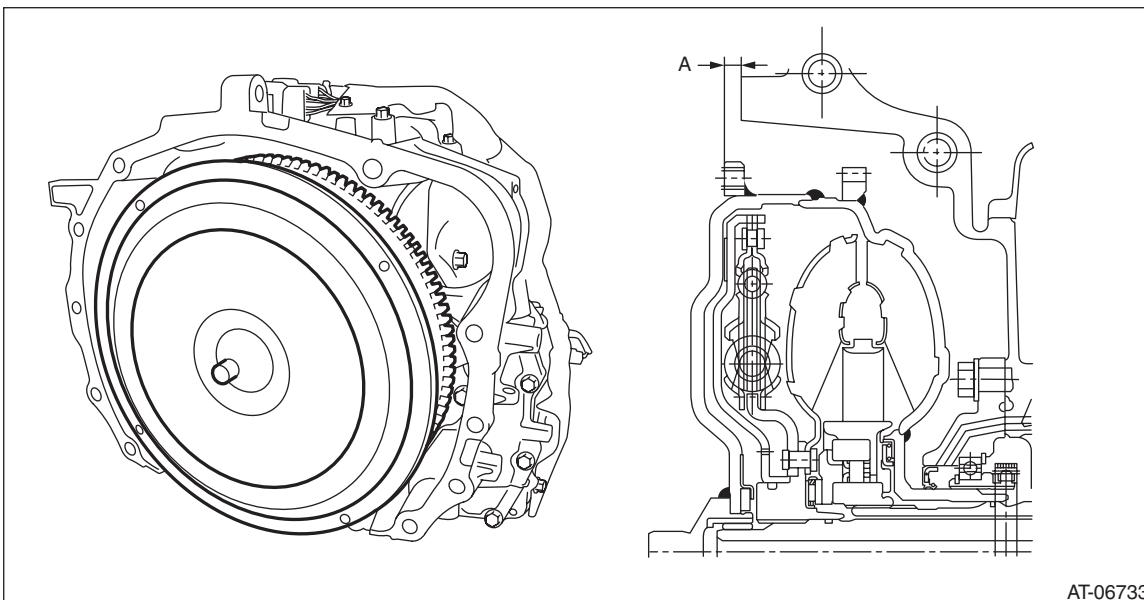

- 5) Install the transmission assembly to the vehicle. <Ref. to CVT-69, INSTALLATION, Automatic Transmission Assembly.>

C: INSPECTION

- Check the protrusion of torque converter center (front boss) is not deformed or damaged.
- Check the ring gear and exterior for break or damage.