

38. Variator Chain**A: REMOVAL**

For removal of variator chain, refer to "Primary Pulley and Secondary Pulley". <Ref. to CVT-213, REMOVAL, Primary Pulley and Secondary Pulley.>

B: INSTALLATION

For installation of variator chain, refer to "Primary Pulley and Secondary Pulley". <Ref. to CVT-220, INSTALLATION, Primary Pulley and Secondary Pulley.>

C: INSPECTION

Check the variator chain for damage and wear.