


Electrical Component Location

CONTINUOUSLY VARIABLE TRANSMISSION (DIAGNOSTICS)

4. Electrical Component Location

A: LOCATION

1. CONTROL MODULE

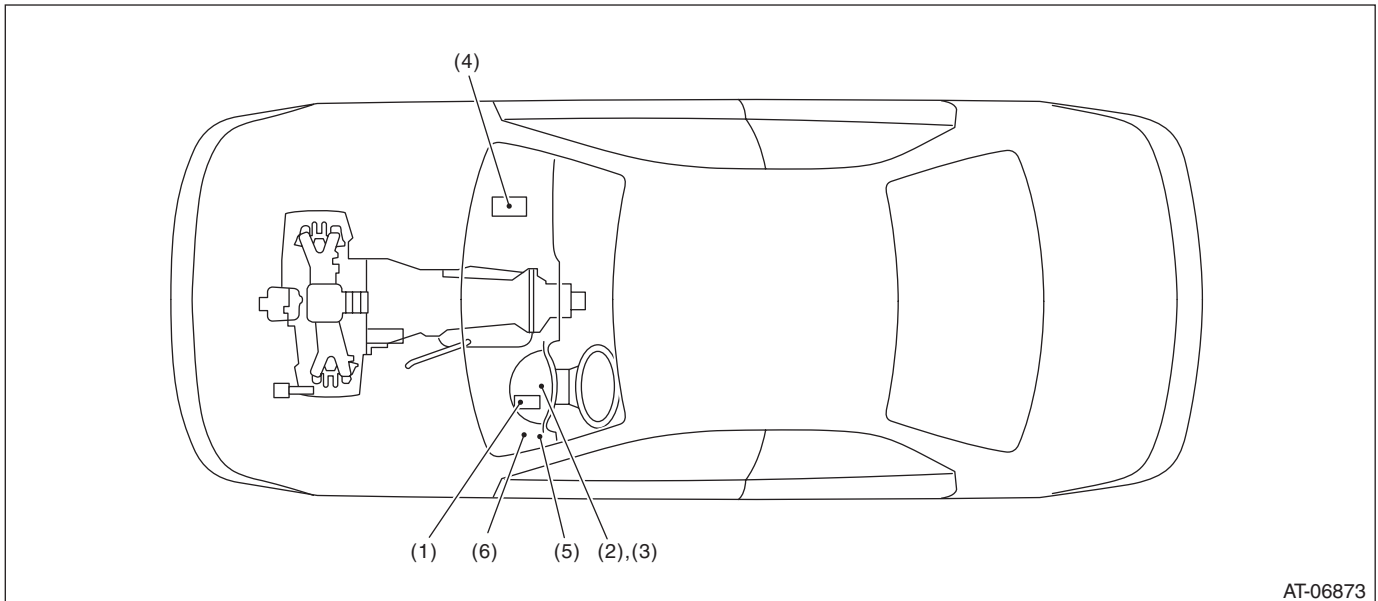

(1) Transmission control module (TCM)

(3) AWD light

(5) Body integrated unit






(2) AT OIL TEMP light

(4) Engine control module (ECM)

(6) Data link connector

Electrical Component Location


CONTINUOUSLY VARIABLE TRANSMISSION (DIAGNOSTICS)

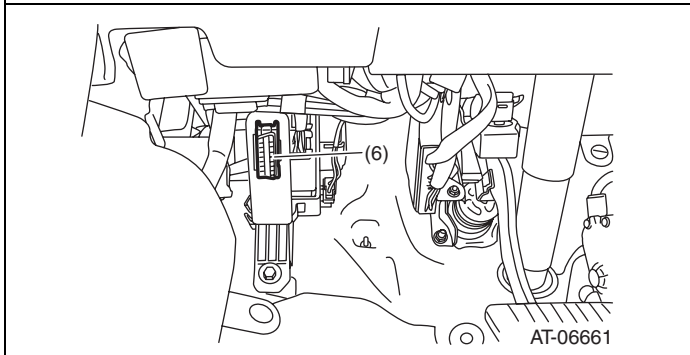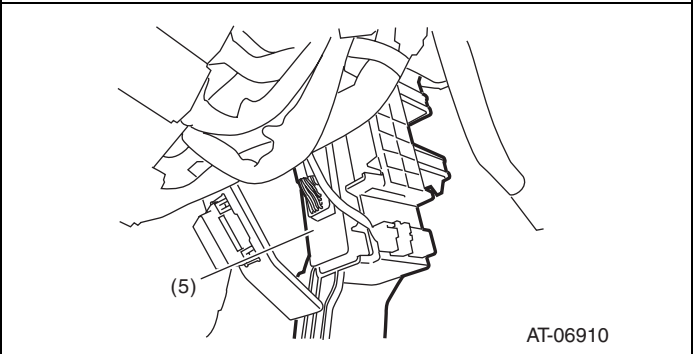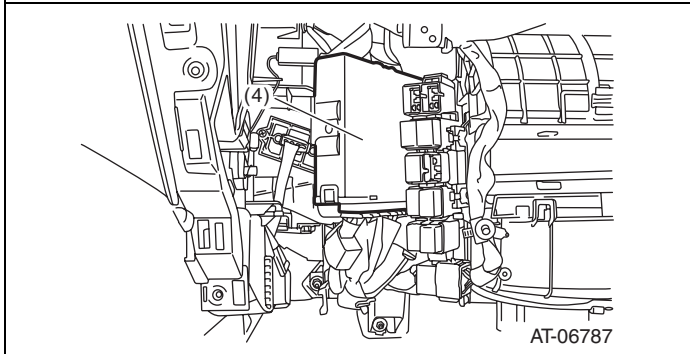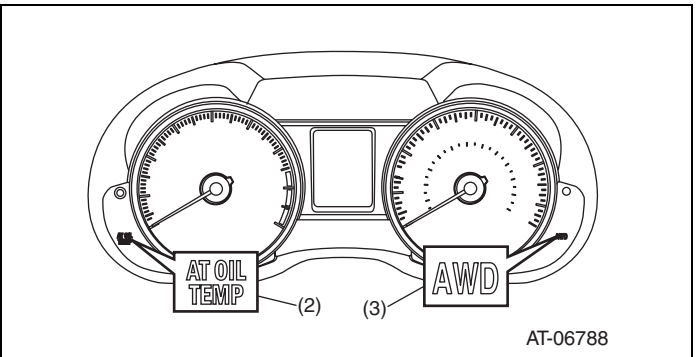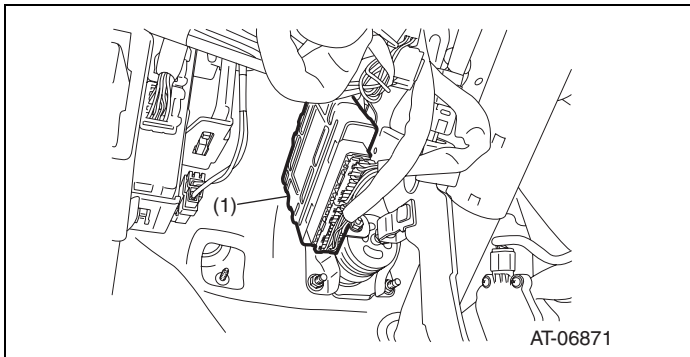

Electrical Component Location

CONTINUOUSLY VARIABLE TRANSMISSION (DIAGNOSTICS)

2. SENSOR

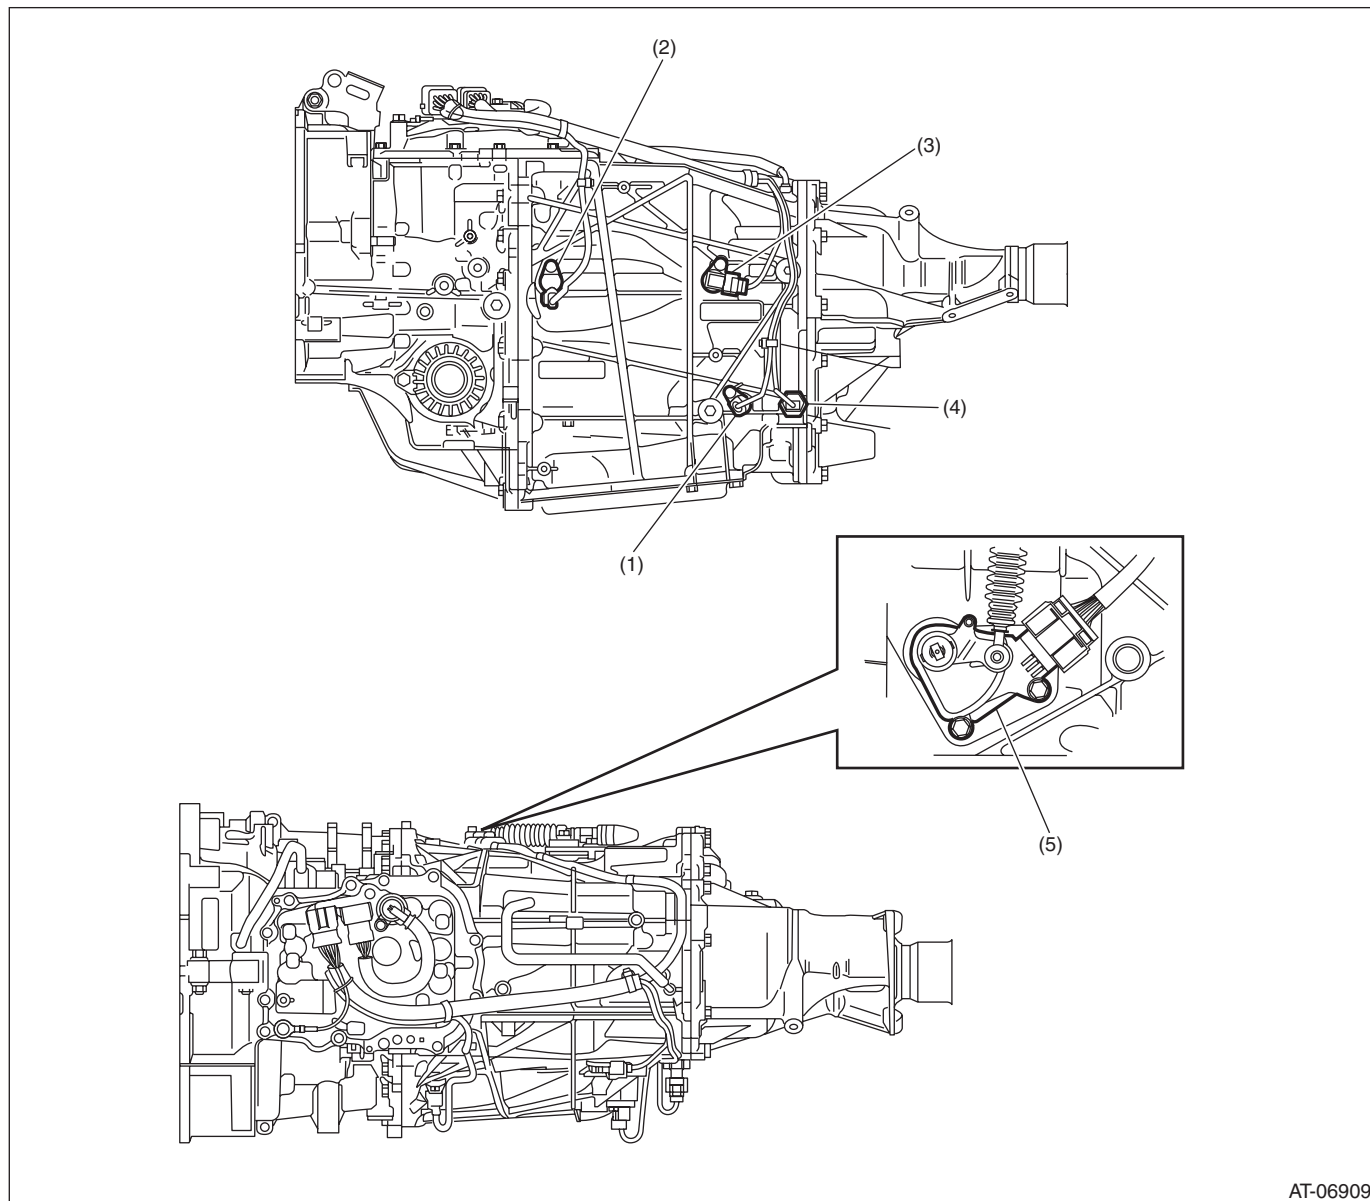

AT-06909

(1) Secondary speed sensor

(2) Turbine speed sensor

(3) Primary speed sensor


(4) Secondary pressure sensor

(5) Inhibitor switch

Electrical Component Location

CONTINUOUSLY VARIABLE TRANSMISSION (DIAGNOSTICS)

3. SOLENOID

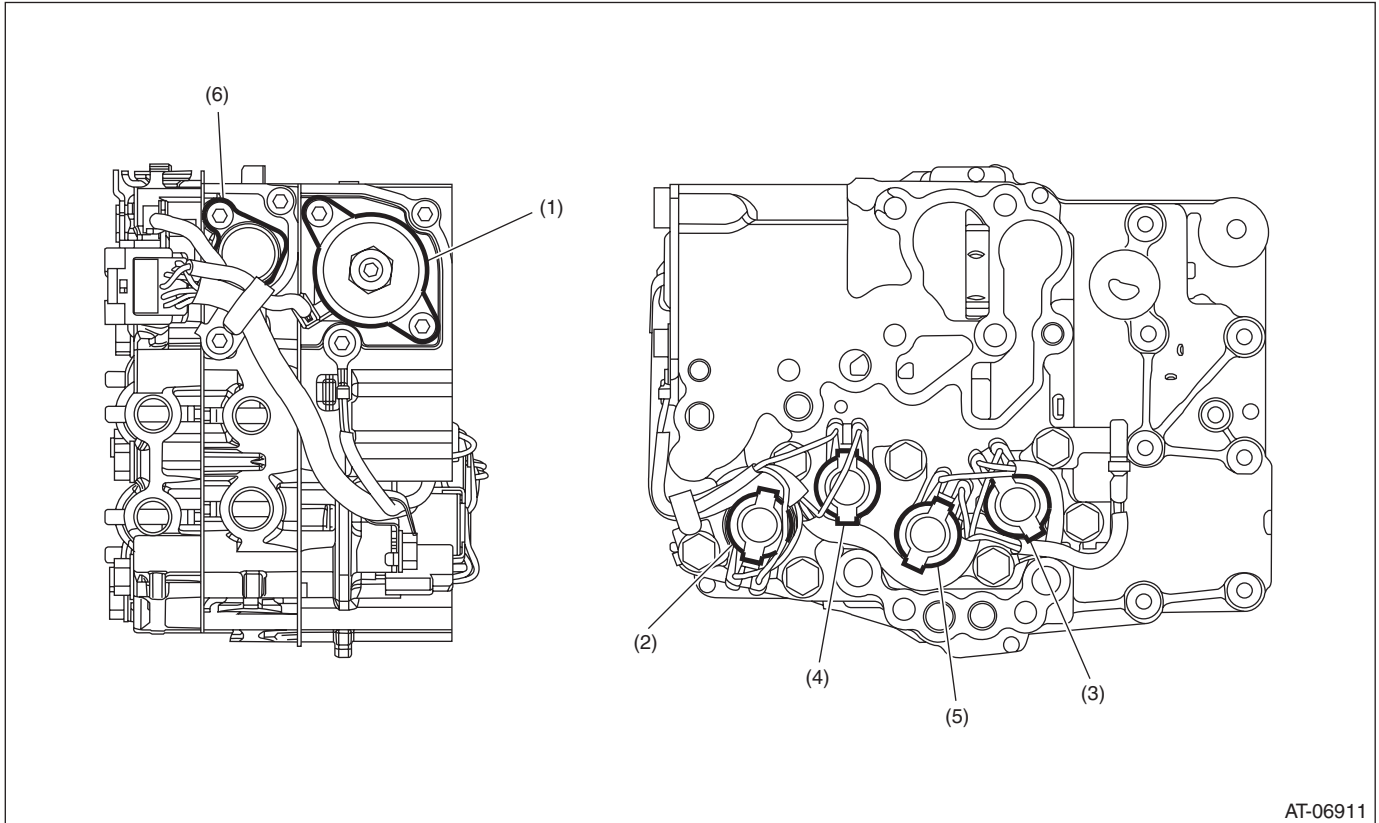

AT-06911

- | | | |
|------------------------|---------------------------|-------------------------|
| (1) Secondary solenoid | (3) Lock-up duty solenoid | (5) Primary UP solenoid |
| (2) AWD solenoid | (4) Primary DOWN solenoid | (6) F&R solenoid |