

8. Read Diagnostic Trouble Code (DTC)

A: OPERATION

- 1) Using the Subaru Select Monitor, on the «Main Menu» display, select {Each System Check}.
- 2) On «System Selection Menu» display, select {Transmission Control System}.
- 3) After transmission type information is displayed, select [OK].
- 4) On «Transmission Diagnosis» display, select {Diagnostic Code(s) Display}.
- 5) On «Diagnostic Code(s) Display» display, select {Temporary Diagnostic Code(s)} or {Memorized Diagnostic Code(s)}.

NOTE:

- For details concerning the work procedure, refer to the “PC application help for Subaru Select Monitor”.
- For details concerning DTC, refer to List of Diagnostic Trouble Code (DTC). <Ref. to CVT(diag)-32, List of Diagnostic Trouble Code (DTC).>