

### 3. Center Exhaust Pipe

#### A: REMOVAL

After removing the center exhaust pipe and front exhaust pipe as a unit, separate them. Refer to "Front Exhaust Pipe" for the removal procedure. <Ref. to EX(H4DO)-7, REMOVAL, Front Exhaust Pipe.>

#### B: INSTALLATION

Install the center exhaust pipe and front exhaust pipe as one unit. Refer to "Front Exhaust Pipe" for the installation procedure. <Ref. to EX(H4DO)-10, INSTALLATION, Front Exhaust Pipe.>

#### C: INSPECTION

- 1) Check the connections and welded parts for exhaust leaks.
- 2) Make sure there are no holes or rusting.