

8. Reduction Drive Gear

A: NOTE

For removal, installation and inspection, refer to “CVT” section. <Ref. to CVT-206, Reduction Drive Gear.>