


9. Outer Mirror Assembly

A: REMOVAL

- 1) Remove the trim panel - front door. <Ref. to EI-61, FRONT DOOR, REMOVAL, Door Trim.>
- 2) Remove the outer mirror assembly.
 - (1) Remove the connector clip that is installed on the panel assembly - front door, and disconnect the connector.
 - (2) Turn over the sealing cover - front door.
 - (3) Remove the bolts to remove outer mirror assembly.

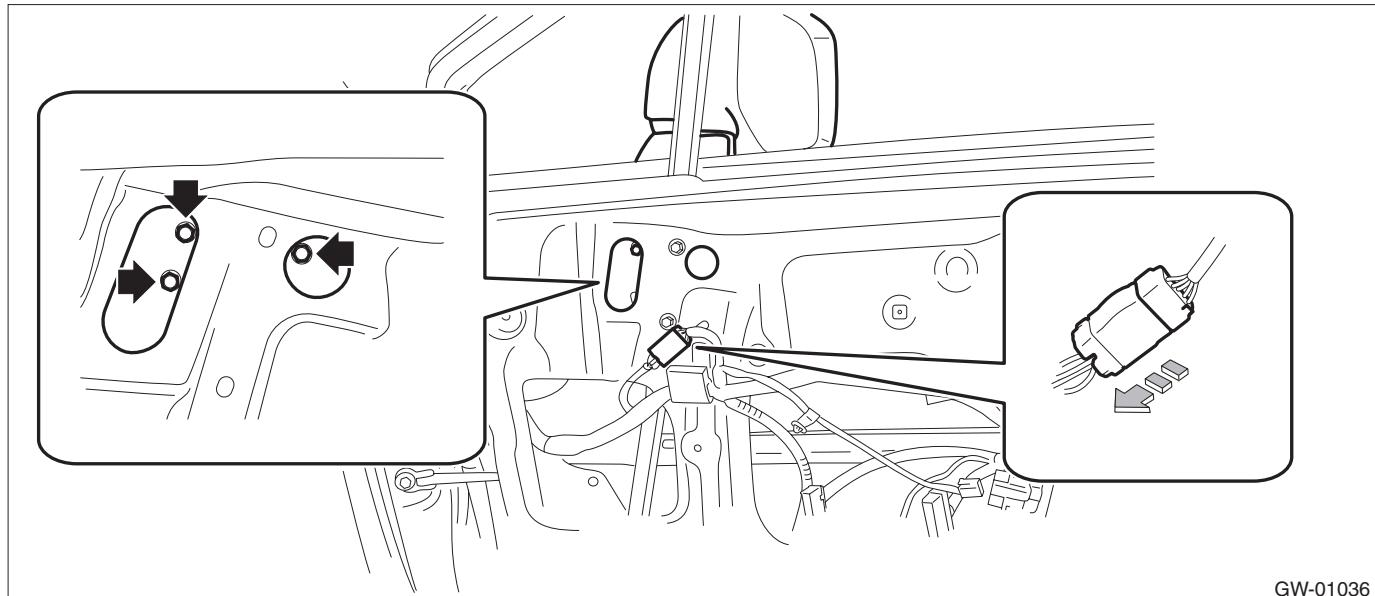

GW-01036

B: INSTALLATION

Install each part in the reverse order of removal.

Tightening torque:


Outer mirror assembly: 7.5 N·m (0.76 kgf·m, 5.5 ft-lb)

Outer Mirror Assembly

GLASS/WINDOWS/MIRRORS

C: INSPECTION

- 1) Disconnect the outer mirror connector.
- 2) Apply battery voltage between the outer mirror connector terminals and check the mirror operation.

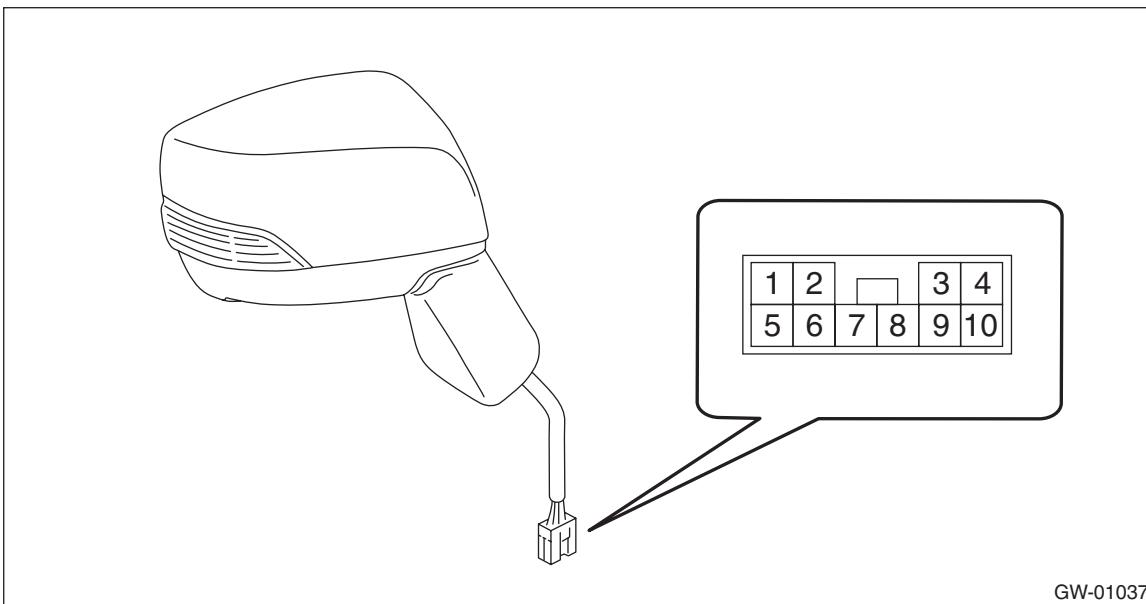

GW-01037

| Terminal No. | Inspection conditions | Switch position |
|---------------|--|-----------------|
| — | — | OFF |
| 3 (+) — 8 (-) | Apply battery voltage between terminals. | UP |
| 8 (+) — 3 (-) | Apply battery voltage between terminals. | DOWN |
| 7 (+) — 3 (-) | Apply battery voltage between terminals. | LEFT |
| 3 (+) — 7 (-) | Apply battery voltage between terminals. | RIGHT |

- 3) If it does not operate normally, replace the outer mirror assembly.