


## 2. Relay and Fuse

### A: LOCATION

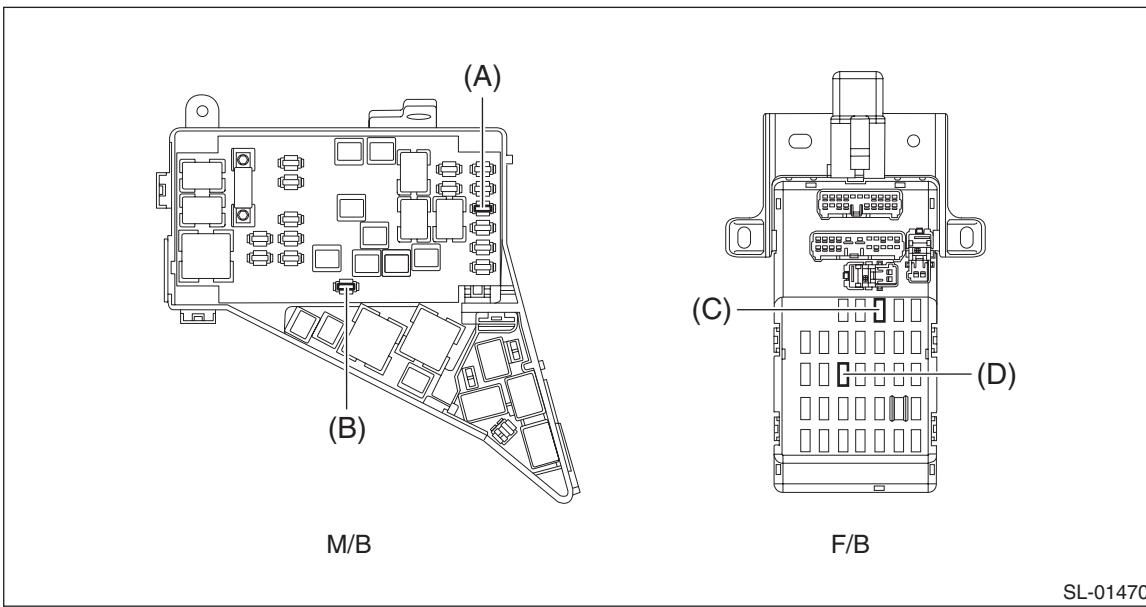

Main fuse box	Fuse 15A (K/L) Fuse 20A (K/L, SEC)	(A) (B)
Relay & fuse box	Fuse 15A (K/L) Fuse 10A (K/L)	(C) (D)

#### NOTE:

For other related fuses, refer to the wiring diagram. <Ref. to WI-15, Power Supply Circuit.>

### B: INSPECTION

#### 1. CHECK FUSE

- 1) Remove the fuse and inspect visually.
- 2) If the fuse is blown out, replace the fuse.

#### NOTE:

If the fuse is blown again, check the system wiring harness.