

4. Floor Under Protector


A: REMOVAL

- 1) Lift up the vehicle.

NOTE:

A plate type lift cannot be used.

- 2) Remove the bolts and clips, and remove the front under protector.

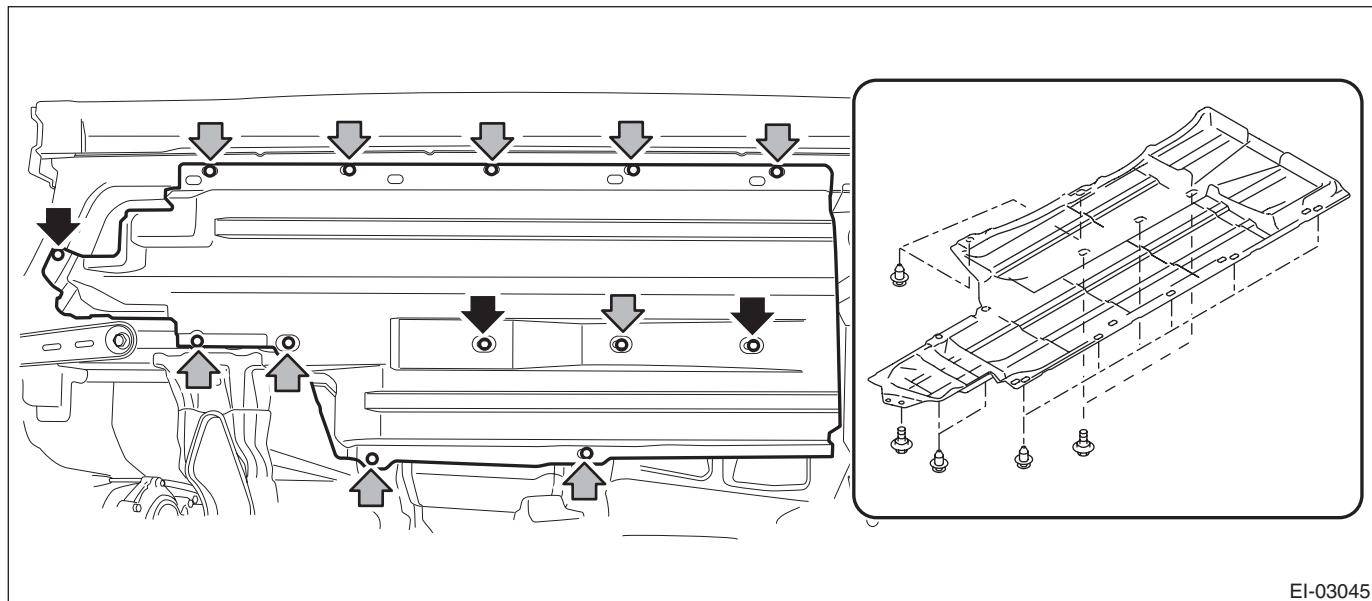

EI-03045

B: INSTALLATION

Install each part in the reverse order of removal.

Tightening torque:

7.5 N·m (0.76 kgf·m, 5.5 ft-lb)