


## 28. Floor Mat


### A: REMOVAL

- 1) Remove the front seat assembly. <Ref. to SE-7, REMOVAL, Front Seat.>
- 2) Remove the rear seat cushion assembly. <Ref. to SE-22, REMOVAL, Rear Seat.>
- 3) Remove the console box assembly and panel center LWR. <Ref. to EI-71, REMOVAL, Console Box.>
- 4) Remove the lower inner trim. <Ref. to EI-95, REMOVAL, Lower Inner Trim.>
- 5) Remove the pull handle cover.
  - (1) Open the cover by using a flat tip screwdriver.
  - (2) Remove the screw and remove the pull handle cover.

- 4 door model

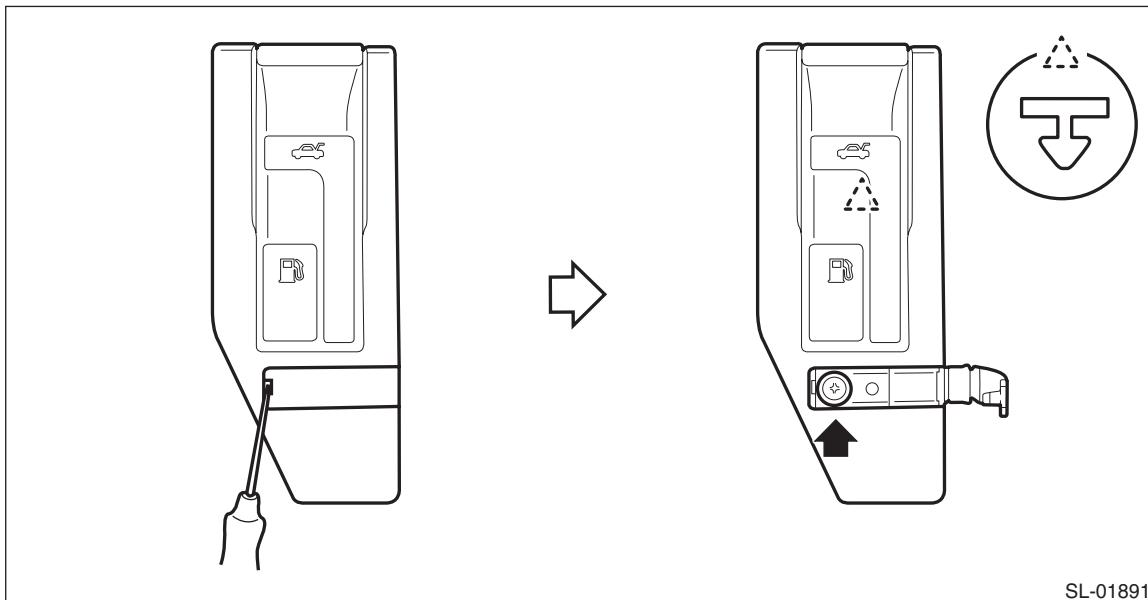


- 5 door model/XV model

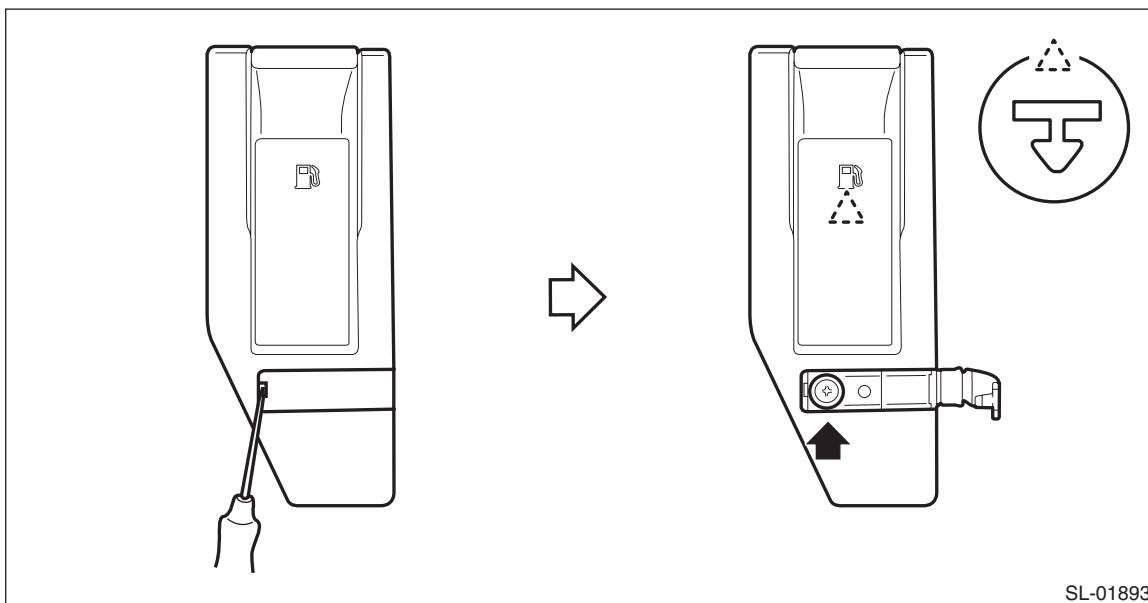

## Floor Mat


### EXTERIOR/INTERIOR TRIM

6) Remove the knobs of the hook - seat cushion rear.

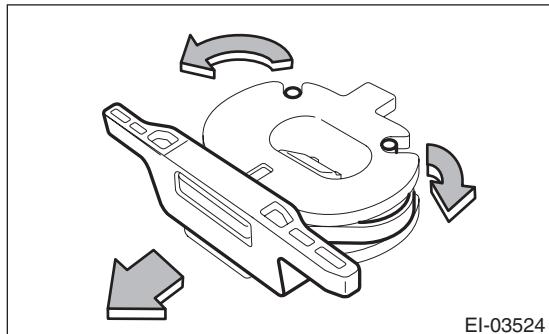

7) Take out the floor mat from the vehicle.

- (1) Remove the clips from the floor mat.
- (2) Remove the mat hook on both sides.
- (3) Take out the floor mat after folding down.

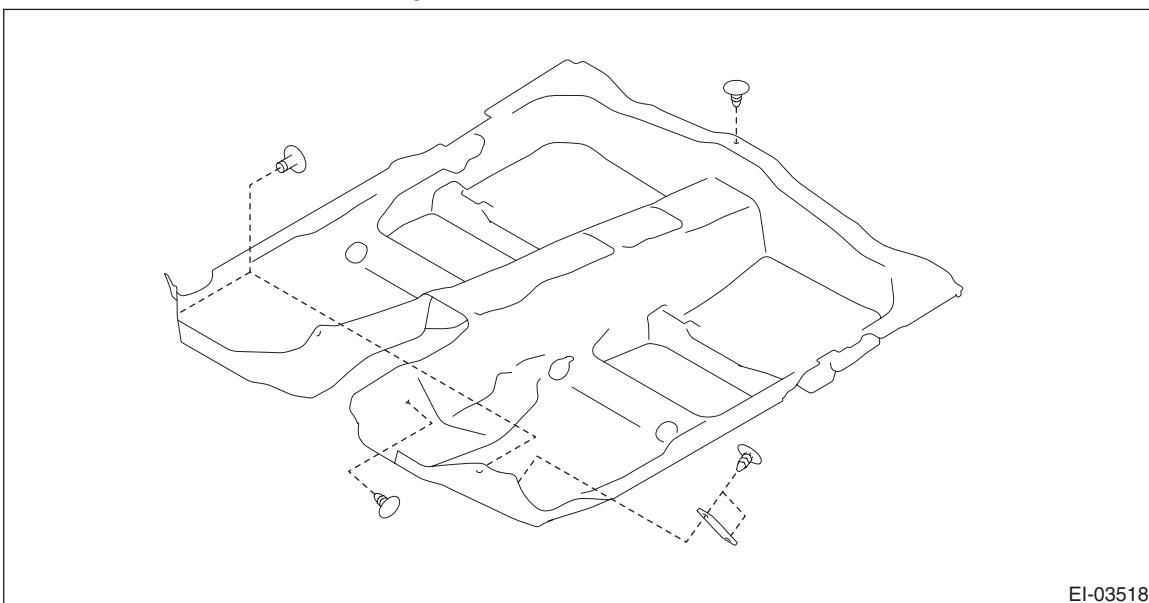


## B: INSTALLATION

Install each part in the reverse order of removal.

### CAUTION:

Make sure that the knobs of the hook - seat cushion rear are securely installed.

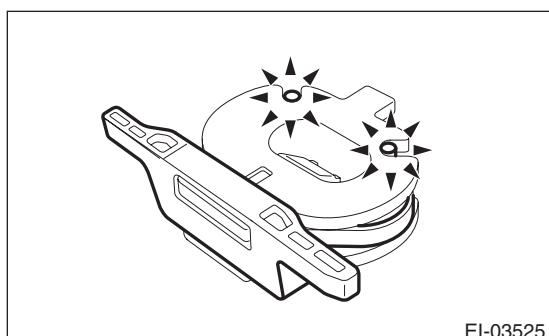

### NOTE:

Secure the mat firmly with clips.