

14.CVTF

A: INSPECTION

Refer to “CVT” section for CVTF inspection. <Ref. to CVT-34, INSPECTION, CVTF.>

B: REPLACEMENT

Refer to “CVT” section for CVTF replacement. <Ref. to CVT-36, REPLACEMENT, CVTF.>