

15. Front & Rear Differential Gear Oil

A: INSPECTION

1. FRONT DIFFERENTIAL (MT MODEL)

Front differential gear oil of MT model lubricates the transmission and differential together. Refer to "Transmission Gear Oil" for inspection procedures. <Ref. to 5MT-22, INSPECTION, Transmission Gear Oil.>

2. FRONT DIFFERENTIAL (CVT MODEL)

Refer to "CVT" section for inspection of CVT model front differential gear oil. <Ref. to CVT-39, INSPECTION, Differential Gear Oil.>

3. REAR DIFFERENTIAL

Refer to "DI" section for rear differential gear oil inspection. <Ref. to DI-19, INSPECTION, Differential Gear Oil.>

B: REPLACEMENT

1. FRONT DIFFERENTIAL (MT MODEL)

Front differential gear oil of MT model lubricates the transmission and differential together. Refer to "5MT" section for replacement procedure. <Ref. to 5MT-22, REPLACEMENT, Transmission Gear Oil.>

2. FRONT DIFFERENTIAL (CVT MODEL)

Refer to "CVT" section for front differential gear oil replacement. <Ref. to CVT-41, REPLACEMENT, Differential Gear Oil.>

3. REAR DIFFERENTIAL

Refer to "DI" section for rear differential gear oil replacement. <Ref. to DI-19, REPLACEMENT, Differential Gear Oil.>