

Drain Separator

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

12. Drain Separator

A: REMOVAL


The drain separator is installed to the leak check valve assembly. Refer to "Leak Check Valve Assembly" for removal procedure. <Ref. to EC(H4DO)-35, REMOVAL, Leak Check Valve Assembly.>

B: INSTALLATION


The drain separator is installed to the leak check valve assembly. Refer to "Leak Check Valve Assembly" for installation procedure. <Ref. to EC(H4DO)-40, INSTALLATION, Leak Check Valve Assembly.>

C: DISASSEMBLY

- 1) Lift up the claw of the drain separator, and slide the drain separator in the direction of the arrow (A) to remove the drain separator.

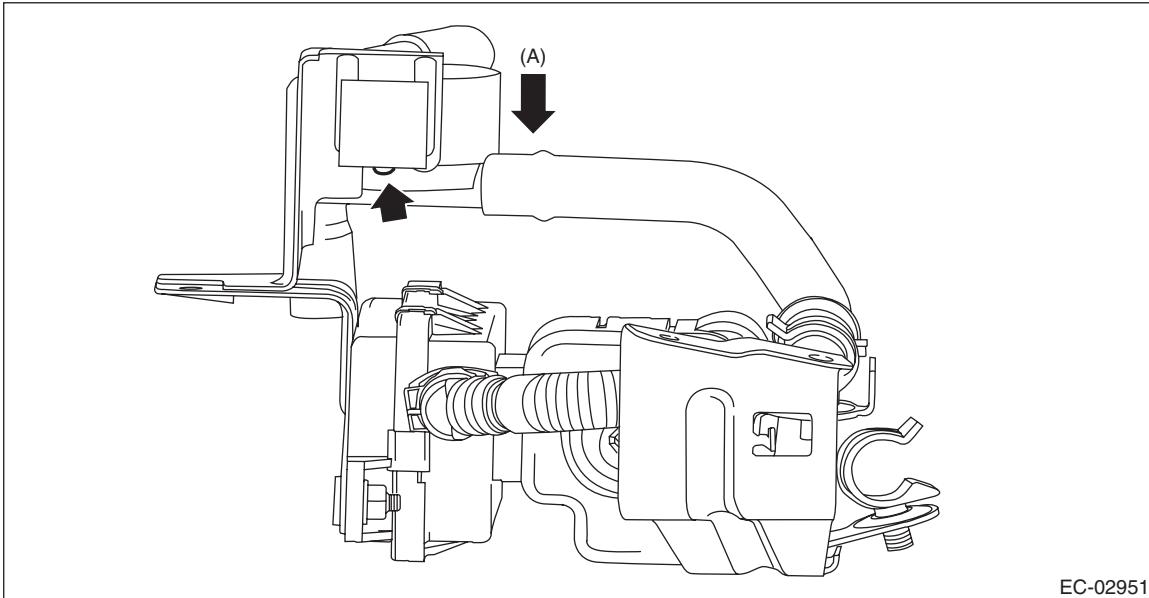

- 2) Remove the drain hose and drain tube from the drain separator.

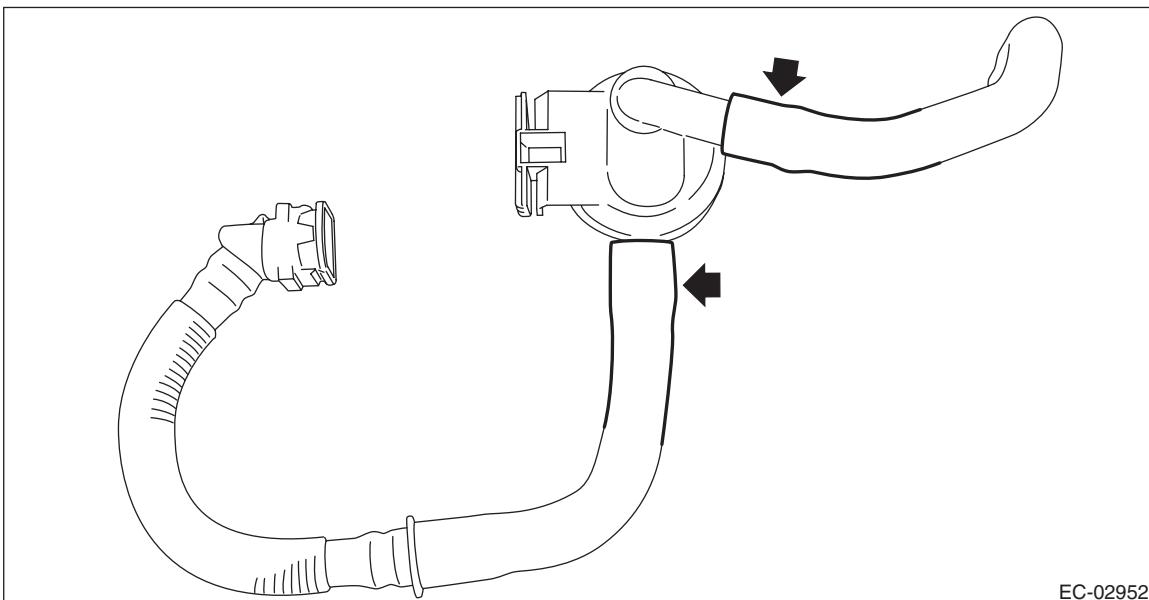

D: ASSEMBLY

Assemble in the reverse order of disassembly.

E: INSPECTION

- 1) Check that the drain separator and drain separator bracket have no deformation, crack, or other damage.
- 2) Check that the drain hose and drain tube have no crack, damage, or looseness.
- 3) Check that no foreign substances are clogged in the drain separator.