

## 10. Engine Mounting

### A: REMOVAL

- 1) Remove the engine from the vehicle. <Ref. to ME(H4DO)-43, REMOVAL, Engine Assembly.>
- 2) Remove the engine mounting from the engine.

### B: INSTALLATION

Install in the reverse order of removal.

#### *Tightening torque:*

**35 N·m (3.6 kgf·m, 25.8 ft-lb)**

### C: INSPECTION

Make sure that there are no cracks or other damages.