

# Power Steering Control Module


POWER ASSISTED SYSTEM (POWER STEERING)

---

## 7. Power Steering Control Module

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the power steering control module.
  - (1) Disconnect the connector of the power steering control module.
  - (2) Remove the nuts, and remove the power steering control module.

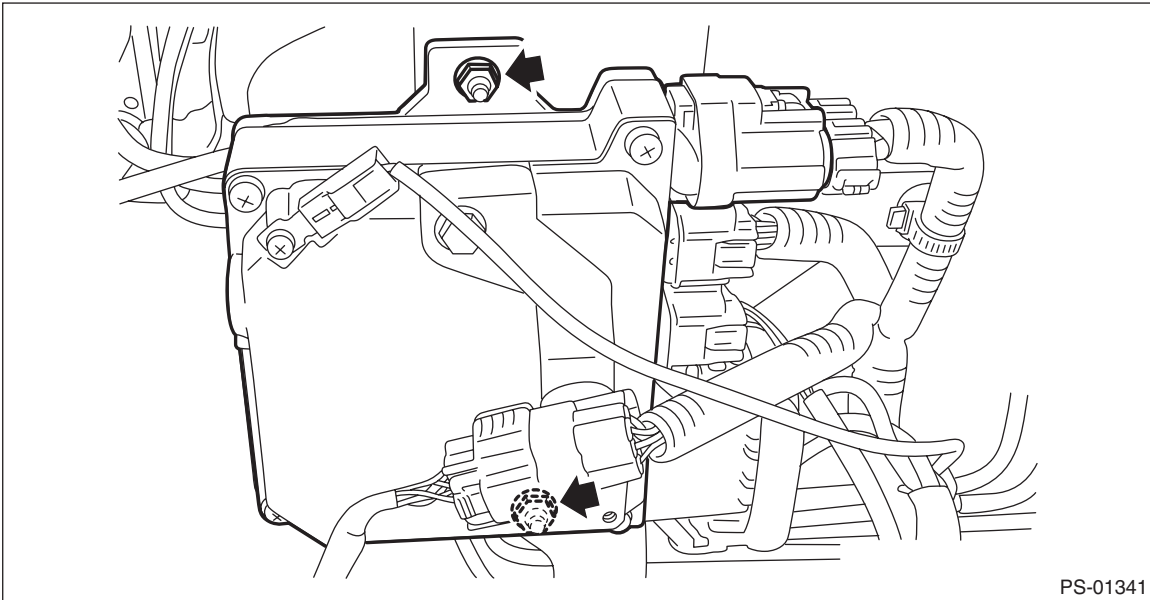

PS-01341

### B: INSTALLATION

- 1) Install the power steering control module.

#### **Tightening torque:**

**7.5 N·m (0.76 kgf-m, 5.5 ft-lb)**

- 2) Connect the harness connector.

#### **CAUTION:**

**Make sure that the connector is securely locked.**

- 3) Attach the harness bracket.

#### **Tightening torque:**

**7.5 N·m (0.76 kgf-m, 5.5 ft-lb)**