


4. Full Wheel Cap

A: REMOVAL


Insert a remover into the notch located diagonally to the valve, and remove the cap by prying the remover to the tire side.

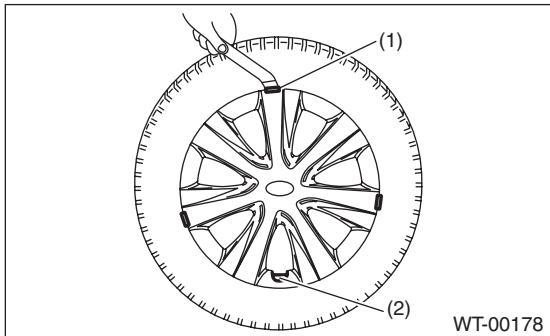

- (1) Cutout portion
- (2) Valve hole

B: INSTALLATION

- 1) Align the valve with the valve hole in the hubcap.
- 2) Install the hubcap by tapping it in the order from (1) to (3) described in the figure.

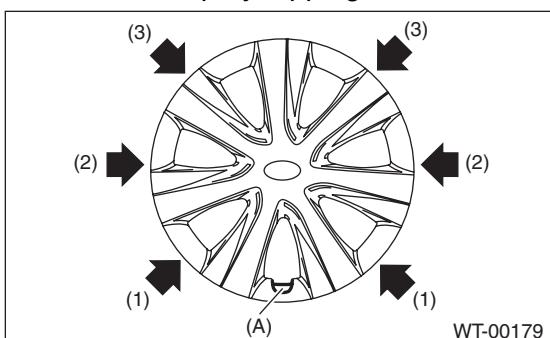

- (A) Valve hole

C: INSPECTION

Check for damage on the hubcap.