


Electrical Component Location

TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)

3. Electrical Component Location

A: LOCATION

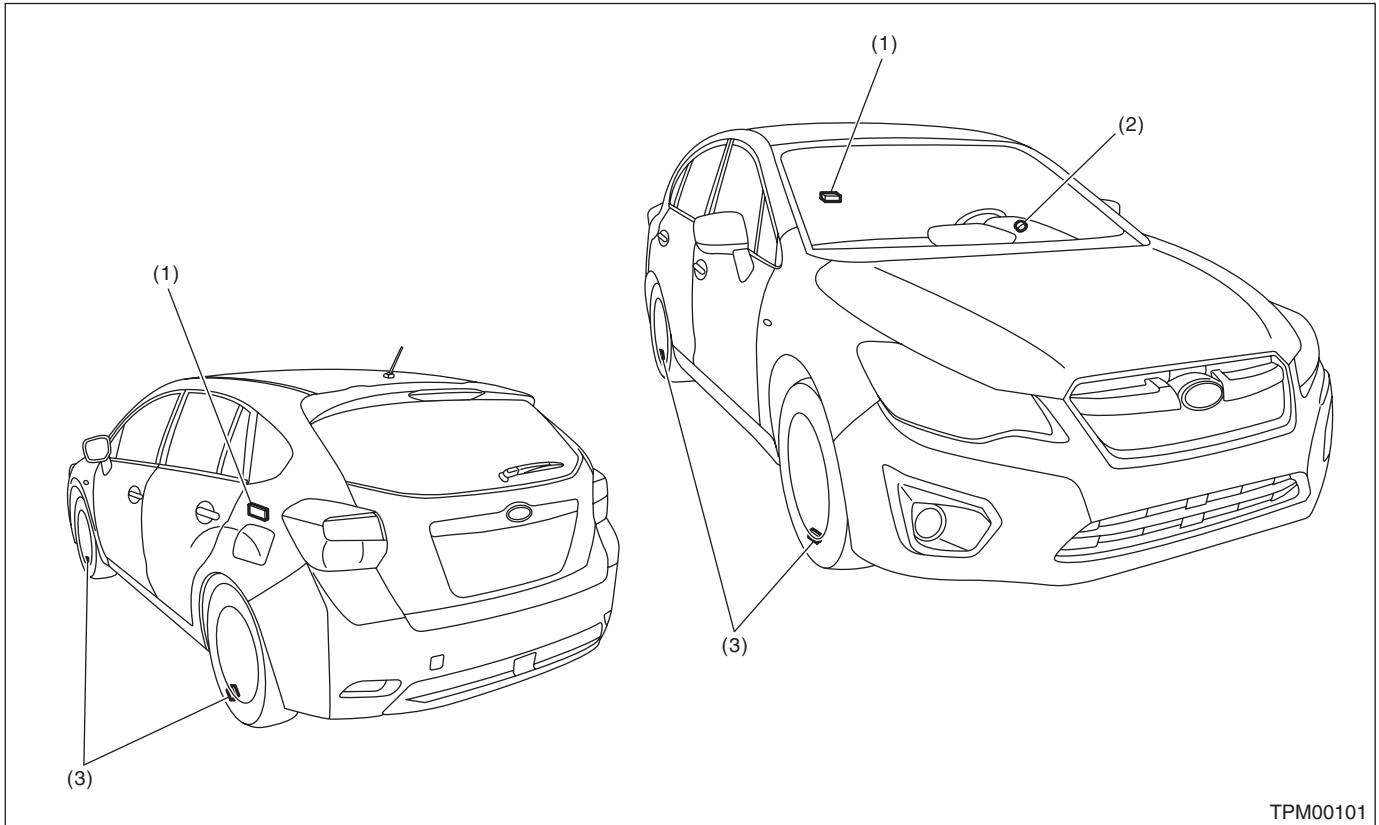


(1) TPMS & keyless entry control module

(2) Tire pressure warning light

(3) Snap-in type transmitter

• 5 door model/XV model

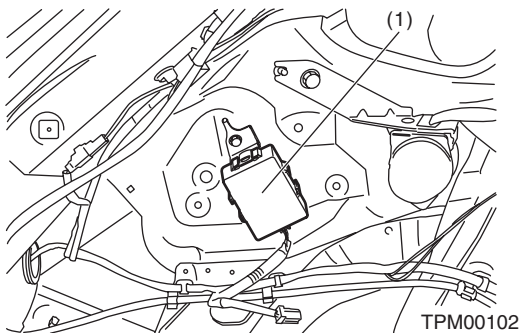

• 4 door model

