

# Air Vent Grille

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

## 29. Air Vent Grille


### A: REMOVAL

#### 1. CENTER GRILLE ASSEMBLY

**CAUTION:**

**Be careful not to damage the interior trims when removing.**

- 1) Disconnect the ground cable from battery.
- 2) On manual A/C models, disconnect the control cables from both sides of the heater and cooling unit assembly.

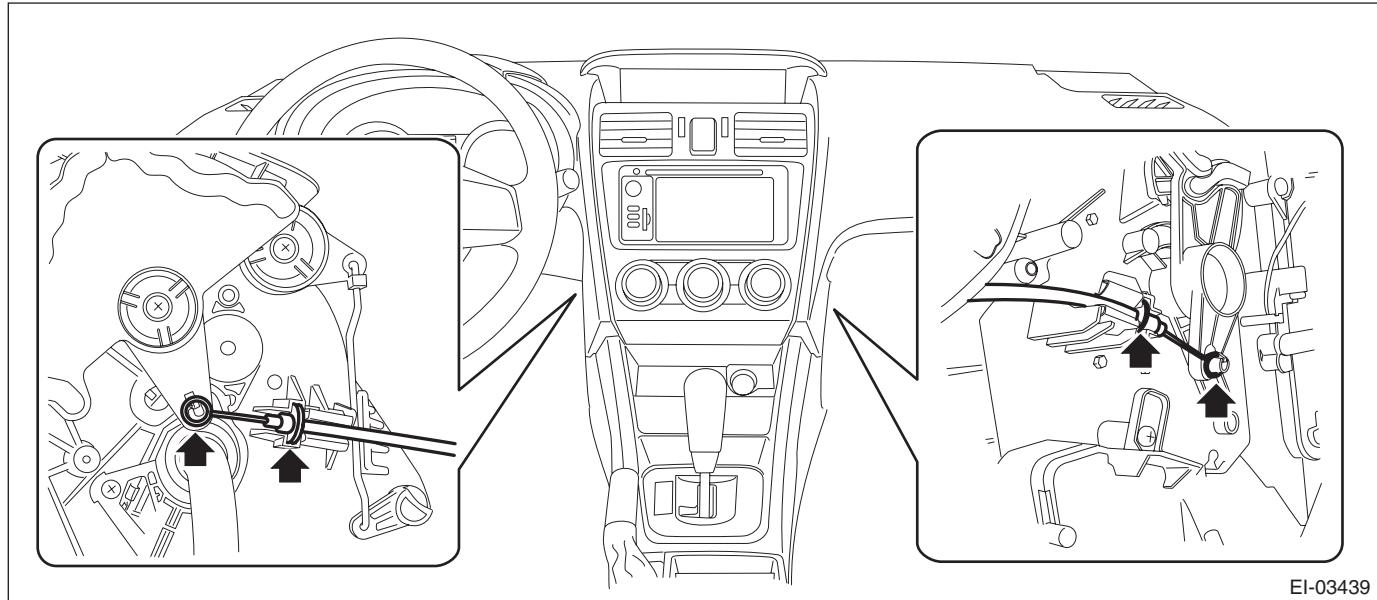

**NOTE:**

Remove the glove box pocket assembly on the passenger's side.


# Air Vent Grille

## HVAC SYSTEM (HEATER, VENTILATOR AND A/C)


3) Remove the panel center assembly.

### CAUTION:

- **Do not put your finger on the fin of the air vent grille. Doing so may damage the fin.**
- **Pull the panel center assembly slowly. Pulling with excessive force may damage the connector.**
  - (1) Insert a plastic remover to the three areas shown by the arrows, and lift up the panel center assembly slightly.
  - (2) With the panel center assembly lifted up slightly, release the claw by using a clip remover wrapped with protective tape.
  - (3) Release the rest of the claws, and pull out the panel center assembly.
  - (4) Disconnect the connectors, and remove the panel center assembly.

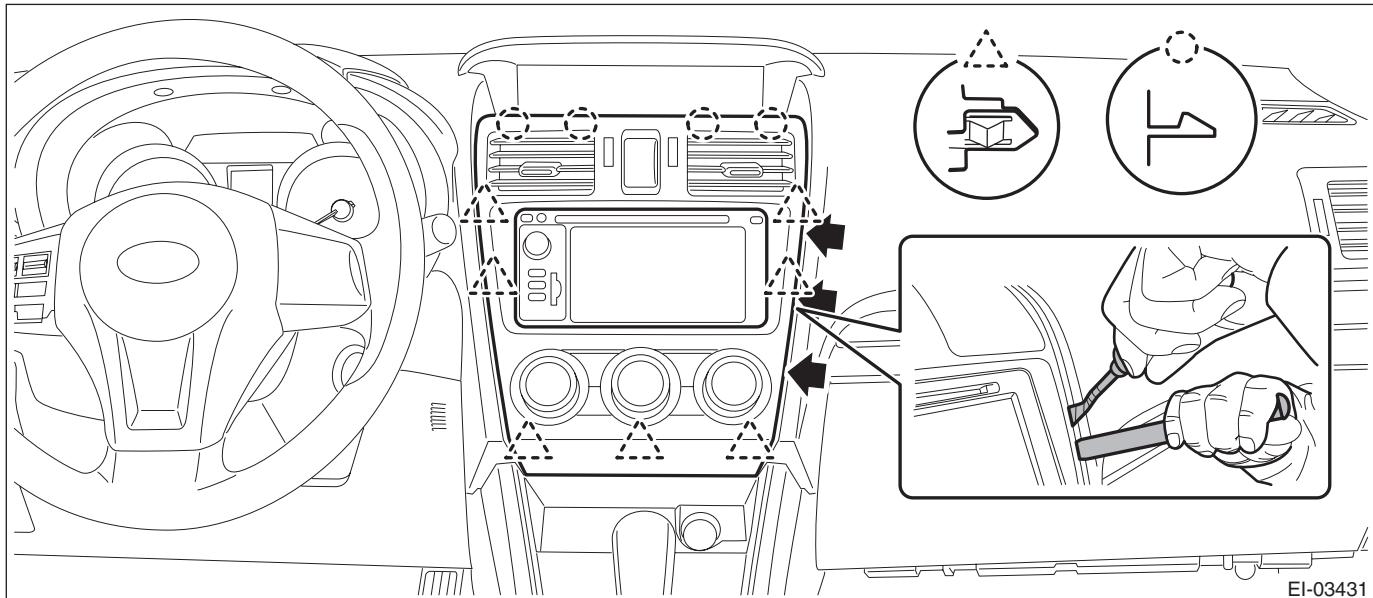

4) Release the claws, and then remove the grille assembly - CTR ventilation from the panel center assembly.

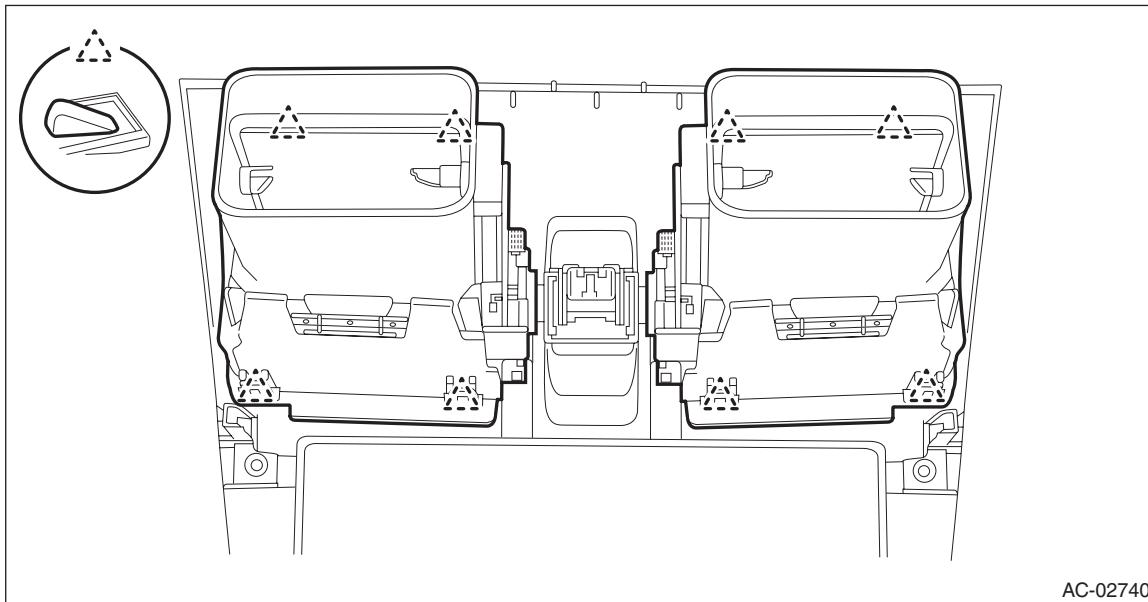


# Air Vent Grille

## HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

### 2. SIDE GRILLE ASSEMBLY


Release the claws, and then remove the grille assembly - ventilation RH.

- LH

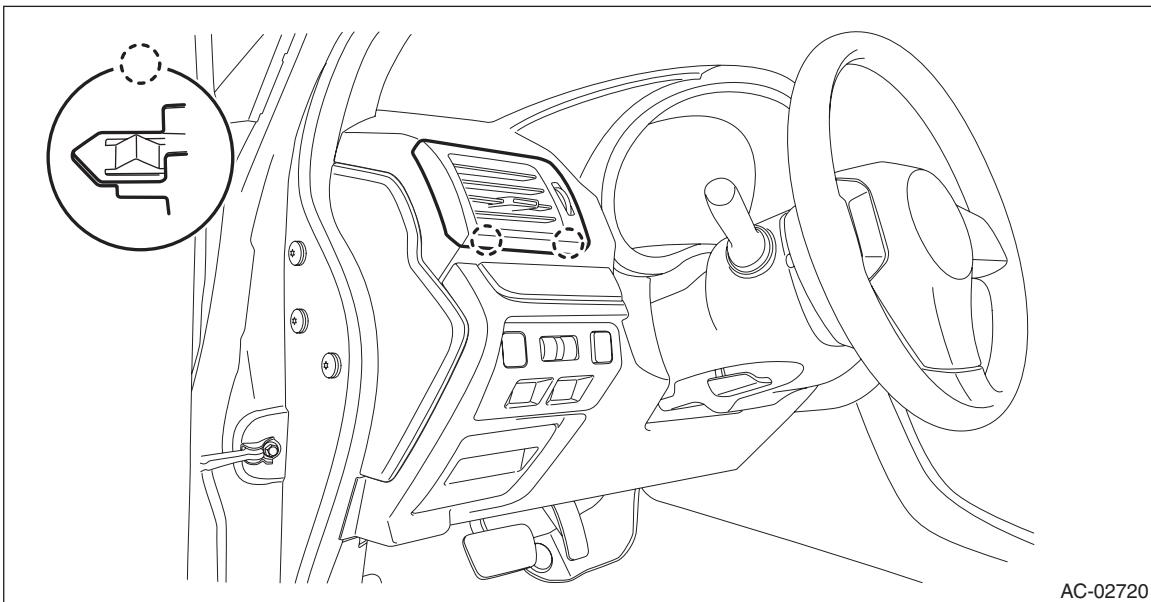

AC-02720

- RH

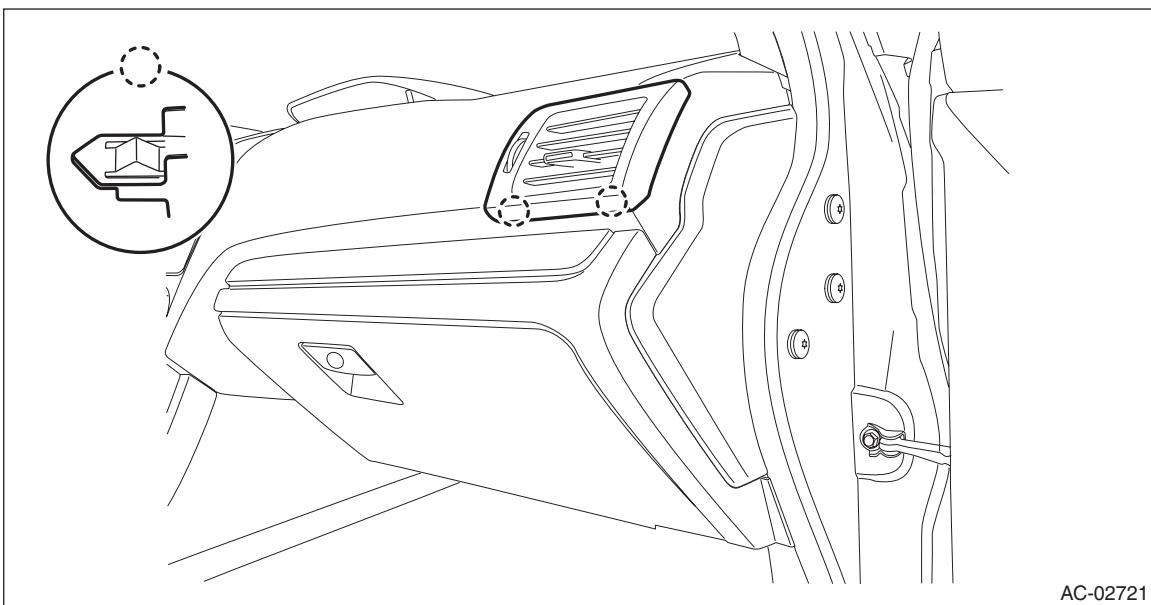

AC-02721

### B: INSTALLATION

#### CAUTION:

After installing the panel center assembly or grille assembly - ventilation, check that the air vent grille is inserted correctly into the air vent duct.

Install each part in the reverse order of removal.

### C: INSPECTION

- 1) Check that the direction and amount of air can be adjusted smoothly. Replace the grille assembly - ventilation if faulty.
- 2) Check that the adjustment can be maintained in each position. Replace the grille assembly - ventilation if faulty.