


# Heater Vent Duct

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

## 31. Heater Vent Duct

### A: REMOVAL

- 1) Remove the instrument panel assembly. <Ref. to EI-74, REMOVAL, Instrument Panel Assembly.>
- 2) Remove the screws and remove the duct - center vent (A) and the duct - side ventilation (B) on LH and RH sides.

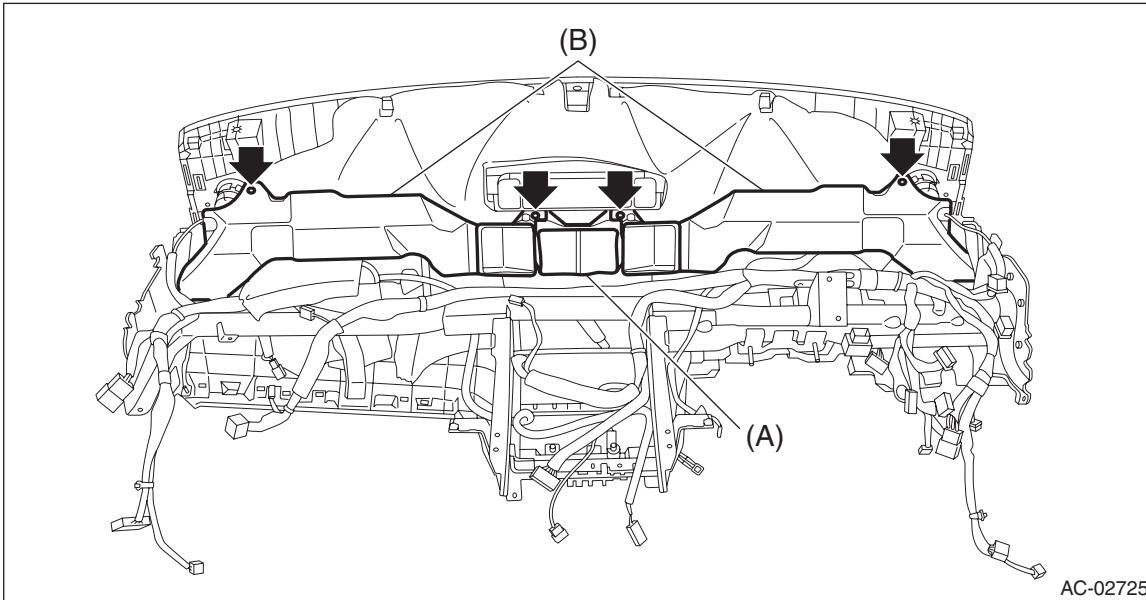

### B: INSTALLATION

Install each part in the reverse order of removal.

#### NOTE:

Refer to "INSTALLATION" of "Instrument Panel Assembly". <Ref. to EI-92, INSTALLATION, Instrument Panel Assembly.>