


## 9. Outer Mirror Assembly

### A: REMOVAL

- 1) Remove the trim panel - front door. <Ref. to EI-61, FRONT DOOR, REMOVAL, Door Trim.>
- 2) Remove the outer mirror assembly.
  - (1) Remove the connector clip that is installed on the panel assembly - front door, and disconnect the connector.
  - (2) Turn over the sealing cover - front door.
  - (3) Remove the bolts to remove outer mirror assembly.

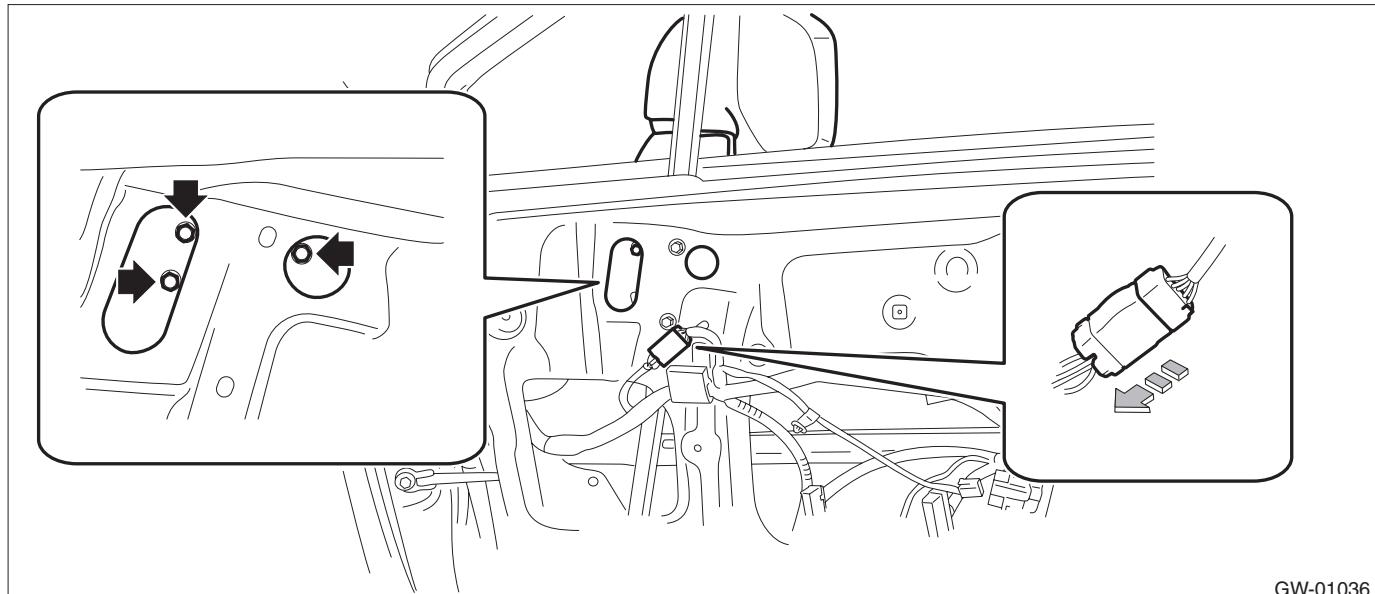

GW-01036

### B: INSTALLATION

Install each part in the reverse order of removal.

**Tightening torque:**


**Outer mirror assembly: 7.5 N·m (0.76 kgf·m, 5.5 ft-lb)**

# Outer Mirror Assembly

## GLASS/WINDOWS/MIRRORS

### C: INSPECTION

- 1) Disconnect the outer mirror connector.
- 2) Apply battery voltage between the outer mirror connector terminals and check the mirror operation.

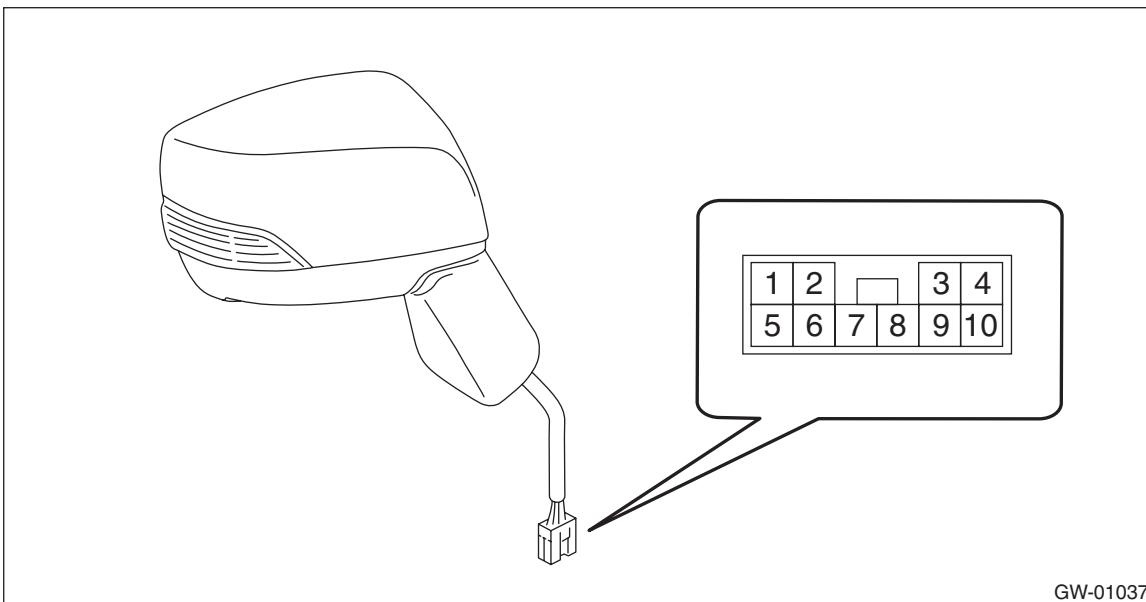

Terminal No.	Inspection conditions	Switch position
—	—	OFF
3 (+) — 8 (-)	Apply battery voltage between terminals.	UP
8 (+) — 3 (-)	Apply battery voltage between terminals.	DOWN
7 (+) — 3 (-)	Apply battery voltage between terminals.	LEFT
3 (+) — 7 (-)	Apply battery voltage between terminals.	RIGHT

- 3) If it does not operate normally, replace the outer mirror assembly.