

11. User Customizing

A: OPERATION

For operation procedures, refer to the “PC application help for Subaru Select Monitor”.

B: LIST

- Combination meter

Items to be displayed	Initial setting value	Customize setting	Note
External air temperature compensation value	$\pm 0^{\circ}\text{C}$	$-5^{\circ}\text{C} — +5^{\circ}\text{C}$	Temperature compensation can only be performed by 1°C (1°C change = 1.8°F) interval.
Mean fuel consumption compensation value	$\pm 0^{\circ}\%$	$+10\% — -10\%$	—