


### 10. Rear Outer Handle

#### A: REMOVAL


- 1) Raise the glass assembly - rear door to the top position.
- 2) Remove the trim panel - rear door. <Ref. to EI-62, REAR DOOR, REMOVAL, Door Trim.>
- 3) Remove the sealing cover - rear door.

**CAUTION:**


- **Carefully remove the butyl tape. Excessive force will easily break the sealing cover - rear door.**
- **If the sealing cover - rear door gets broken, replace it with a new part.**
  - (1) Remove the screw to remove the bracket - door trim rear.
  - (2) Disconnect connectors.
  - (3) Carefully remove the butyl tape to remove the sealing cover - rear door.

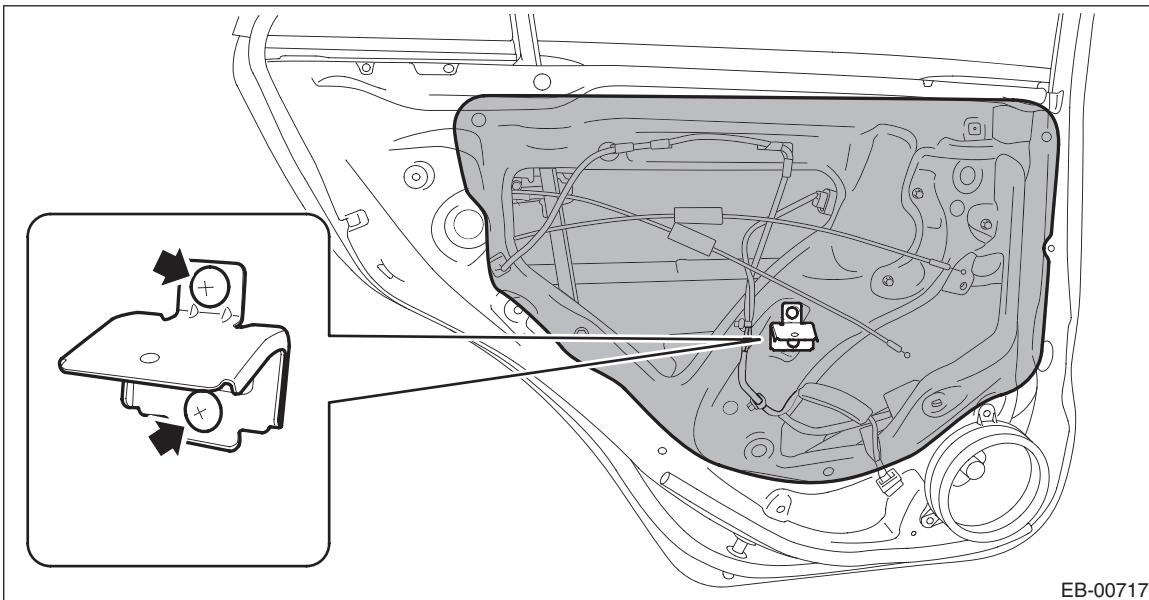

- 4) Remove the screws and move downward the latch & actuator assembly - rear.

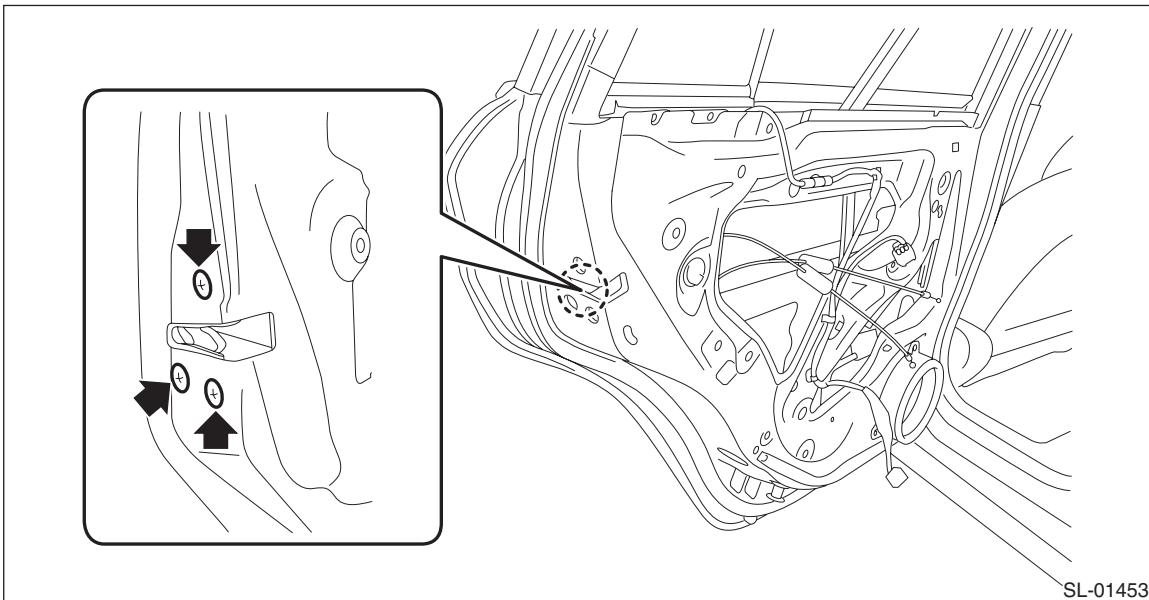

5) Remove the holder of the frame assembly - rear door outer.

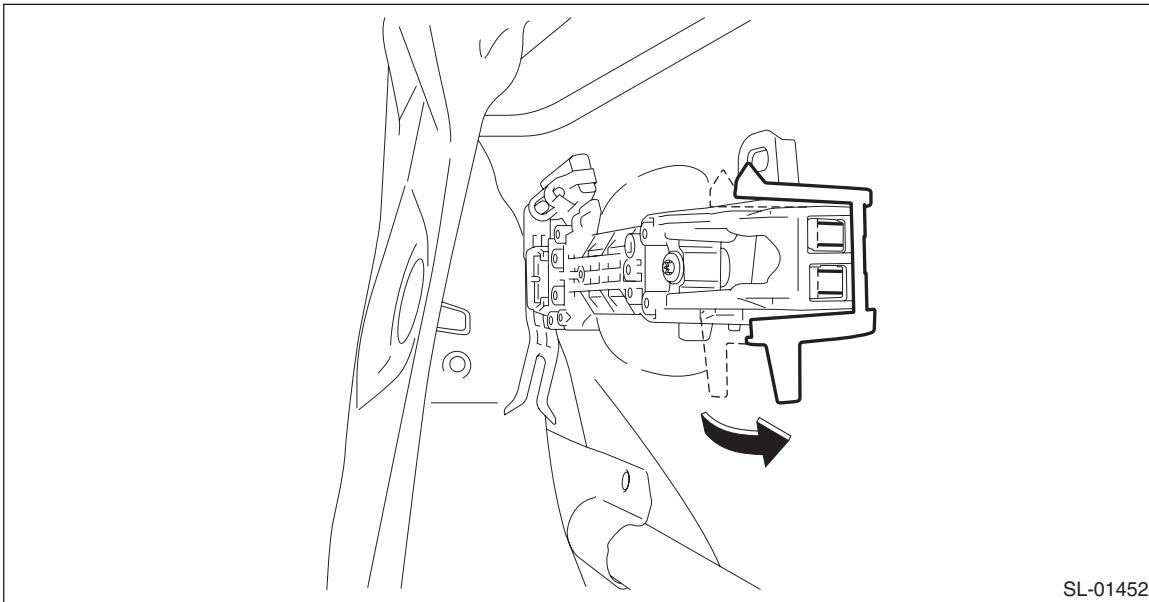


6) Remove the cover - handle rear outer.

**PREPARATION TOOL:**

**TORX® T30**

- (1) Loosen the TORX® bolt.
- (2) Release the claws, and then remove the cover - handle rear outer.

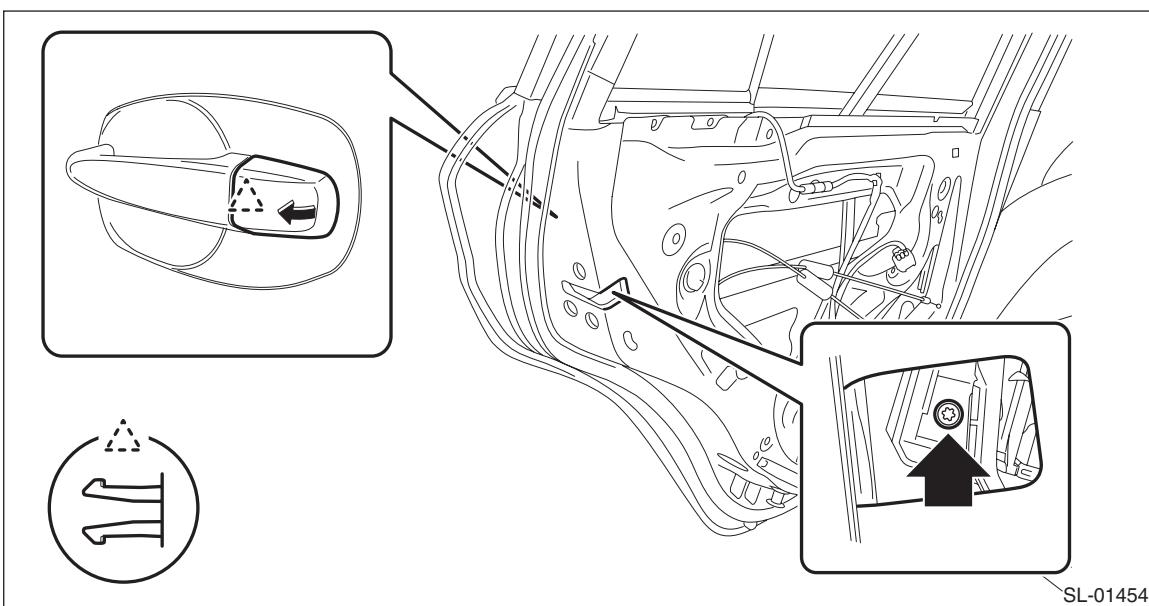


## Rear Outer Handle

### SECURITY AND LOCKS

7) Remove the handle - door outer by moving it rearward.

**CAUTION:**

**Do not apply excessive force to remove the handle - door outer from the panel assembly - rear door. The panel assembly - rear door may be deformed.**

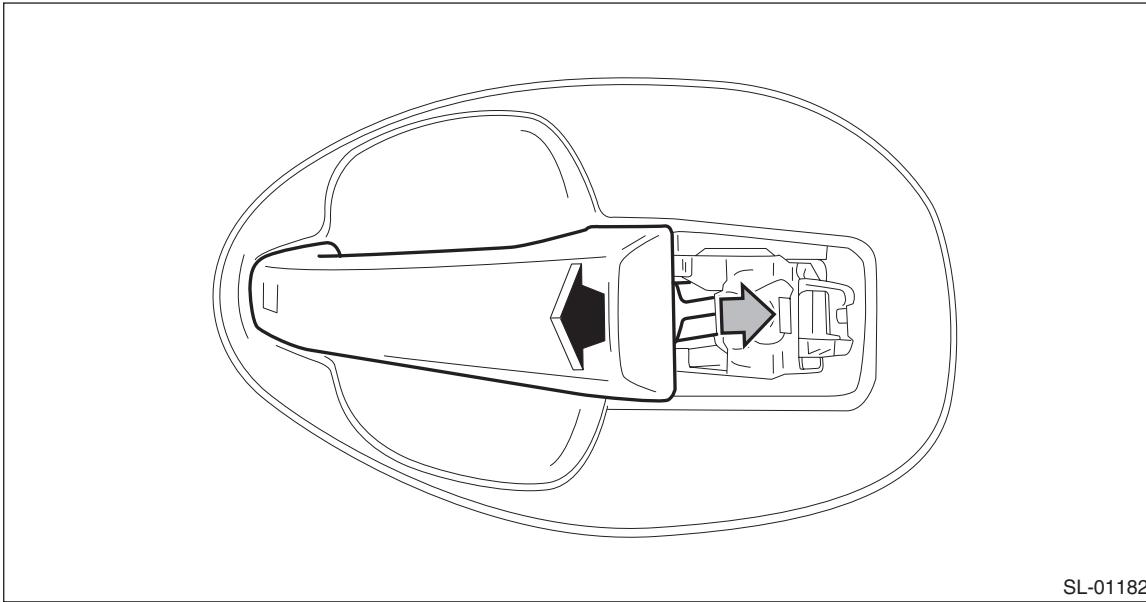


8) Remove the frame assembly - rear door outer.


**PREPARATION TOOL:**

**TORX® T30**

(1) Remove the spacer - door handle outer.

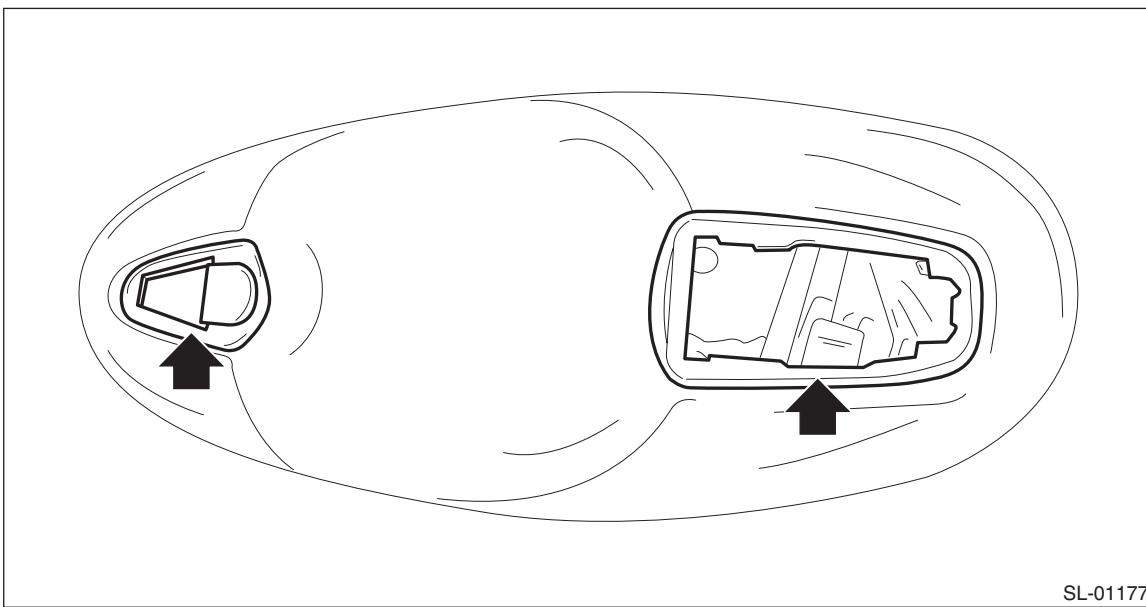

(2) Loosen the TORX® bolt and remove the frame assembly - rear door outer from inside the panel assembly - rear door.

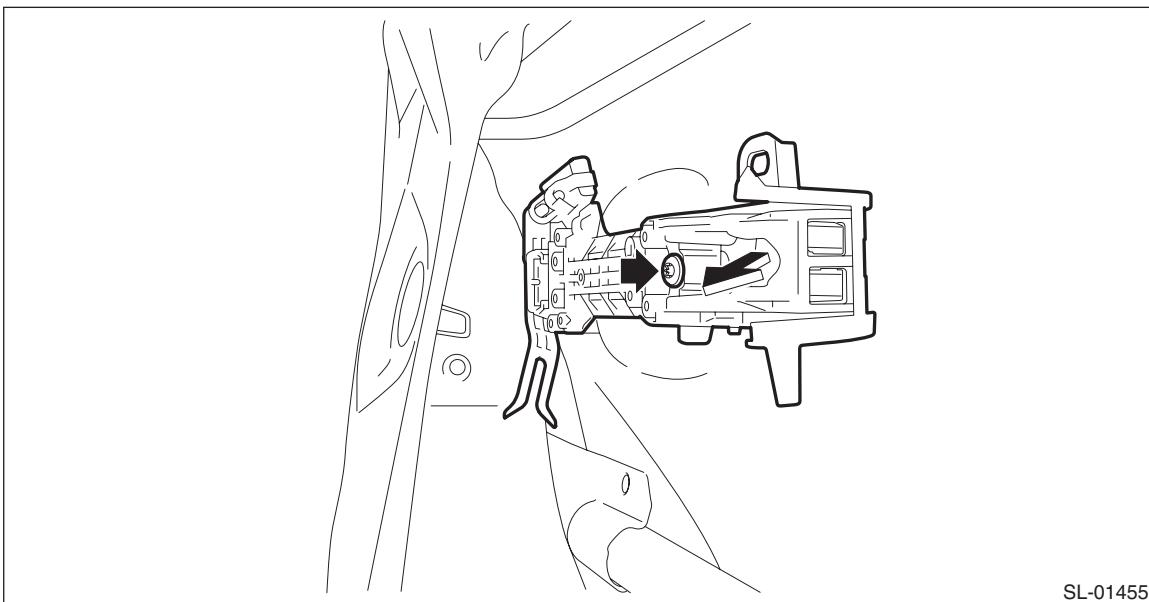

SL-01455

### B: INSTALLATION

1) Before installation, check the following items.

- Lever is free from deformation.
- Grease is applied sufficiently to lever joints.

If grease is insufficient, add it as necessary before assembling.

2) Install each part in the reverse order of removal.

#### *Tightening torque:*

*Refer to “COMPONENT” of “General Description”. <Ref. to SL-2, DOOR LOCK ASSEMBLY, COMPONENT, General Description.>*

### C: INSPECTION

Check if the outer handle operates normally.

If the lever is faulty, replace the handle - door outer.