


16. Remote Openers

A: REMOVAL


1. FRONT HOOD OPENER

- 1) Remove the opener handle.
 - (1) Remove the cable.
 - (2) Remove the bolt, and remove the opener handle.

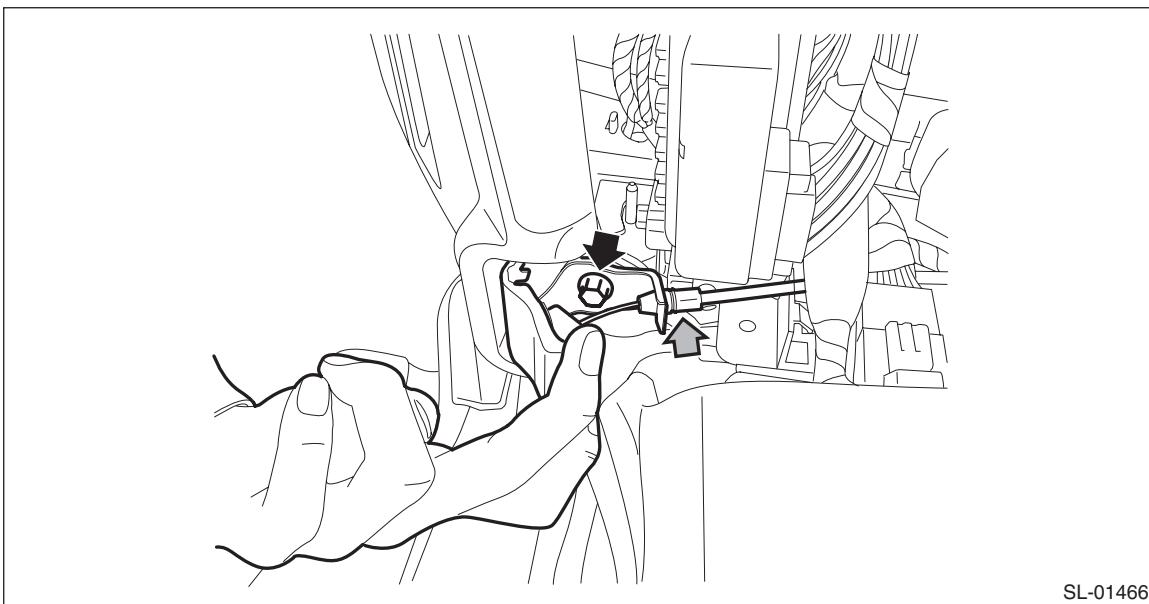

- 2) Remove the following parts and remove the cable clip and cable.

- Lock assembly - front hood: <Ref. to SL-52, REMOVAL, Front Hood Lock Assembly.>
- Cover assembly - instrument panel LWR driver: <Ref. to EI-65, REMOVAL, Instrument Panel Lower Cover.>

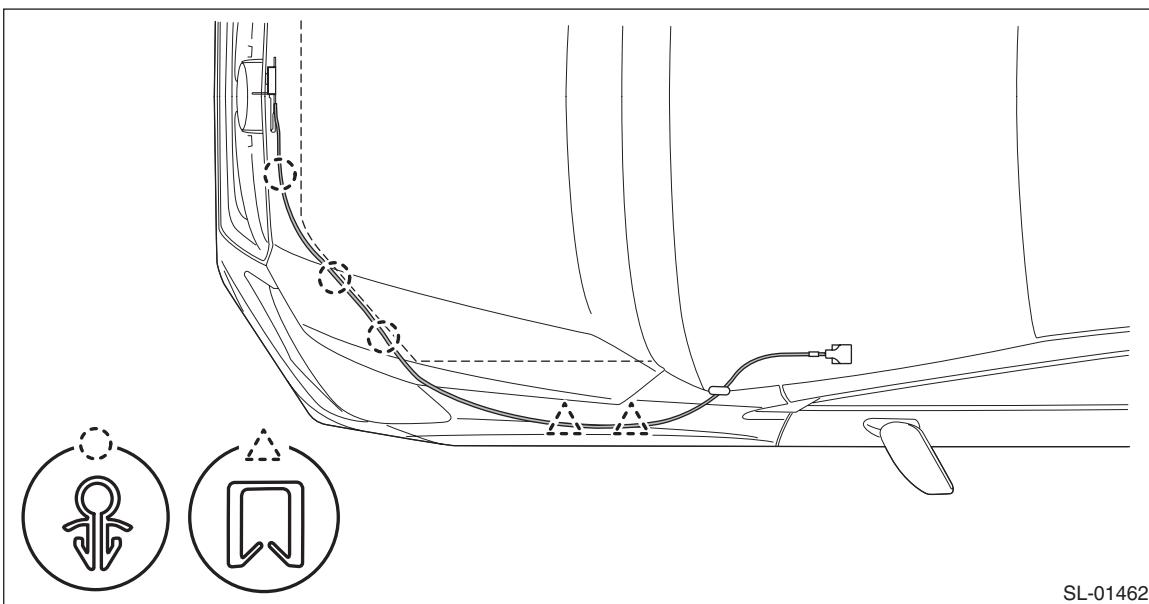


Remote Openers

SECURITY AND LOCKS

2. TRUNK LID OPENER


1) Remove the cover - handle.

- (1) Open the cover by using a flat tip screwdriver.
- (2) Remove the screws and detach the cover - handle.

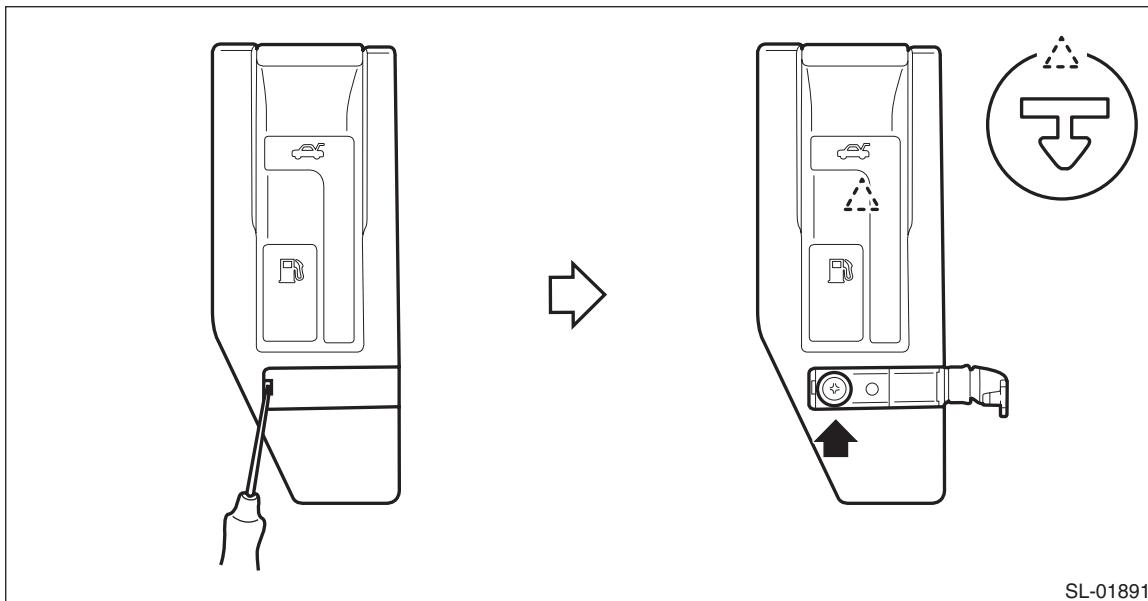

2) Remove the pull handle - opener.

- (1) Remove the nut.
- (2) Remove the cable from pull handle - opener.

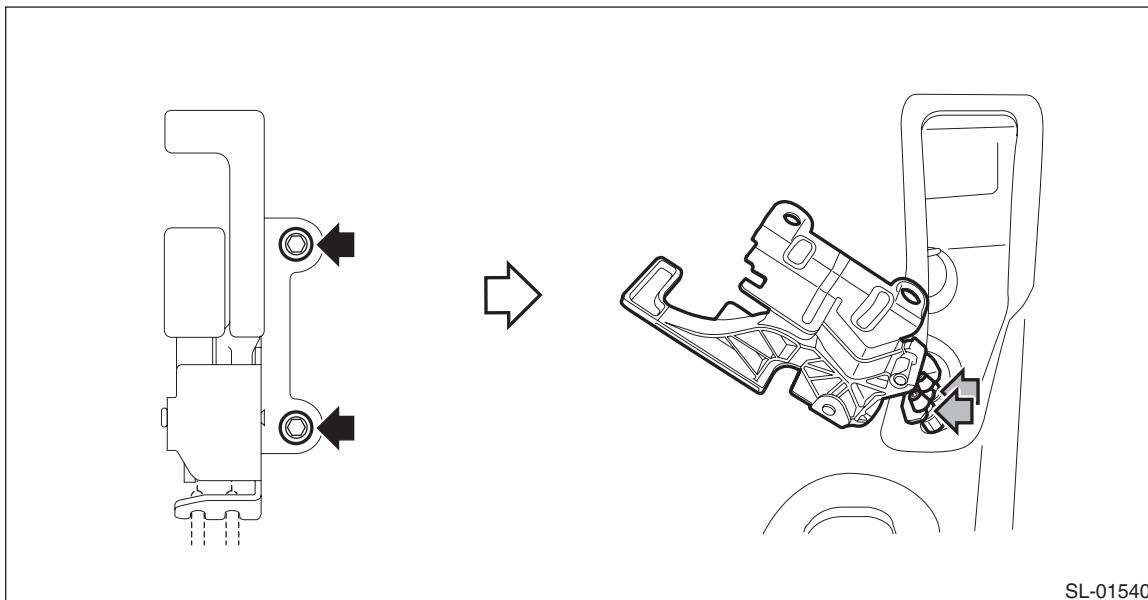


3) Remove the trim panel - trunk side RH. <Ref. to EI-117, TRUNK ROOM TRIM, REMOVAL, Trunk Room Trim.>


4) Remove the lower inner trim. <Ref. to EI-95, REMOVAL, Lower Inner Trim.>

5) Remove the trim panel - trunk lid. <Ref. to EI-117, TRUNK LID TRIM, REMOVAL, Trunk Room Trim.>

6) Disconnect the cable from the lock assembly - trunk lid.

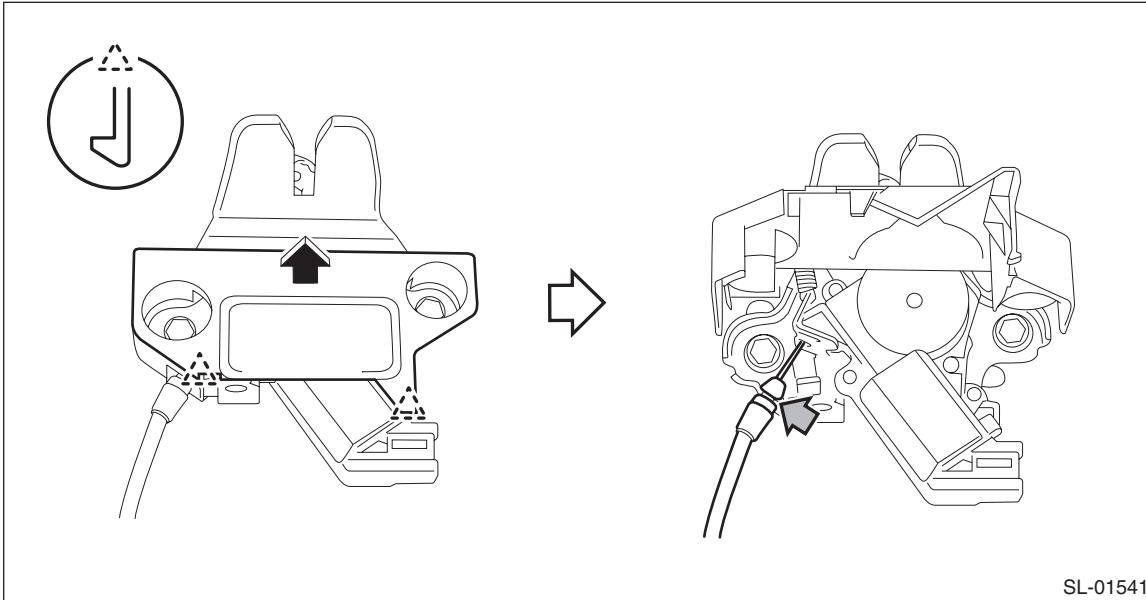

7) Remove the cable clip, and remove the cable.

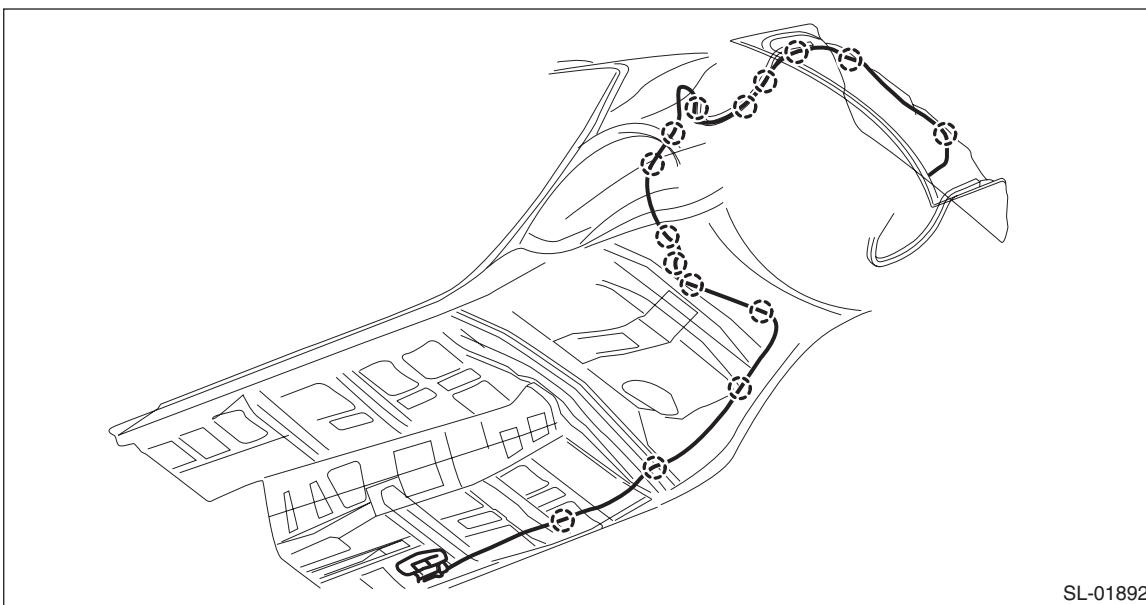

Remote Openers


SECURITY AND LOCKS

3. FUEL FLAP OPENER


1) Remove the cover - handle.

- (1) Open the cover by using a flat tip screwdriver.
- (2) Remove the screws and detach the cover - handle.

- 4 door model

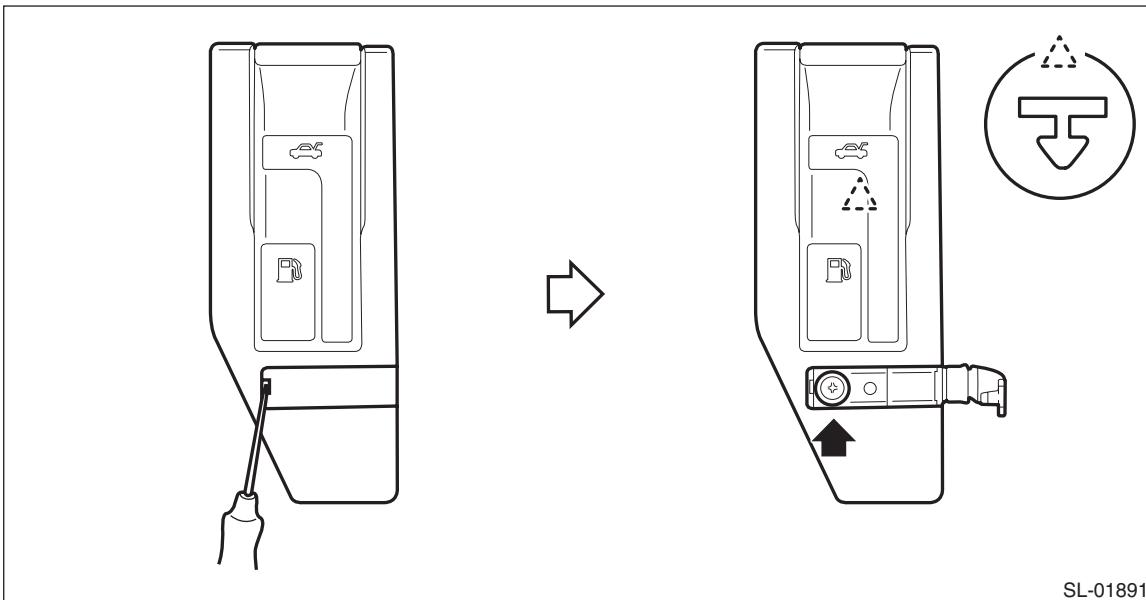


- 5 door model/XV model

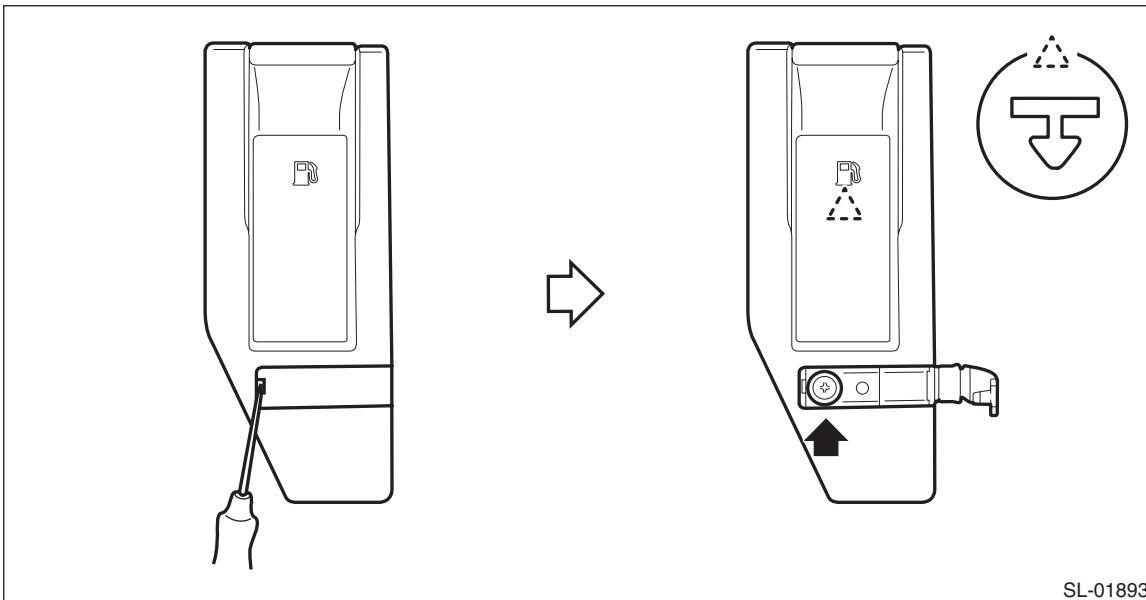

2) Remove the pull handle - opener.

(1) Remove the nut.

(2) Remove the cable from pull handle - opener.

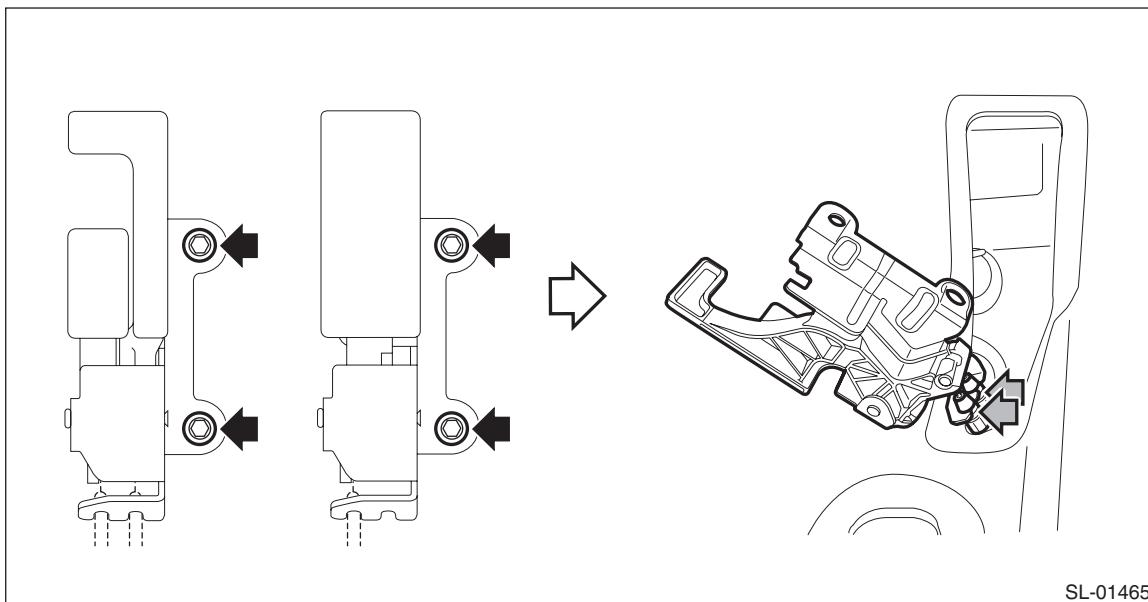


3) Remove the trim panel - trunk side RH. (4 door model) <Ref. to EI-117, TRUNK ROOM TRIM, REMOVAL, Trunk Room Trim.>

4) Remove the trim panel - rear apron RH. (5 door model/XV model) <Ref. to EI-108, 5 DOOR MODEL/XV MODEL, REMOVAL, Rear Quarter Trim.>

5) Remove the fuel lock inside the quarter panel.

(1) Press the claws of the fuel lock.

(2) While keeping the condition in step (1), pull the fuel lock to the rearward of the vehicle.

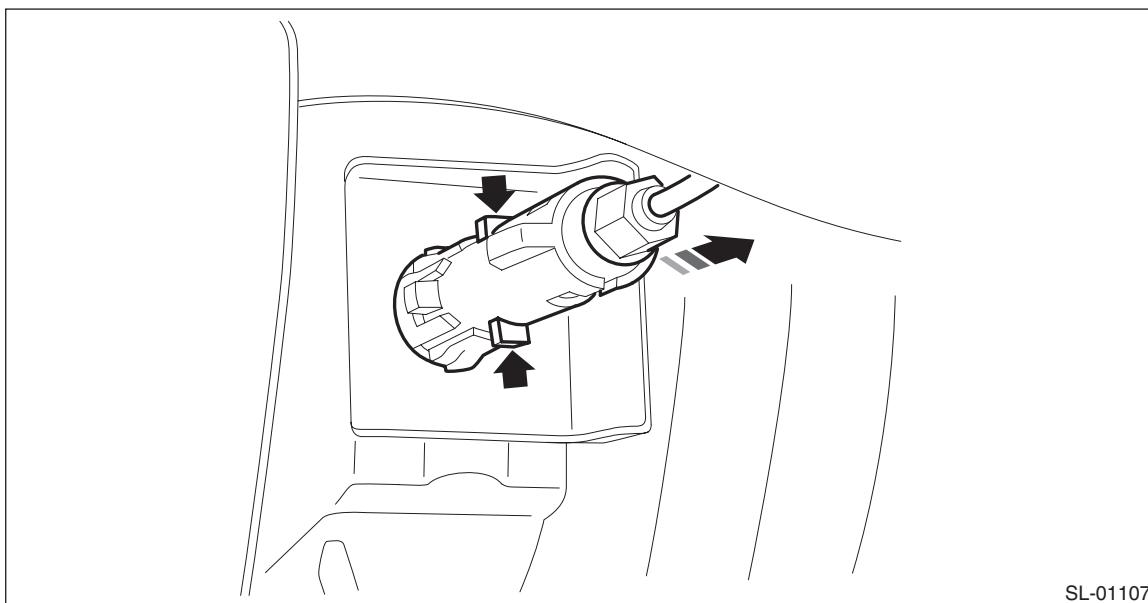


6) Remove the lower inner trim. <Ref. to EI-95, REMOVAL, Lower Inner Trim.>

Remote Openers


SECURITY AND LOCKS

7) Remove the cable clip, and remove the cable.

- 4 door model

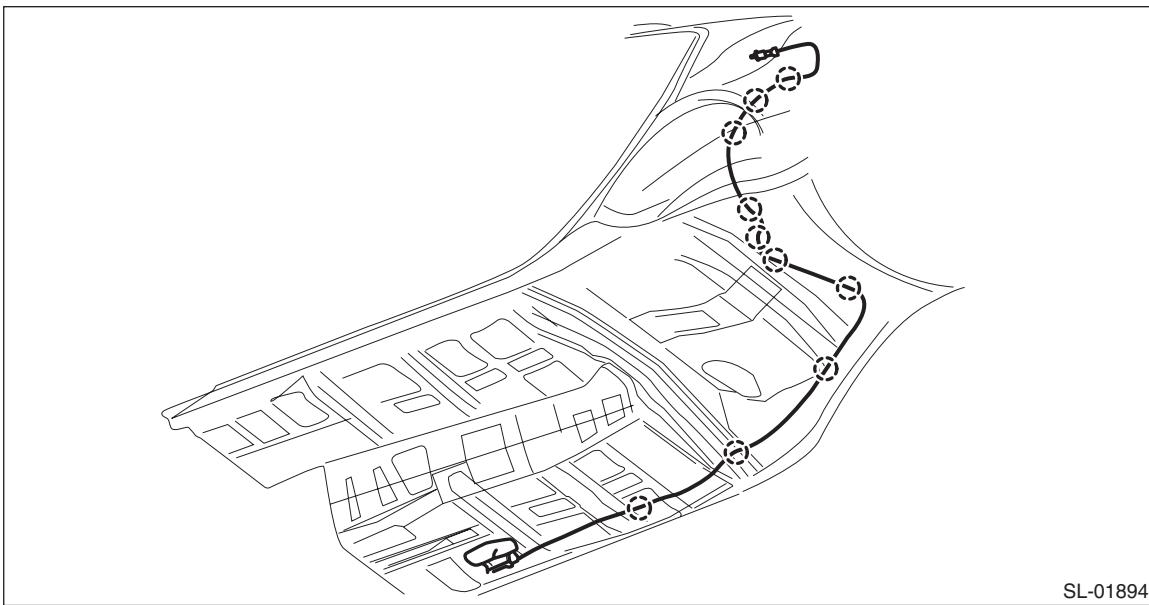

- 5 door model/XV model

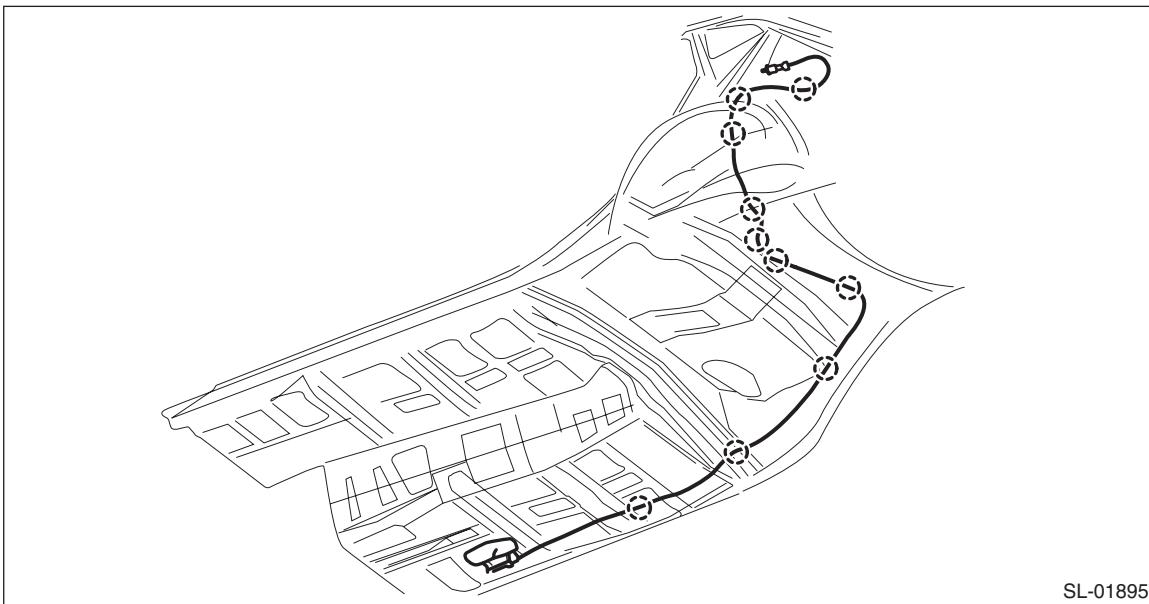

B: INSTALLATION

1) Before installation, check the following items.

- Cable is free from deformation such as fray.
- 2) Install each part in the reverse order of removal.

Tightening torque:

Front hood lock: <Ref. to SL-4, FRONT HOOD LOCK, COMPONENT, General Description.>

Remote opener: <Ref. to SL-5, REMOTE OPENER, COMPONENT, General Description.>

C: INSPECTION

Check if the front hood and fuel flap operate normally.