


## 21. Keyless Entry Control Module

### A: REMOVAL

#### 1. 4 DOOR MODEL


- 1) Disconnect the ground cable from battery.
- 2) Remove the trim panel assembly - rear shelf. <Ref. to EI-112, REMOVAL, Rear Shelf Trim.>
- 3) Remove the keyless entry control module.
  - (1) Disconnect the connector.
  - (2) Remove the bolt and then remove the keyless entry control module.

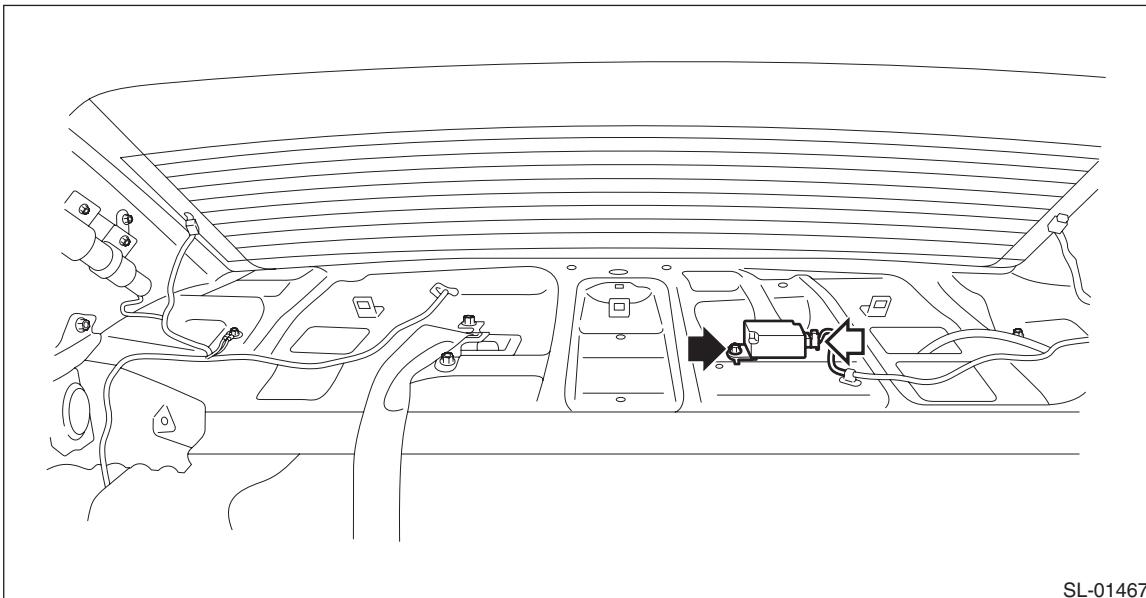

SL-01467

#### 2. 5 DOOR MODEL/XV MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the trim panel - rear apron LH. <Ref. to EI-105, REMOVAL, Rear Quarter Trim.>
- 3) Remove the keyless entry control module.
  - (1) Disconnect the connector.
  - (2) Remove the bolt and then remove the keyless entry control module.

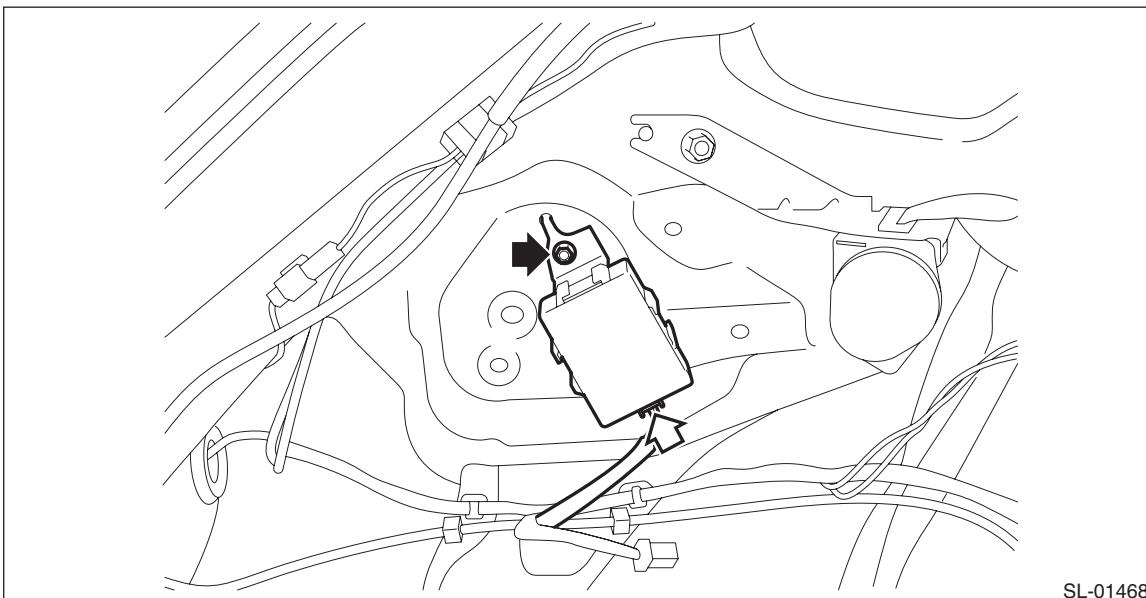

SL-01468

## B: INSTALLATION

Install each part in the reverse order of removal.

**NOTE:**

Refer to “INSTALLATION” of “Rear Shelf Trim” or “Rear Quarter Trim”.

- Rear shelf trim: <Ref. to EI-116, INSTALLATION, Rear Shelf Trim.>
- Rear quarter trim: <Ref. to EI-111, INSTALLATION, Rear Quarter Trim.>

***Tightening torque:***

***Keyless entry control module: 13 N·m (1.33 kgf-m, 9.6 ft-lb)***