



## 26. Immobilizer Antenna

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the cover assembly - column.
  - (1) Remove the screws by turning the steering wheel to right and left.

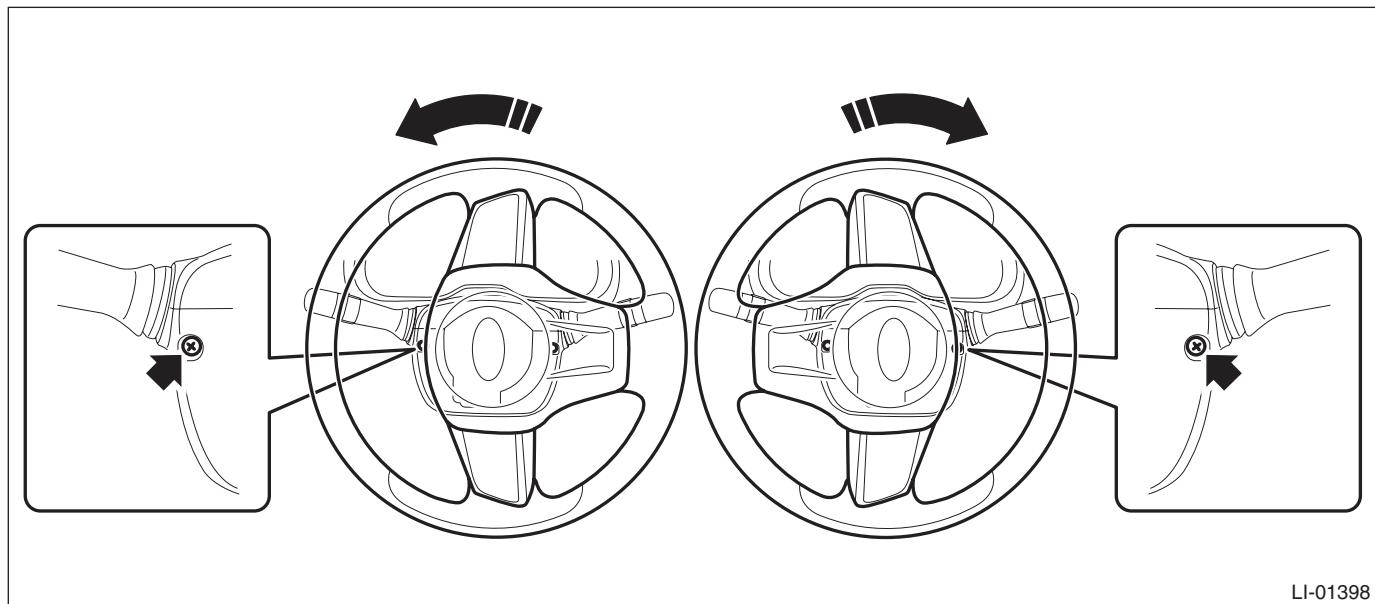

- (2) Release the claw, and remove the cover assembly - column UPR and the cover assembly - column LWR.

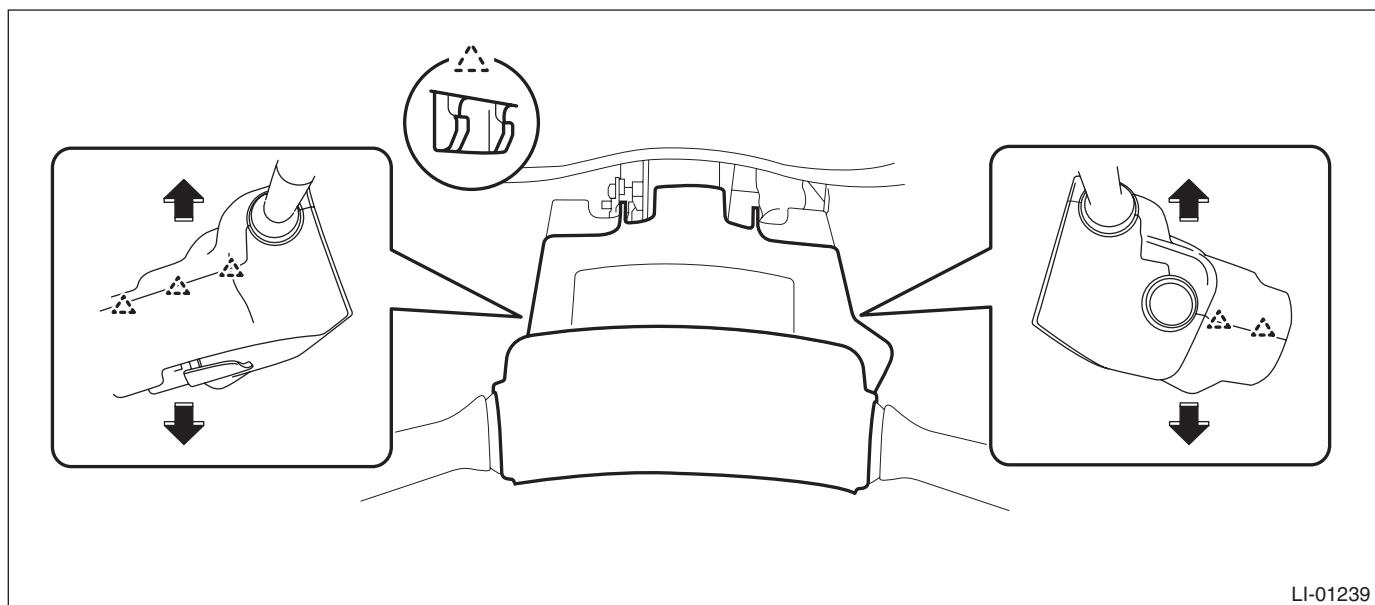


## Immobilizer Antenna

### SECURITY AND LOCKS

3) Disconnect the connector and remove the immobilizer antenna assembly.

#### CAUTION:

**Do not apply excessive force to remove the immobilizer antenna and lock. Otherwise they may be broken because those parts are the products made of a plastic.**

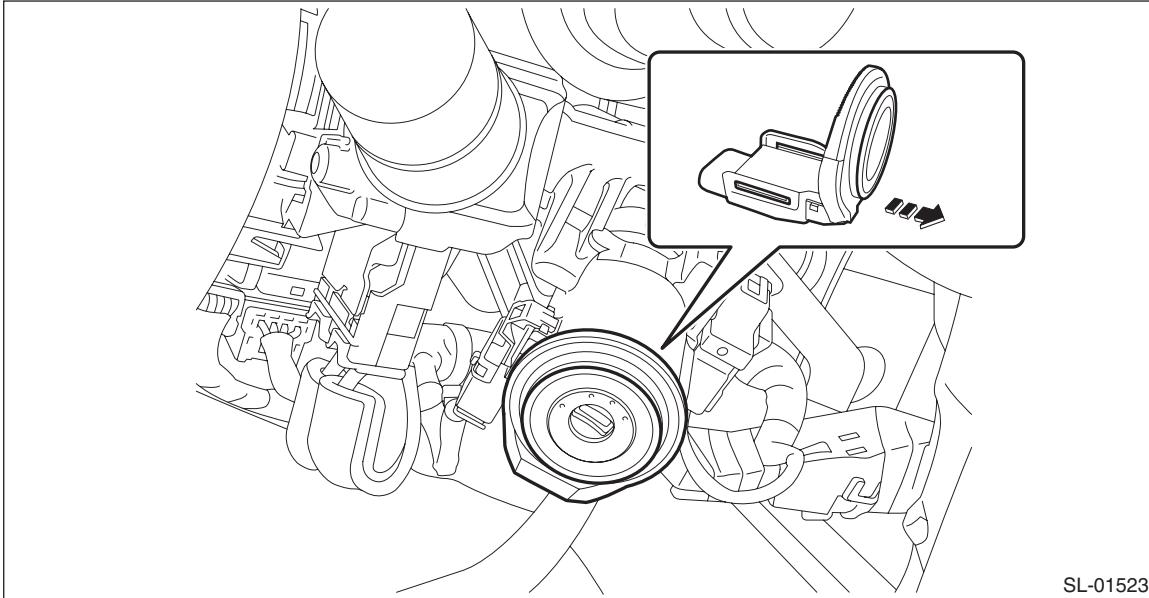

## B: INSTALLATION

Install each part in the reverse order of removal.

# SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

**SR** ●

---

	Page
1. General Description .....	2
2. Relay and Fuse .....	4
3. Sunroof Control System .....	5
4. Glass Lid .....	7
5. Sunroof Assembly .....	12
6. Sunroof Motor .....	18
7. Sunroof Switch .....	20
8. Sunshade .....	23