

## 15. Glove Box


### A: REMOVAL

NOTE:

Refer to "Security and Locks" section for key cylinder replacement. <Ref. to SL-70, GLOVE BOX LID, REPLACEMENT, Key Lock Cylinders.>

1) Remove the pocket assembly.

- (1) Attach the protective tape (a) to the panel center LWR.
- (2) Remove the damper COMPL - pocket.
- (3) Release the stoppers and remove the pocket assembly by pulling it toward you.

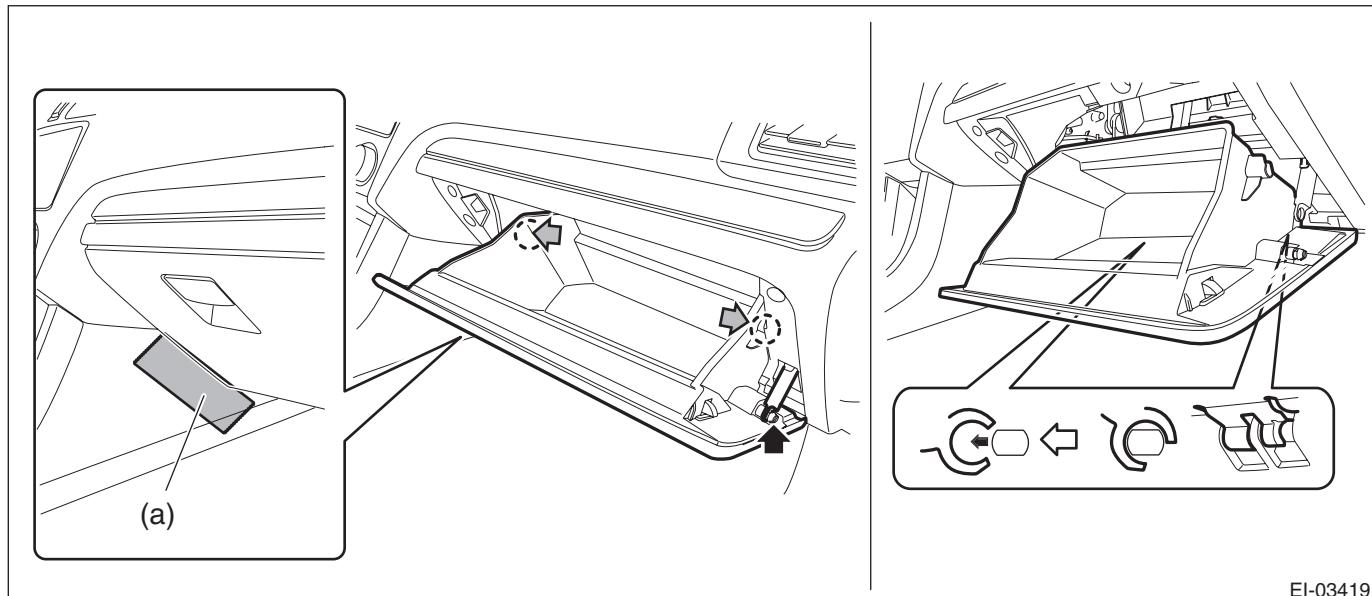

EI-03419


2) Remove the back panel - pocket.

- (1) Remove the clips, and remove the cover - instrument panel side RH.

NOTE:

Remove the cover - instrument panel side RH by using a plastic remover.

- (2) Release the clips, and remove the ornament - panel assembly passenger.

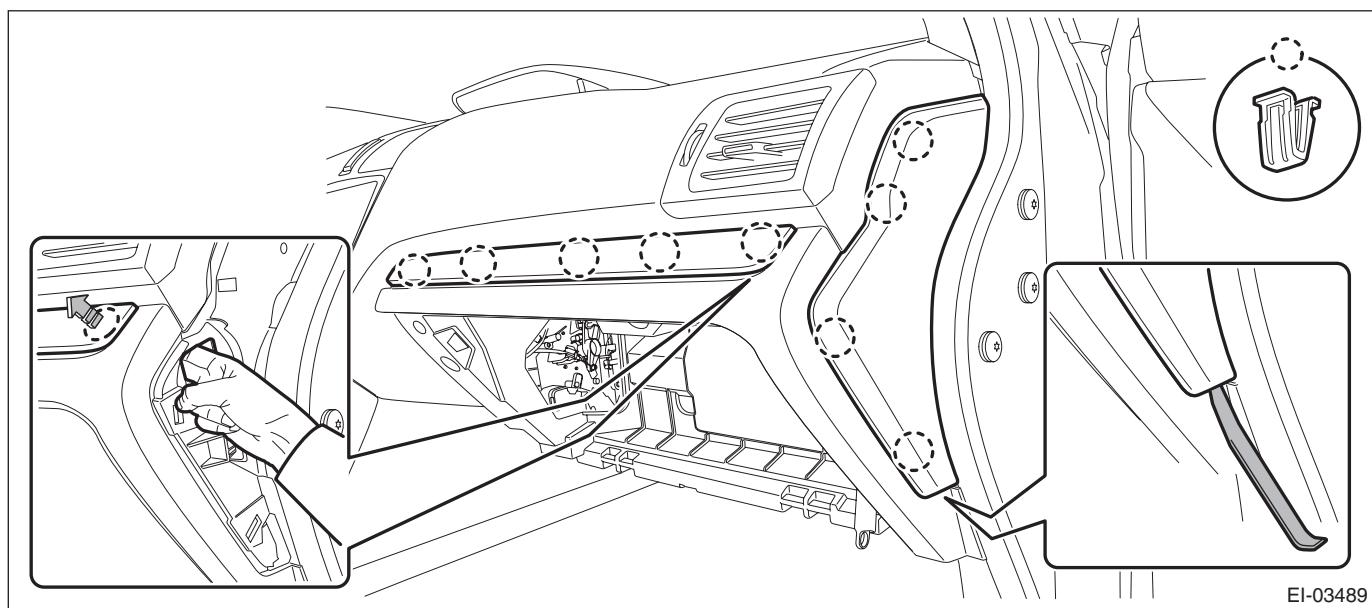

EI-03489


NOTE:

To facilitate the removal, push the clip of the ornament - panel assembly passenger from the backside.

## Glove Box

### EXTERIOR/INTERIOR TRIM

(3) Remove the screws, claws and harness clamp, then remove the back panel - pocket.

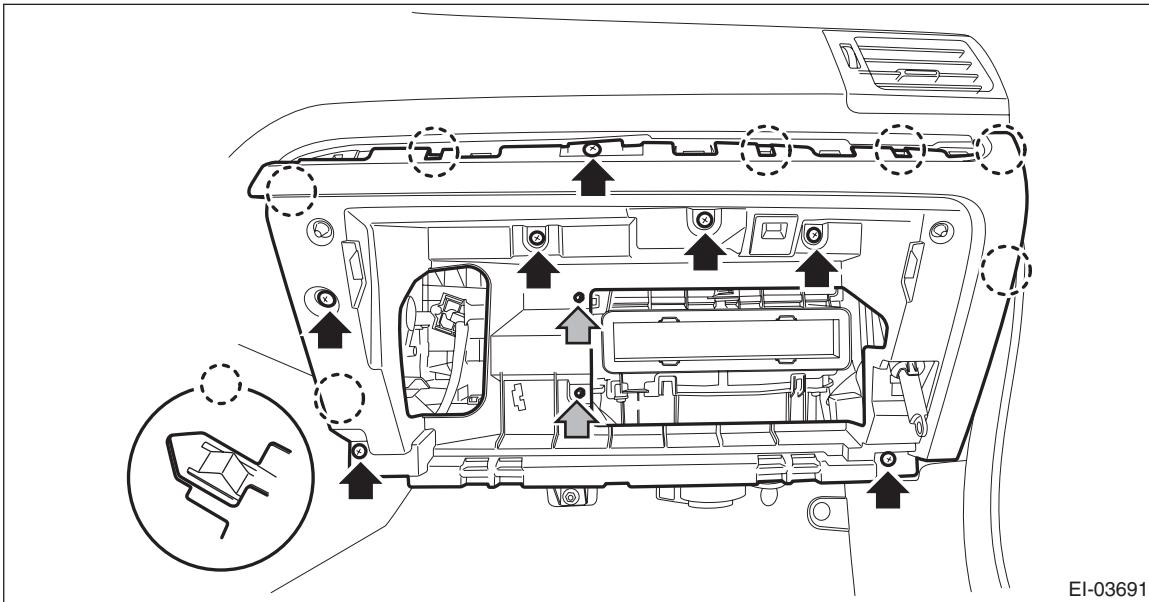

(4) Disconnect the glove box light LED connector.

## B: INSTALLATION

Install each part in the reverse order of removal.