


Electrical Component Location

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

3. Electrical Component Location

A: LOCATION

1. OUTSIDE VEHICLE

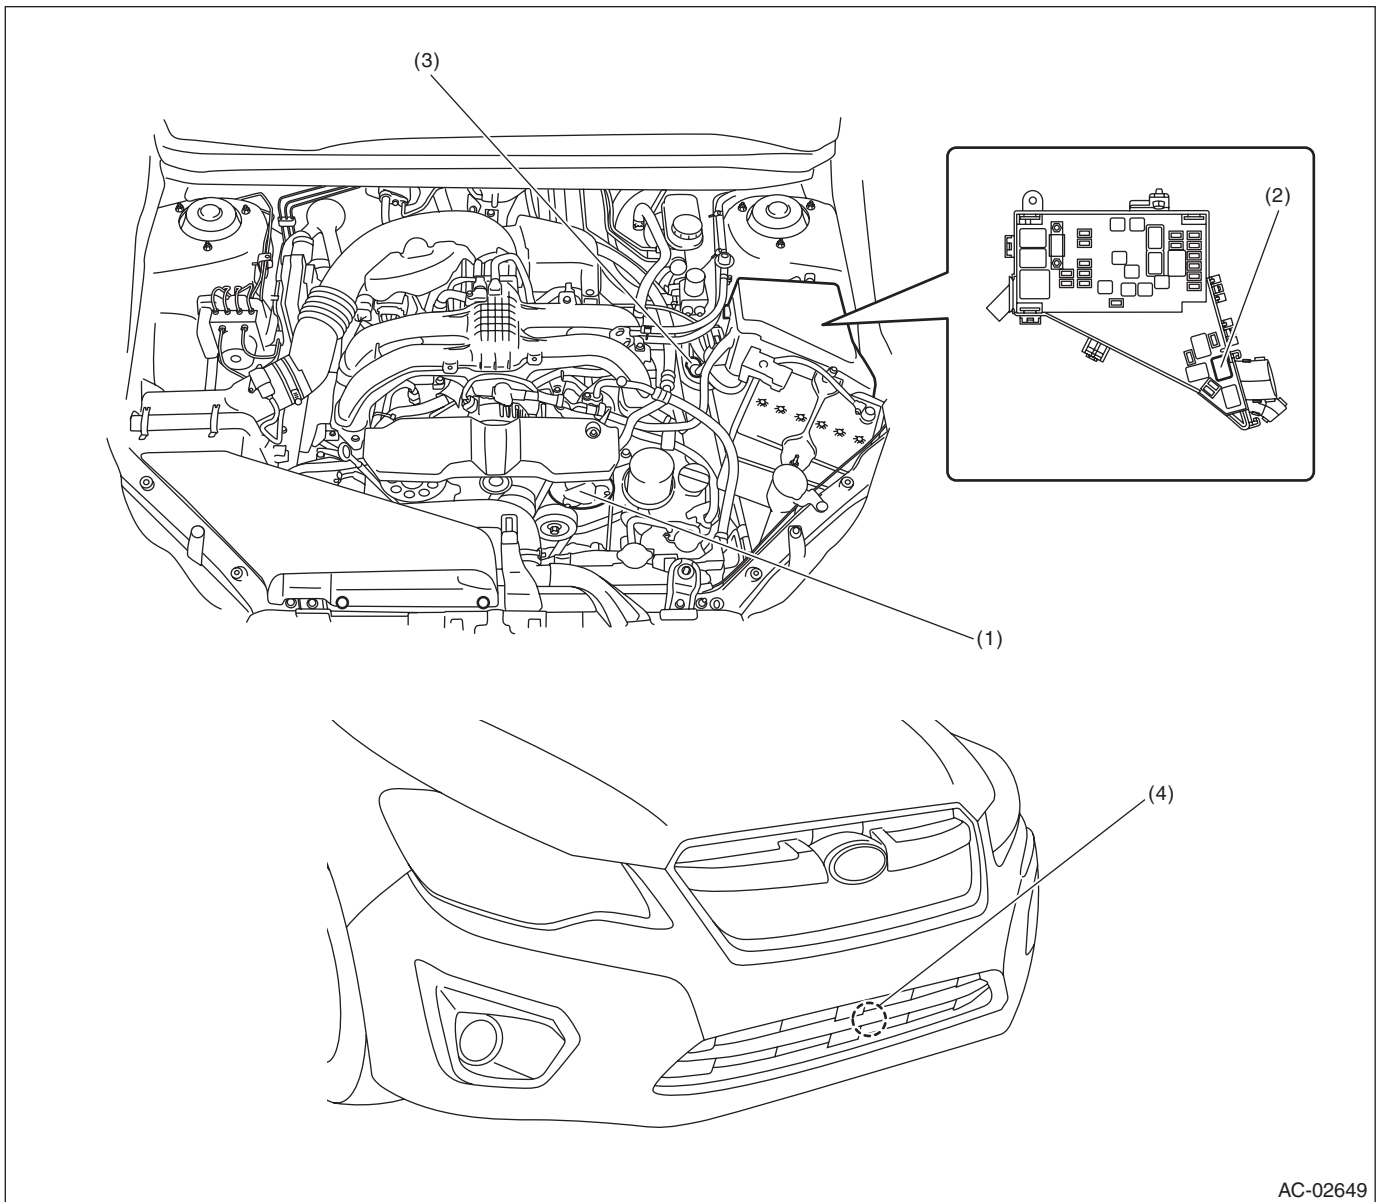

AC-02649

(1) A/C compressor
(2) A/C relay


(3) Pressure switch

(4) Ambient sensor

Electrical Component Location

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

2. COMPARTMENT

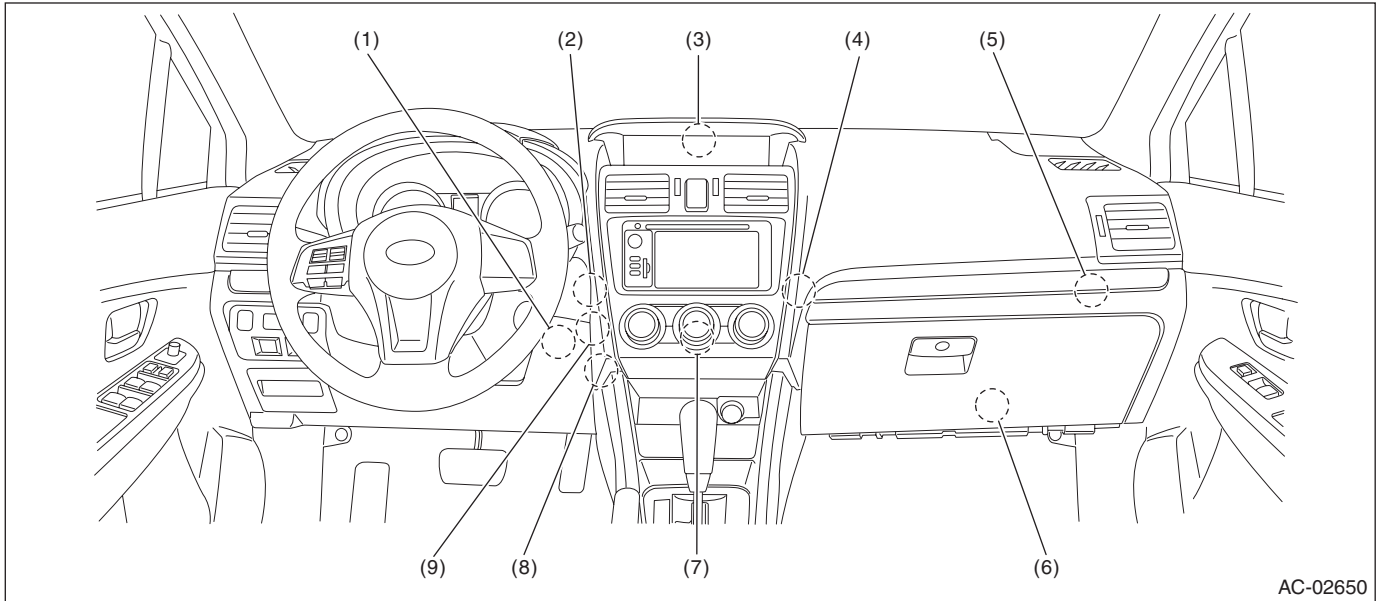

- | | | |
|---------------------------------|---|------------------------|
| (1) In-vehicle sensor | (4) Air mix door actuator *1 or air mix door actuator RH *2 | (7) A/C control panel |
| (2) Air mix door actuator LH *2 | (5) Intake door actuator | (8) Evaporator sensor |
| (3) Sunload sensor | (6) Blower motor | (9) Mode door actuator |

*1: Without left/right independent air conditioning function

*2: With left/right independent air conditioning function