


23.Side Turn Signal Light Assembly

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the cover - cap outer mirror. <Ref. to GW-24, REPLACEMENT, Scalp Cap.>
- 3) Remove the light assembly - side turn mirror.
 - (1) Remove the screws and pull out the light assembly - side turn mirror to the front of the vehicle.
 - (2) Disconnect the connector and remove the light assembly - side turn mirror.

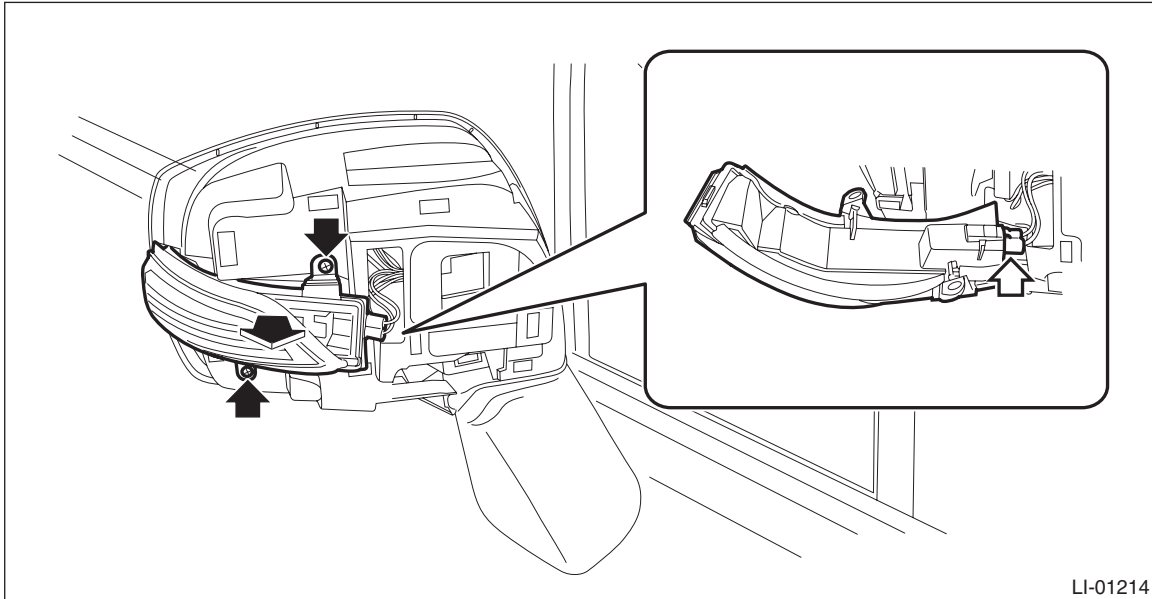

LI-01214

B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

- 1) Install the light to check if it blinks normally.
- 2) If it fails to blink normally, replace the light assembly - side turn mirror with a new part.

NOTE:

Since LED (Light Emitting Diode) is used for the light, replace the light assembly - side turn mirror if the LED burns out.