


## 34. Trunk Room Light


### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the light assembly - trunk room.
  - (1) Disconnect the connector.
  - (2) Turn the light assembly - trunk room counterclockwise to 60° and remove the light.

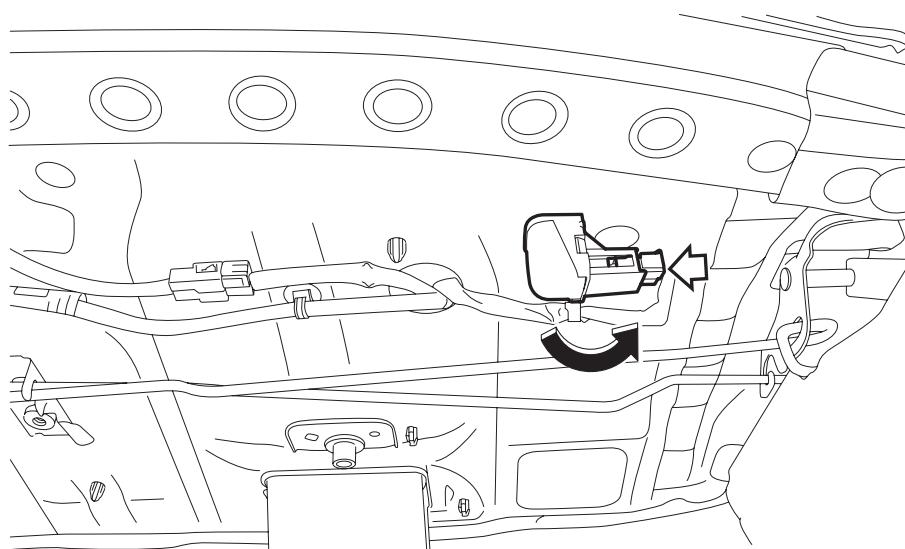

LI-01230

- 3) Release the claws, and detach the lens and bulb.

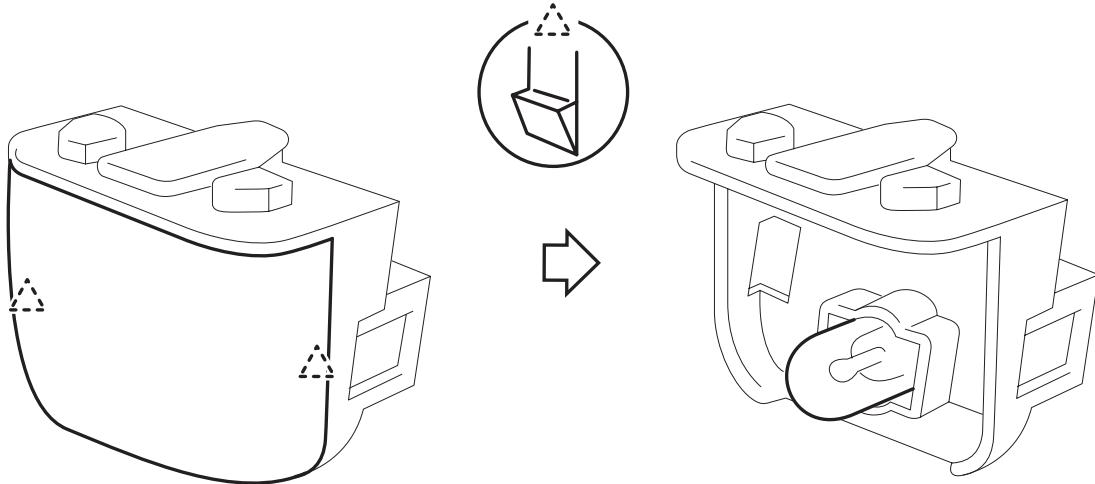

LI-01048

### B: INSTALLATION

Install each part in the reverse order of removal.

### C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) Replace the bulb if it is found defective.