


5. Passenger's Airbag Module

A: REMOVAL

CAUTION:

Refer to "CAUTION" of "General Description" before handling the airbag module. <Ref. to AB-5, CAUTION, General Description.>

- 1) Turn the ignition switch to OFF.
- 2) Disconnect the ground cable from battery and wait for at least 60 seconds before starting work.
- 3) Remove the instrument panel. <Ref. to EI-55, REMOVAL, Instrument Panel Assembly.>
- 4) Remove the claws, and remove the passenger's airbag module.

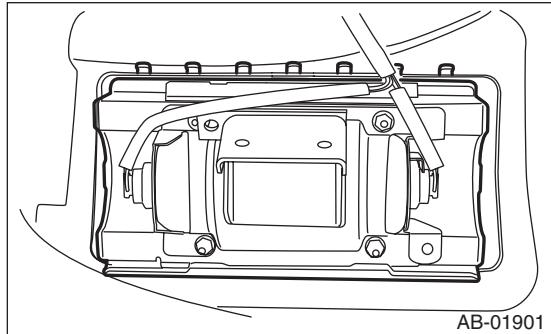

- 5) For handling of the removed airbag module, refer to "CAUTION". <Ref. to AB-5, CAUTION, General Description.>

B: INSTALLATION

CAUTION:

Do not allow harness and connectors to interfere or get tangled up with other parts.

Install each part in the reverse order of removal.

Tightening torque:

7.5 N·m (0.76 kgf·m, 5.5 ft-lb)

C: INSPECTION

CAUTION:

Refer to "CAUTION" of "General Description" before handling the airbag module. <Ref. to AB-5, CAUTION, General Description.>

Check for the following, and replace the damaged parts with new parts. <Ref. to AB-13, PASSENGER'S AIRBAG MODULE, INSPECTION, Inspection Locations after a Collision.>

- Airbag module
- Harness
- Connector
- Mounting bracket