

List of Diagnostic Trouble Code (DTC)

AIRBAG SYSTEM (DIAGNOSTICS)

13. List of Diagnostic Trouble Code (DTC)

A: LIST

DTC	Item	Content of diagnosis	Reference
11	Driver's Airbag failure	<ul style="list-style-type: none"> • Airbag main harness circuit is shorted to ground. • Airbag module harness (driver's side) circuit is shorted to ground. • Roll connector circuit is shorted to ground. • Driver's airbag module is faulty. • Airbag control module is faulty. 	<Ref. to AB(diag)-46, DTC 11 DRIVER'S AIRBAG FAILURE, Diagnostic Chart with Trouble Code.>
12	Passenger's Airbag failure	<ul style="list-style-type: none"> • Airbag main harness circuit is shorted to ground. • Airbag module harness (passenger's side) circuit is shorted to ground. • Passenger's airbag module is faulty. • Airbag control module is faulty. 	<Ref. to AB(diag)-49, DTC 12 PASSENGER'S AIRBAG FAILURE, Diagnostic Chart with Trouble Code.>
15	Driver's Airbag failure	<ul style="list-style-type: none"> • Airbag main harness circuit is shorted to power supply. • Airbag module harness circuit (driver's side) is shorted to power supply. • Roll connector is shorted to power supply. • Driver's airbag module is faulty. • Airbag control module is faulty. 	<Ref. to AB(diag)-51, DTC 15 DRIVER'S AIRBAG FAILURE, Diagnostic Chart with Trouble Code.>
16	Passenger's Airbag failure	<ul style="list-style-type: none"> • Airbag main harness circuit is shorted to power supply. • Airbag module harness (passenger's side) circuit is shorted to power supply. • Passenger's airbag module is faulty. • Airbag control module is faulty. 	<Ref. to AB(diag)-54, DTC 16 PASSENGER'S AIRBAG FAILURE, Diagnostic Chart with Trouble Code.>
1A	Driver's Airbag failure	<ul style="list-style-type: none"> • Airbag main harness circuit is shorted. • Airbag module harness (driver's side) circuit is shorted. • Roll connector circuit is shorted. • Driver's airbag module is faulty. • Airbag control module is faulty. 	<Ref. to AB(diag)-56, DTC 1A DRIVER'S AIRBAG FAILURE, Diagnostic Chart with Trouble Code.>
1B	Passenger's Airbag failure	<ul style="list-style-type: none"> • Airbag main harness circuit is shorted. • Airbag module harness circuit (passenger's side) is shorted. • Passenger's airbag module is faulty. • Airbag control module is faulty. 	<Ref. to AB(diag)-59, DTC 1B PASSENGER'S AIRBAG FAILURE, Diagnostic Chart with Trouble Code.>
1D	Driver's Airbag failure	<ul style="list-style-type: none"> • Airbag main harness circuit is open. • Airbag module harness circuit (driver's side) is open. • Roll connector circuit is open. • Driver's airbag module is faulty. • Airbag control module is faulty. 	<Ref. to AB(diag)-61, DTC 1D DRIVER'S AIRBAG FAILURE, Diagnostic Chart with Trouble Code.>
1E	Passenger's Airbag failure	<ul style="list-style-type: none"> • Airbag main harness circuit is open. • Airbag module harness circuit (passenger's side) is open. • Passenger's airbag module is faulty. • Airbag control module is faulty. 	<Ref. to AB(diag)-64, DTC 1E PASSENGER'S AIRBAG FAILURE, Diagnostic Chart with Trouble Code.>
21	Airbag ECU failure	Airbag control module is faulty.	<Ref. to AB(diag)-66, DTC 21 AIRBAG ECM FAILURE, Diagnostic Chart with Trouble Code.>
22	Front Impact Ignition	Front airbag module and seat belt pretensioner (LH/RH) are inflated.	<Ref. to AB(diag)-66, DTC 22 FRONT AIRBAG FIRING OUTPUT, Diagnostic Chart with Trouble Code.>

List of Diagnostic Trouble Code (DTC)

AIRBAG SYSTEM (DIAGNOSTICS)

DTC	Item	Content of diagnosis	Reference
26	Passenger's Airbag indicator failure	<ul style="list-style-type: none"> • Passenger's airbag indicator is faulty. • Airbag control module is faulty. • Airbag main harness circuit is open, shorted or shorted to ground. • Body harness circuit is open. 	<Ref. to AB(diag)-67, DTC 26 PASSENGER'S AIRBAG INDICATOR FAILURE, Diagnostic Chart with Trouble Code.>
27	ODS Communication error	<ul style="list-style-type: none"> • Occupant detection control module communication is faulty. • Airbag rear harness circuit is open, shorted, shorted to ground or shorted to power supply. • Occupant detection harness is faulty. • Airbag control module is faulty. • Occupant detection system is faulty. 	<Ref. to AB(diag)-69, DTC 27 ODS COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.>
29	ODS failure	<ul style="list-style-type: none"> • Occupant detection sensor is faulty. • Occupant detection control module is faulty. • Occupant detection harness is faulty. • Fuse is blown. 	<Ref. to OD(diag)-26, DTC 29 ODS FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
2A	ODS Calibration error	<ul style="list-style-type: none"> • Occupant detection control module is faulty. • Calibration of occupant detection control module is initial setting or faulty. 	<Ref. to OD(diag)-22, DTC 2A ODS CALIBRATION ERROR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
2B	ODS System wrong parts	<ul style="list-style-type: none"> • Specification of occupant detection control module is improper. • Occupant detection control module is faulty. 	<Ref. to OD(diag)-23, DTC 2B ODS SYSTEM WRONG PARTS, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
2C	Belt tension Sensor failure	<ul style="list-style-type: none"> • Passenger's seat belt tension sensor is faulty. • Airbag rear harness circuit is open or shorted. • Occupant detection system is faulty. • Occupant detection harness is faulty. 	<Ref. to OD(diag)-24, DTC 2C BELT TENSION SENSOR FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
2D	Airbag warning light circuit failure	<ul style="list-style-type: none"> • Airbag warning light is faulty. • Open or short circuit in harness between airbag control module and airbag warning light. • Poor contact of airbag main harness and instrument panel harness. • Ground circuit is faulty. • Airbag control module is faulty. 	<Ref. to AB(diag)-71, DTC 2D AIRBAG WARNING INDICATOR FAILURE, Diagnostic Chart with Trouble Code.>
33	FrontSubSensor RH failure	Front sub sensor (RH) is faulty.	<Ref. to AB(diag)-71, DTC 33 FRONT SUB SENSOR RH FAILURE, Diagnostic Chart with Trouble Code.>
34	FrontSubSensor LH failure	Front sub sensor (LH) is faulty.	<Ref. to AB(diag)-71, DTC 34 FRONT SUB SENSOR LH FAILURE, Diagnostic Chart with Trouble Code.>
37	Buckle Switch RH failure	<ul style="list-style-type: none"> • Passenger's buckle switch circuit is open, shorted or shorted to ground. • Occupant detection system is faulty. • Occupant detection harness is faulty. 	<Ref. to OD(diag)-27, DTC 37 BUCKLE SWITCH RH FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
39	Seatbelt Warning failure	<ul style="list-style-type: none"> • Airbag control module is faulty. • Body integrated unit is faulty. • Harness circuits between body integrated unit and airbag control module are open, shorted or shorted to ground. 	<Ref. to AB(diag)-72, DTC 39 SEAT BELT WARNING FAILURE, Diagnostic Chart with Trouble Code.>
3A	Front Sub Sensor RH false installation	<ul style="list-style-type: none"> • Front sensor (RH) is misinstalled. • Airbag control module is faulty. 	<Ref. to AB(diag)-74, DTC 3A FRONT SUB SENSOR RH FALSE INSTALLATION, Diagnostic Chart with Trouble Code.>

List of Diagnostic Trouble Code (DTC)

AIRBAG SYSTEM (DIAGNOSTICS)

DTC	Item	Content of diagnosis	Reference
3B	Front Sub Sensor LH false installation	<ul style="list-style-type: none"> Front sensor (LH) is misinstalled. Airbag control module is faulty. 	<Ref. to AB(diag)-74, DTC 3B FRONT SUB SENSOR LH FALSE INSTALLATION, Diagnostic Chart with Trouble Code. >
3C	Satellite Sensor Bus failure	Satellite safing sensor is faulty.	<Ref. to AB(diag)-74, DTC 3C SATELLITE SENSOR BUS FAILURE, Diagnostic Chart with Trouble Code. >
3D	Satellite Sensor false installation	<ul style="list-style-type: none"> Satellite safing sensor is misinstalled. Airbag control module is faulty. 	<Ref. to AB(diag)-74, DTC 3D SATELLITE SENSOR FALSE INSTALLATION, Diagnostic Chart with Trouble Code. >
41	Side Airbag RH failure	<ul style="list-style-type: none"> Side airbag harness (RH) circuit is shorted to ground. Side airbag module (RH) is faulty. Airbag control module is faulty. 	<Ref. to AB(diag)-75, DTC 41 SIDE AIRBAG RH FAILURE, Diagnostic Chart with Trouble Code. >
42	Side Airbag LH failure	<ul style="list-style-type: none"> Side airbag harness (LH) circuit is shorted to ground. Side airbag module (LH) is faulty. Airbag control module is faulty. 	<Ref. to AB(diag)-77, DTC 42 SIDE AIRBAG LH FAILURE, Diagnostic Chart with Trouble Code. >
45	Side Airbag RH failure	<ul style="list-style-type: none"> Side airbag harness (RH) circuit is shorted to power supply. Side airbag module (RH) is faulty. Airbag control module is faulty. 	<Ref. to AB(diag)-79, DTC 45 SIDE AIRBAG RH FAILURE, Diagnostic Chart with Trouble Code. >
46	Side Airbag LH failure	<ul style="list-style-type: none"> Side airbag harness (LH) circuit is shorted to power supply. Side airbag module (LH) is faulty. Airbag control module is faulty. 	<Ref. to AB(diag)-81, DTC 46 SIDE AIRBAG LH FAILURE, Diagnostic Chart with Trouble Code. >
4A	Side Airbag RH failure	<ul style="list-style-type: none"> Side airbag harness (RH) circuit is shorted. Side airbag module (RH) is faulty. Airbag control module is faulty. 	<Ref. to AB(diag)-83, DTC 4A SIDE AIRBAG RH FAILURE, Diagnostic Chart with Trouble Code. >
4B	Side Airbag LH failure	<ul style="list-style-type: none"> Side airbag harness (LH) circuit is shorted. Side airbag module (LH) is faulty. Airbag control module is faulty. 	<Ref. to AB(diag)-85, DTC 4B SIDE AIRBAG LH FAILURE, Diagnostic Chart with Trouble Code. >
4D	Side Airbag RH failure	<ul style="list-style-type: none"> Side airbag harness (RH) circuit is open. Side airbag module (RH) is faulty. Airbag control module is faulty. 	<Ref. to AB(diag)-87, DTC 4D SIDE AIRBAG RH FAILURE, Diagnostic Chart with Trouble Code. >
4E	Side Airbag LH failure	<ul style="list-style-type: none"> Side airbag harness (LH) circuit is open. Side airbag module (LH) is faulty. Airbag control module is faulty. 	<Ref. to AB(diag)-89, DTC 4E SIDE AIRBAG LH FAILURE, Diagnostic Chart with Trouble Code. >
53	Side Airbag Sensor RH failure	Side airbag sensor (RH) is faulty.	<Ref. to AB(diag)-91, DTC 53 SIDE AIRBAG SENSOR RH FAILURE, Diagnostic Chart with Trouble Code. >
54	Side Airbag Sensor LH failure	Side airbag sensor (LH) is faulty.	<Ref. to AB(diag)-91, DTC 54 SIDE AIRBAG SENSOR LH FAILURE, Diagnostic Chart with Trouble Code. >
55	Side Impact Ignition	<ul style="list-style-type: none"> Side airbag module and curtain airbag module are deployed. Curtain airbag module is deployed. 	<Ref. to AB(diag)-91, DTC 55 SIDE CURTAIN AIRBAG FIRING OUTPUT, Diagnostic Chart with Trouble Code. >
58	Curtain Airbag Sensor RH failure	Curtain airbag sensor (RH) is faulty.	<Ref. to AB(diag)-91, DTC 58 CURTAIN AIRBAG SENSOR RH FAILURE, Diagnostic Chart with Trouble Code. >

List of Diagnostic Trouble Code (DTC)

AIRBAG SYSTEM (DIAGNOSTICS)

DTC	Item	Content of diagnosis	Reference
59	Curtain Airbag Sensor LH failure	Curtain airbag sensor (LH) is faulty.	<Ref. to AB(diag)-91, DTC 59 CURTAIN AIRBAG SENSOR LH FAILURE, Diagnostic Chart with Trouble Code.>
5A	Side Airbag Sensor RH false installation	<ul style="list-style-type: none"> • Side airbag sensor (RH) is misinstalled. • Airbag control module is faulty. 	<Ref. to AB(diag)-92, DTC 5A SIDE AIRBAG SENSOR RH FALSE INSTALLATION, Diagnostic Chart with Trouble Code.>
5B	Side Airbag Sensor LH false installation	<ul style="list-style-type: none"> • Side airbag sensor (LH) is misinstalled. • Airbag control module is faulty. 	<Ref. to AB(diag)-92, DTC 5B SIDE AIRBAG SENSOR LH FALSE INSTALLATION, Diagnostic Chart with Trouble Code.>
5C	Curtain Airbag Sensor RH false installation	<ul style="list-style-type: none"> • Curtain airbag sensor (RH) is misinstalled. • Airbag control module is faulty. 	<Ref. to AB(diag)-92, DTC 5C CURTAIN AIRBAG SENSOR RH FALSE INSTALLATION, Diagnostic Chart with Trouble Code.>
5D	Curtain Airbag Sensor LH false installation	<ul style="list-style-type: none"> • Curtain airbag sensor (LH) is misinstalled. • Airbag control module is faulty. 	<Ref. to AB(diag)-92, DTC 5D CURTAIN AIRBAG SENSOR LH FALSE INSTALLATION, Diagnostic Chart with Trouble Code.>
61	Belt Pretensioner RH failure	<ul style="list-style-type: none"> • Seat belt pretensioner (RH) circuit is shorted to ground. • Pretensioner (RH) is faulty. • Pretensioner harness (RH) is shorted to ground. • Airbag control module is faulty. 	<Ref. to AB(diag)-93, DTC 61 BELT PRETENSIONER RH FAILURE, Diagnostic Chart with Trouble Code.>
62	Belt Pretensioner LH failure	<ul style="list-style-type: none"> • Seat belt pretensioner (LH) circuit is shorted to ground. • Pretensioner (LH) is faulty. • Pretensioner harness (LH) is shorted to ground. • Airbag control module is faulty. 	<Ref. to AB(diag)-95, DTC 62 BELT PRETENSIONER LH FAILURE, Diagnostic Chart with Trouble Code.>
65	Belt Pretensioner RH failure	<ul style="list-style-type: none"> • Seat belt pretensioner (RH) circuit is shorted to power supply. • Pretensioner (RH) is faulty. • Pretensioner harness (RH) is shorted to power supply. • Airbag control module is faulty. 	<Ref. to AB(diag)-97, DTC 65 BELT PRETENSIONER RH FAILURE, Diagnostic Chart with Trouble Code.>
66	Belt Pretensioner LH failure	<ul style="list-style-type: none"> • Seat belt pretensioner (LH) circuit is shorted to power supply. • Pretensioner (LH) is faulty. • Pretensioner harness (LH) is shorted to power supply. • Airbag control module is faulty. 	<Ref. to AB(diag)-99, DTC 66 BELT PRETENSIONER LH FAILURE, Diagnostic Chart with Trouble Code.>
6A	Belt Pretensioner RH failure	<ul style="list-style-type: none"> • Seat belt pretensioner (RH) circuit is shorted. • Pretensioner (RH) is faulty. • Pretensioner harness (RH) is shorted. • Airbag control module is faulty. 	<Ref. to AB(diag)-101, DTC 6A BELT PRETENSIONER RH FAILURE, Diagnostic Chart with Trouble Code.>
6B	Belt Pretensioner LH failure	<ul style="list-style-type: none"> • Seat belt pretensioner (LH) circuit is shorted. • Pretensioner (LH) is faulty. • Pretensioner harness (LH) is shorted. • Airbag control module is faulty. 	<Ref. to AB(diag)-103, DTC 6B BELT PRETENSIONER LH FAILURE, Diagnostic Chart with Trouble Code.>
6D	Belt Pretensioner RH failure	<ul style="list-style-type: none"> • Seat belt pretensioner (RH) circuit is open. • Pretensioner (RH) is faulty. • Pretensioner harness (RH) is open. • Airbag control module is faulty. 	<Ref. to AB(diag)-105, DTC 6D BELT PRETENSIONER RH FAILURE, Diagnostic Chart with Trouble Code.>
6E	Belt Pretensioner LH failure	<ul style="list-style-type: none"> • Seat belt pretensioner (LH) circuit is open. • Pretensioner harness (LH) is open. • Airbag control module is faulty. 	<Ref. to AB(diag)-107, DTC 6E BELT PRETENSIONER LH FAILURE, Diagnostic Chart with Trouble Code.>

List of Diagnostic Trouble Code (DTC)

AIRBAG SYSTEM (DIAGNOSTICS)

DTC	Item	Content of diagnosis	Reference
71	Driver's Airbag failure	<ul style="list-style-type: none"> • Airbag main harness circuit is shorted to ground. • Airbag module harness (driver's side) circuit is shorted to ground. • Roll connector circuit is shorted to ground. • Driver's airbag module is faulty. • Airbag control module is faulty. 	<Ref. to AB(diag)-109, DTC 71 DRIVER'S AIRBAG FAILURE, Diagnostic Chart with Trouble Code.>
72	Passenger's Airbag failure	<ul style="list-style-type: none"> • Airbag main harness circuit is shorted to ground. • Airbag module harness (passenger's side) circuit is shorted to ground. • Passenger's airbag module is faulty. • Airbag control module is faulty. 	<Ref. to AB(diag)-112, DTC 72 PASSENGER'S AIRBAG FAIL- URE, Diagnostic Chart with Trou- ble Code.>
75	Driver's Airbag failure	<ul style="list-style-type: none"> • Airbag main harness circuit is shorted to power supply. • Airbag module harness circuit (driver's side) is shorted to power supply. • Roll connector circuit is shorted to power supply. • Driver's airbag module is faulty. • Airbag control module is faulty. 	<Ref. to AB(diag)-114, DTC 75 DRIVER'S AIRBAG FAILURE, Diagnostic Chart with Trouble Code.>
76	Passenger's Airbag failure	<ul style="list-style-type: none"> • Airbag main harness circuit is shorted to power supply. • Airbag module harness (passenger's side) circuit is shorted to power supply. • Passenger's airbag module is faulty. • Airbag control module is faulty. 	<Ref. to AB(diag)-117, DTC 76 PASSENGER'S AIRBAG FAIL- URE, Diagnostic Chart with Trou- ble Code.>
7A	Driver's Airbag failure	<ul style="list-style-type: none"> • Airbag main harness circuit is shorted. • Airbag module harness (driver's side) circuit is shorted. • Roll connector circuit is shorted to power supply. • Driver's airbag module is faulty. • Airbag control module is faulty. 	<Ref. to AB(diag)-119, DTC 7A DRIVER'S AIRBAG FAILURE, Diagnostic Chart with Trouble Code.>
7B	Passenger's Airbag failure	<ul style="list-style-type: none"> • Airbag main harness circuit is shorted. • Airbag module harness circuit (passenger's side) is shorted. • Passenger's airbag module is faulty. • Airbag control module is faulty. 	<Ref. to AB(diag)-122, DTC 7B PASSENGER'S AIRBAG FAIL- URE, Diagnostic Chart with Trou- ble Code.>
7D	Driver's Airbag failure	<ul style="list-style-type: none"> • Airbag main harness circuit is open. • Airbag module harness circuit (driver's side) is open. • Roll connector circuit is open. • Driver's airbag module is faulty. • Airbag control module is faulty. 	<Ref. to AB(diag)-124, DTC 7D DRIVER'S AIRBAG FAILURE, Diagnostic Chart with Trouble Code.>
7E	Passenger's Airbag failure	<ul style="list-style-type: none"> • Airbag main harness circuit is open. • Airbag module harness circuit (passenger's side) is open. • Passenger's airbag module is faulty. • Airbag control module is faulty. 	<Ref. to AB(diag)-127, DTC 7E PASSENGER'S AIRBAG FAIL- URE, Diagnostic Chart with Trou- ble Code.>
91	Curtain Airbag RH failure	<ul style="list-style-type: none"> • Curtain airbag harness (RH) circuit is shorted to ground. • Curtain airbag module (RH) is faulty. • Airbag control module is faulty. 	<Ref. to AB(diag)-129, DTC 91 CURTAIN AIRBAG MODULE RH FAILURE, Diagnostic Chart with Trouble Code.>
92	Curtain Airbag LH failure	<ul style="list-style-type: none"> • Curtain airbag harness (LH) circuit is shorted to ground. • Curtain airbag module (LH) is faulty. • Airbag control module is faulty. 	<Ref. to AB(diag)-131, DTC 92 CURTAIN AIRBAG MODULE LH FAILURE, Diagnostic Chart with Trouble Code.>
95	Curtain Airbag RH failure	<ul style="list-style-type: none"> • Curtain airbag harness (RH) is shorted to power supply. • Curtain airbag module (RH) is faulty. • Airbag control module is faulty. 	<Ref. to AB(diag)-133, DTC 95 CURTAIN AIRBAG MODULE RH FAILURE, Diagnostic Chart with Trouble Code.>

List of Diagnostic Trouble Code (DTC)

AIRBAG SYSTEM (DIAGNOSTICS)

DTC	Item	Content of diagnosis	Reference
96	Curtain Airbag LH failure	<ul style="list-style-type: none"> • Curtain airbag harness (LH) is shorted to power supply. • Curtain airbag module (LH) is faulty. • Airbag control module is faulty. 	<Ref. to AB(diag)-135, DTC 96 CURTAIN AIRBAG MODULE LH FAILURE, Diagnostic Chart with Trouble Code.>
9A	Curtain Airbag RH failure	<ul style="list-style-type: none"> • Curtain airbag harness (RH) circuit is shorted. • Curtain airbag module (RH) is faulty. • Airbag control module is faulty. 	<Ref. to AB(diag)-137, DTC 9A CURTAIN AIRBAG MODULE RH FAILURE, Diagnostic Chart with Trouble Code.>
9B	Curtain Airbag LH failure	<ul style="list-style-type: none"> • Curtain airbag harness (LH) circuit is shorted. • Curtain airbag module (LH) is faulty. • Airbag control module is faulty. 	<Ref. to AB(diag)-139, DTC 9B CURTAIN AIRBAG MODULE LH FAILURE, Diagnostic Chart with Trouble Code.>
9D	Curtain Airbag RH failure	<ul style="list-style-type: none"> • Curtain airbag harness (RH) circuit is open. • Curtain airbag module (RH) is faulty. • Airbag control module is faulty. 	<Ref. to AB(diag)-141, DTC 9D CURTAIN AIRBAG MODULE RH FAILURE, Diagnostic Chart with Trouble Code.>
9E	Curtain Airbag LH failure	<ul style="list-style-type: none"> • Curtain airbag harness (LH) circuit is open. • Curtain airbag module (LH) is faulty. • Airbag control module is faulty. 	<Ref. to AB(diag)-143, DTC 9E CURTAIN AIRBAG MODULE LH FAILURE, Diagnostic Chart with Trouble Code.>
A1	Front sensor Bus communication error	<ul style="list-style-type: none"> • Open or short circuit in harness between airbag control module and front sub sensor. • Front sub sensor is faulty. • Airbag control module is faulty. 	<Ref. to AB(diag)-145, DTC A1 FRONT SENSOR BUS COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.>
E3 E4	Front Sensor Bus RH Communication error	<ul style="list-style-type: none"> • Open or short circuit in harness (RH) between airbag control module and front sub sensor. • Front sub sensor (RH) is faulty. • Airbag control module is faulty. 	<Ref. to AB(diag)-147, DTC E3 FRONT SENSOR BUS RH COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.> <Ref. to AB(diag)-147, DTC E4 FRONT SENSOR BUS RH COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.>
E7 E8	Front Sensor Bus LH Communication error	<ul style="list-style-type: none"> • Open or short circuit in harness (LH) between airbag control module and front sub sensor. • Front sub sensor (LH) is faulty. • Airbag control module is faulty. 	<Ref. to AB(diag)-148, DTC E7 FRONT SENSOR BUS LH COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.> <Ref. to AB(diag)-150, DTC E8 FRONT SENSOR BUS LH COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.>
E9	Side Sensor Bus RH Communication error	<ul style="list-style-type: none"> • Open or short circuit in harness (RH) between airbag control module and curtain airbag sensor. • Side airbag sensor (RH) is faulty. • Curtain airbag sensor (RH) is faulty. • Airbag control module is faulty. 	<Ref. to AB(diag)-150, DTC E9 SIDE SENSOR BUS RH COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.>
EB EC	Side Sensor Bus RH Communication error	<ul style="list-style-type: none"> • Open or short circuit in harness (RH) between airbag control module and side airbag sensor. • Side airbag sensor (RH) is faulty. • Airbag control module is faulty. 	<Ref. to AB(diag)-150, DTC EB SIDE SENSOR BUS RH COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.> <Ref. to AB(diag)-151, DTC EC SIDE SENSOR BUS RH COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.>

List of Diagnostic Trouble Code (DTC)

AIRBAG SYSTEM (DIAGNOSTICS)

DTC	Item	Content of diagnosis	Reference
ED EE	Side Sensor Bus RH Communication error	<ul style="list-style-type: none"> • Open or short circuit in harness (RH) between airbag control module and curtain airbag sensor. • Side airbag sensor (RH) is faulty. • Curtain airbag sensor (RH) is faulty. • Airbag control module is faulty. 	<Ref. to AB(diag)-153, DTC ED SIDE SENSOR BUS RH COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.> <Ref. to AB(diag)-154, DTC EE SIDE SENSOR BUS RH COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.>
F1	Side Sensor Bus LH Communication error	<ul style="list-style-type: none"> • Open or short circuit in harness (LH) between airbag control module and curtain airbag sensor. • Side airbag sensor (LH) is faulty. • Curtain airbag sensor (LH) is faulty. • Airbag control module is faulty. 	<Ref. to AB(diag)-157, DTC F1 SIDE SENSOR BUS LH COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.>
F3 F4	Side Sensor Bus LH Communication error	<ul style="list-style-type: none"> • Open or short circuit in harness (LH) between airbag control module and side airbag sensor. • Side airbag sensor (LH) is faulty. • Airbag control module is faulty. 	<Ref. to AB(diag)-157, DTC F3 SIDE SENSOR BUS LH COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.> <Ref. to AB(diag)-158, DTC F4 SIDE SENSOR BUS LH COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.>
F5 F6	Side Sensor Bus LH Communication error	<ul style="list-style-type: none"> • Open or short circuit in harness (LH) between airbag control module and curtain airbag sensor. • Side airbag sensor (LH) is faulty. • Curtain airbag sensor (LH) is faulty. • Airbag control module is faulty. 	<Ref. to AB(diag)-160, DTC F5 SIDE SENSOR BUS LH COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.> <Ref. to AB(diag)-161, DTC F6 SIDE SENSOR BUS LH COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.>
F7 F8 F9 FA	Satellite Sensor Bus Communication error	<ul style="list-style-type: none"> • Open or short circuit in harness between airbag control module and satellite safing sensor. • Satellite safing sensor is faulty. • Airbag control module is faulty. 	<Ref. to AB(diag)-164, DTC F7 SATELLITE SENSOR BUS COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.> <Ref. to AB(diag)-164, DTC F8 SATELLITE SENSOR BUS COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.> <Ref. to AB(diag)-164, DTC F9 SATELLITE SENSOR BUS COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.> <Ref. to AB(diag)-165, DTC FA SATELLITE SENSOR BUS COMMUNICATION ERROR, Diagnostic Chart with Trouble Code.>