


#### 4. Electrical Component Location

## A: LOCATION

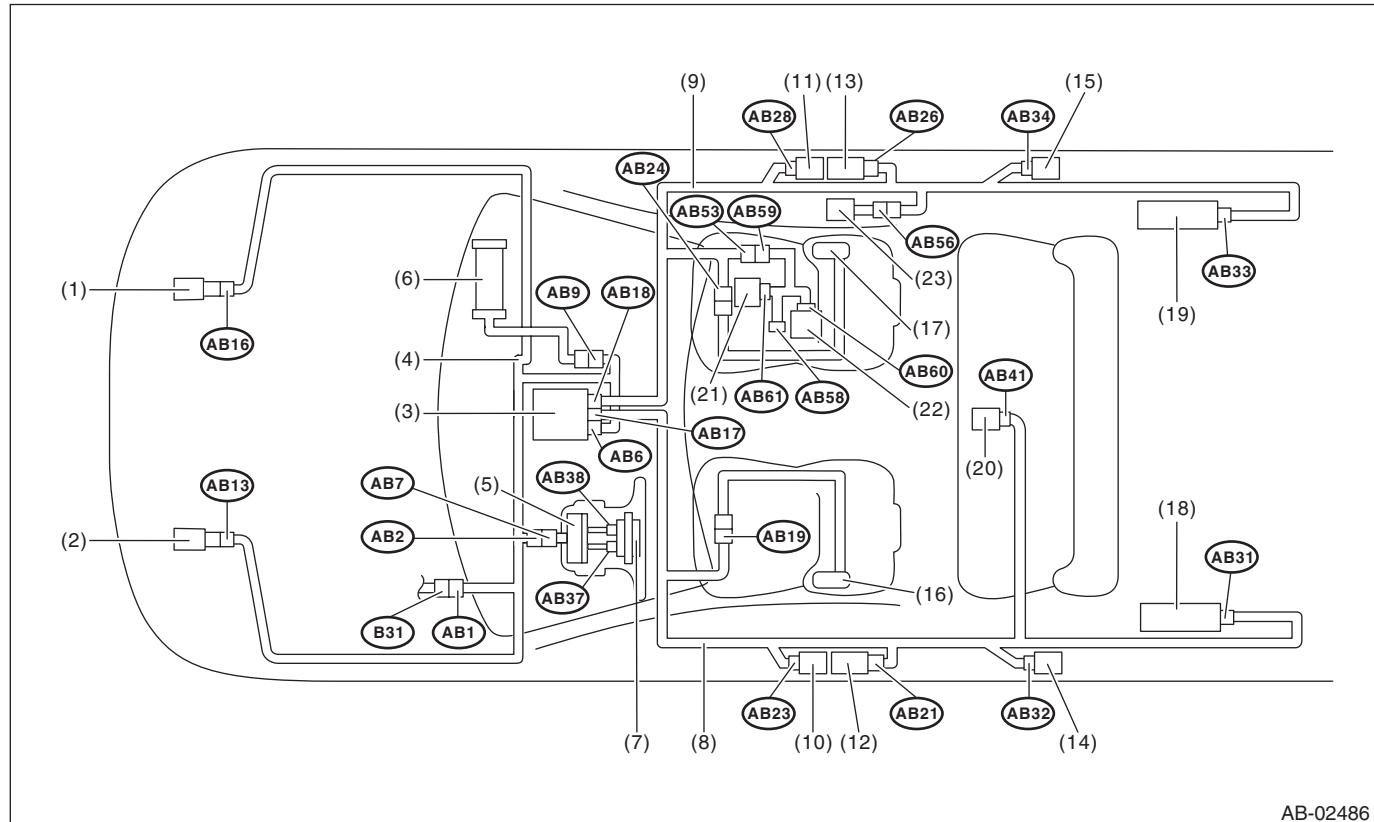

AB-02486

(1) Front sub sensor (RH)	(9) Airbag rear harness (RH)	(17) Side airbag inflator (RH)
(2) Front sub sensor (LH)	(10) Side airbag sensor (LH)	(18) Curtain airbag inflator (LH)
(3) Airbag control module	(11) Side airbag sensor (RH)	(19) Curtain airbag inflator (RH)
(4) Airbag main harness (bulkhead harness)	(12) Seat belt pretensioner (LH)	(20) Satellite safing sensor
(5) Roll connector	(13) Seat belt pretensioner (RH)	(21) Occupant detection control mod- ule
(6) Passenger's airbag inflator	(14) Curtain airbag sensor (LH)	(22) Buckle switch (RH)
(7) Driver's airbag inflator	(15) Curtain airbag sensor (RH)	(23) Belt tension sensor
(8) Airbag rear harness (LH)	(16) Side airbag inflator (LH)	

## Electrical Component Location

### AIRBAG SYSTEM (DIAGNOSTICS)

---

Connector No.	(AB1)	(AB2)	(AB6)	(AB7)	(AB9)	(AB13)	(AB16)	(AB17)	(AB18)	(AB19)	(AB21)	(AB23)
Pin	6	4	30	4	4	2	2	15	15	4	2	4
Color	White	Yellow	Black	Yellow								
Male/Female	Male	Female	Female	Male	Female							
Connector No.	(AB24)	(AB26)	(AB28)	(AB31)	(AB32)	(AB33)	(AB34)	(AB37)	(AB38)	(AB41)	(AB53)	(AB56)
Pin	4	2	4	2	4	2	4	2	2	2	6	3
Color	Yellow	Black	Yellow	Black	Yellow	Black	Yellow	Orange	Black	Yellow	Gray	Brown
Male/Female	Female											
Connector No.	(AB58)	(AB59)	(AB60)	(AB61)	(AB62)							
Pin	3	6	2	18	3							
Color	Gray	Gray	Yellow	Black	Brown							
Male/Female	Female	Female	Female	Female	Female							