

2. Horn System

A: WIRING DIAGRAM


Refer to "Horn System" in the wiring diagram. <Ref. to WI-129, WIRING DIAGRAM, Horn System.>

B: INSPECTION

Symptoms	Inspection steps
Horn does not sound	<ol style="list-style-type: none">1. Check the fuse.2. Check the horn relay.3. Check the role connector.4. Check the horn switch.5. Check the horn assembly.6. Check the harness.

1. HORN RELAY

1) Connect terminal No. 4 to the battery positive terminal and the terminal No. 3 to the battery negative terminal, and check the resistance value between the horn relay terminals.

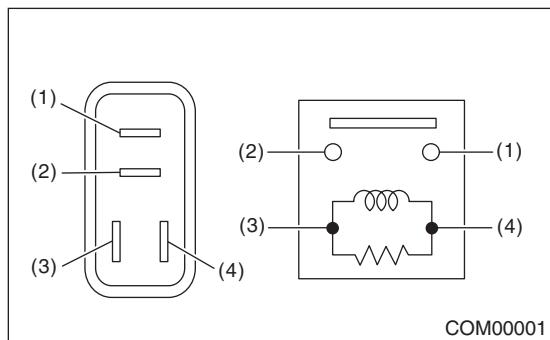

Continuity	Terminal No.	Standard value
Yes	1 and 2	Less than 1 Ω
None		1 MΩ or more

2) Replace the horn relay if the inspection result is not within the standard value.

C: NOTE

For procedure of each component in the horn system, refer to the respective section.

- Horn assembly: <Ref. to COM-4, Horn.>
- Horn switch: <Ref. to COM-5, Horn Switch.>