


## 3. Horn

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the front bumper face. <Ref. to EI-31, FRONT BUMPER FACE, REMOVAL, Front Bumper.>
- 3) Disconnect the harness connector.
- 4) Remove the horn bracket mounting bolt, and remove the horn assembly.

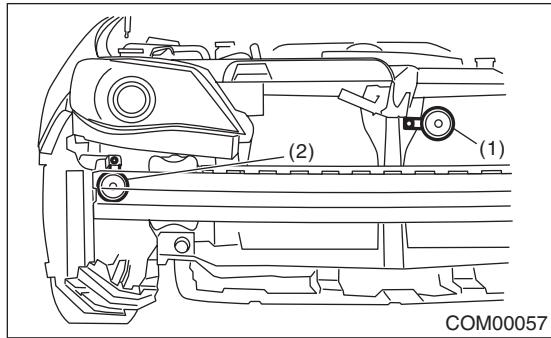

(1) Lo side horn

(2) Hi side horn

### B: INSTALLATION

- 1) Install each part in the reverse order of removal.

#### ***Tightening torque:***


***Lo side: 18 N·m (1.84 kgf·m, 13.3 ft-lb)***

***Hi side: 13 N·m (1.33 kgf·m, 9.6 ft-lb)***

- 2) Adjust the fog light beam. (Model with fog light)  
<Ref. to LI-21, FOG LIGHT AIMING, ADJUSTMENT, Front Fog Light Assembly.>

### C: INSPECTION

- 1) Remove the horn. <Ref. to COM-4, REMOVAL, Horn.>
- 2) Check the horn sounds when applying the battery voltage to the horn assembly.

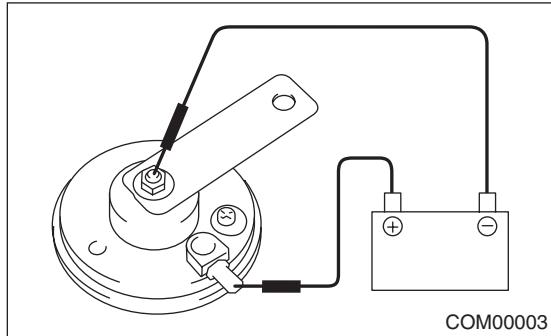

- 3) If it does not operate normally, replace the horn assembly.